

Revision A:

- MUZ-BT20/25/35/50VG - **ER1** have been added.

OBH850 is void.

OUTDOOR UNIT

SERVICE MANUAL



**No. OBH850
REVISED EDITION-A**

Models

MUZ-BT20VG - **E1**, **ER1**, **ET1**


MUZ-BT25VG - **E1**, **ER1**, **ET1**

MUZ-BT35VG - **E1**, **ER1**, **ET1**

MUZ-BT50VG - **E1**, **ER1**, **ET1**

**Indoor unit service manual
MSZ-BT·VG Series (OBH849)**

**MUZ-BT20VG
MUZ-BT25VG
MUZ-BT35VG**

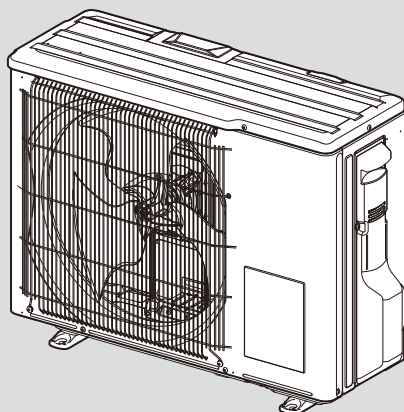

CONTENTS

1. TECHNICAL CHANGES	2
2. SERVICING PRECAUTIONS FOR UNITS USING REFRIGERANT R32.....	3
3. PART NAMES AND FUNCTIONS.....	5
4. SPECIFICATION	6
5. NOISE CRITERIA CURVES.....	8
6. OUTLINES AND DIMENSIONS	9
7. WIRING DIAGRAM.....	10
8. REFRIGERANT SYSTEM DIAGRAM	12
9. PERFORMANCE CURVES	14
10. ACTUATOR CONTROL	28
11. SERVICE FUNCTIONS	29
12. TROUBLESHOOTING.....	30
13. DISASSEMBLY INSTRUCTIONS.....	51

PARTS CATALOG (OBB850)

Revision A:

- MUZ-BT20/25/35/50VG - ☐ER1 have been added.

Use the specified refrigerant only

Never use any refrigerant other than that specified.

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.

Correct refrigerant is specified in the manuals and on the spec labels provided with our products.

We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

<Preparation before the repair service>

- Prepare the proper tools.
- Prepare the proper protectors.
- Provide adequate ventilation.
- After stopping the operation of the air conditioner, turn off the power-supply breaker and pull the power plug.
- Discharge the capacitor before the work involving the electric parts.

<Precautions during the repair service>

- Do not perform the work involving the electric parts with wet hands.
- Do not pour water into the electric parts.
- Do not touch the refrigerant.
- Do not touch the hot or cold areas in the refrigeration cycle.
- When the repair or the inspection of the circuit needs to be done without turning off the power, exercise great caution not to touch the live parts.

1

TECHNICAL CHANGES

MUZ-BT20VG - ☐E1, ☐ER1, ☐ET1

MUZ-BT25VG - ☐E1, ☐ER1, ☐ET1

MUZ-BT35VG - ☐E1, ☐ER1, ☐ET1

MUZ-BT50VG - ☐E1, ☐ER1, ☐ET1

1. New model

Servicing precautions for units using refrigerant R32



WARNING

This unit uses a flammable refrigerant.

If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire.

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater.)
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odor.
- Pipe-work shall be protected from physical damage.
- The installation of pipe-work shall be kept to a minimum.
- Compliance with national gas regulations shall be observed.
- Keep any required ventilation openings clear of obstruction.
- Servicing shall be performed only as recommended by the manufacturer.
- The appliance shall be stored so as to prevent mechanical damage from occurring.

Basic work procedures are the same as those for conventional units using refrigerant R410A. However, pay careful attention to the following points.

1. Information on servicing
 - ① Checks on the Area
Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized.
 - ② Work Procedure
Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.
 - ③ General Work Area
All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.
 - ④ Checking for Presence of Refrigerant
The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.
 - ⑤ Presence of Fire Extinguisher
If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.
 - ⑥ No Ignition Sources
No person carrying out work in relation to a refrigeration system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.
 - ⑦ Ventilated Area
Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
 - ⑧ Checks on the Refrigeration Equipment
Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.
The following checks shall be applied to installations using flammable refrigerants:
 - The charge size is in accordance with the room size within which the refrigerant containing parts are installed.
 - The ventilation machinery and outlets are operating adequately and are not obstructed.
 - If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant.
 - Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected.
 - Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being corroded.
 - ⑨ Checks on Electrical Devices
Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised. Initial safety checks shall include that:
 - capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
 - no live electrical components and wiring are exposed while charging, recovering or purging the system;
 - there is continuity of earth bonding
2. Repairs to Sealed Components
 - ① During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
 - ② Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.
Ensure that the apparatus is mounted securely.
Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications.
3. Repair to Intrinsically Safe Components
Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.
Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.
Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.
4. Cabling
Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

5. Detection of Flammable Refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

6. Leak Detection Methods

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. For appliances containing flammable refrigerants, oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

7. Removal and Evacuation

When breaking into the refrigerant circuit to make repairs - or for any other purpose conventional procedures shall be used. However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

- remove refrigerant
- purge the circuit with inert gas
- evacuate
- purge again with inert gas
- open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders. For appliances containing flammable refrigerants, the system shall be "flushed" with OFN to render the unit safe. This process may need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe-work are to take place.

Ensure that the outlet for the vacuum pump is not close to any ignition sources and that ventilation is available.

8. Charging Procedures

In addition to conventional charging procedures, the following requirements shall be followed:

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept upright.
- Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigeration system.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

9. Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.
- c) Before attempting the procedure, ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with manufacturer's instructions.
- h) Do not overfill cylinders. (no more than 80 % volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

10. Labeling

Equipment shall be labeled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing flammable refrigerants, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

11. Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely. When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labeled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.


The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.


3

PART NAMES AND FUNCTIONS


MUZ-BT20VG

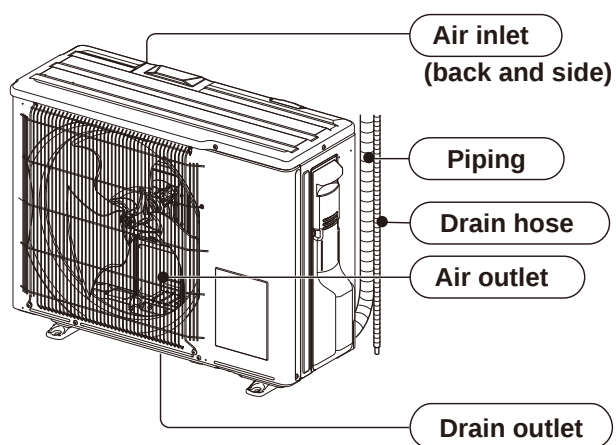

**MUZ-BT25VG
MUZ-BT35VG**

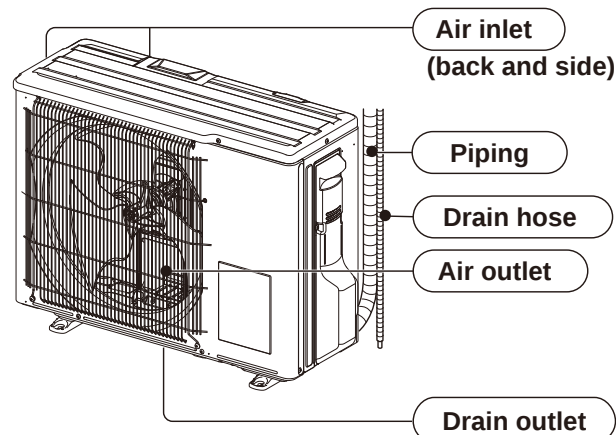

MUZ-BT50VG

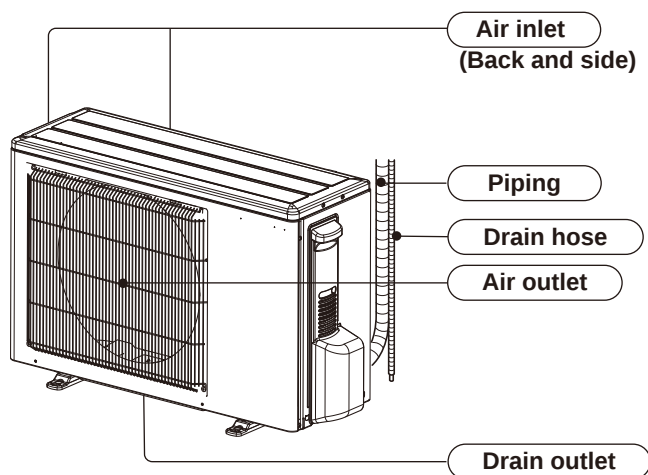

ACCESSORIES

MODELS	MUZ-BT20VG MUZ-BT25VG MUZ-BT35VG MUZ-BT50VG
Drain socket	1

Outdoor model				MUZ-BT20VG	MUZ-BT25VG	MUZ-BT35VG	MUZ-BT50VG	
Power supply				Single phase, 230 V, 50 Hz				
Capacity Rated (Min.- Max.)		Cooling	kW	2.0(0.5-2.9)	2.5(0.5-3.0)	3.5 (0.9 - 3.5)	5.0 (1.3 - 5.0)	
		Heating		2.5(0.7-3.2)	3.15(0.7-3.5)	3.6(0.9-4.1)	5.4 (1.4 - 6.5)	
Breaker Capacity			A	10			12	
Electrical data	Power input *1 (Set)		Cooling	W	450	700	1,240	2,050
			Heating	550	750	930	1,550	
	Running current *1 (Set)		Cooling	A	2.5	3.6	5.7	9.0
			Heating	3.0	3.8	4.5	6.8	
	Power factor *1 (Set)		Cooling	%	78	84	94	99
			Heating	79	85	89	99	
Starting current *1 (Set)			A	3.0	3.8	5.7	9.0	
Coefficient of performance (COP) *1 (Set)		Cooling		4.44	3.57	2.82	2.44	
		Heating		4.55	4.20	3.87	3.48	
Compressor	Model			KVB059FTMMC	KVB073FUXMC		SVB130FBBMT	
	Output		W	490	550		900	
	Current *1	Cooling	A	2.30	3.40	5.39	8.69	
		Heating	2.75	3.55	4.25	6.45		
	Refrigeration oil (Model)			L	0.27 (FW68S)			0.35 (FW68S)
Fan motor	Model			RC0J20-AB			RC0J50-NC	
	Current *1	Cooling	A	0.24	0.23		0.20	
		Heating		0.24	0.23	0.26	0.23	
Dimensions W × H × D			mm	699 × 538 × 249			800 × 550× 285	
Weight			kg	23	24		35	
Special remarks	Dehumidification		Cooling	L/h	0.1	0.3	0.8	2.0
	Air flow *1	Cooling	High	m³/h	1,818	1,932		2,058
			Low		990	1,050		906
		Heating	High		1,932	2,052		1,962
			Med.		1,680	1,788		1,686
			Low		1,260	1,350		1,260
	Sound level *1		Cooling	dB(A)	50		52	50
			Heating		50		52	51
	Fan speed	Cooling	High	rpm	840			940
			Low		480			460
		Heating	High		890			900
			Med.		780			
			Low		600			
	Fan speed regulator				3			
	Refrigerant filling capacity (R32)			kg	0.45	0.50		0.70

NOTE: Test conditions are based on ISO 5151.

Cooling: Indoor Dry-bulb temperature 27°C

Outdoor Dry-bulb temperature 35°C

Heating: Indoor Dry-bulb temperature 20°C

Outdoor Dry-bulb temperature 7°C

Refrigerant piping length (one way): 5 m

*1 Measured under rated operating frequency.

Wet-bulb temperature 19°C

Wet-bulb temperature 24°C

Wet-bulb temperature 15°C


Wet-bulb temperature 6°C

**Specifications and rated conditions of main electric parts**

Model		MUZ-BT20VG	MUZ-BT25VG	MUZ-BT35VG	MUZ-BT50VG
Item					
Smoothing capacitor	(C61)	—			600 μ F/ 620 μ F 420 V
	(C62)	800 μ F 420 V			600 μ F/ 620 μ F 420 V
	(C63)	—			600 μ F/ 620 μ F 420 V
Diode module	(DB61)	15 A 600 V			15 A 600 V
Diode module	(DB65)	25 A 600 V			
Fuse	(F61)	15A 250V			25A 250V
	(F62)	15A 250V			
	(F701, F801, F901)	T3.15AL250V			
Power module	(IC700)	15 A 600 V			20 A 600 V
	(IC932)	5 A 600 V			
Expansion valve coil	(LEV)	12 V DC			
Reactor	(L61)	18 mH			23 mH
Switch power transistor	(Q821)	30/37 A 600 V			
Current-limiting PTC thermistor	(PTC64)	—			33 Ω
	(PTC65)	33 Ω			
Terminal block	(TB1)	5 P			
Relay	(X63)	3 A 250 V			
	(X64)	20 A 250 V			
R.V.coil	(21S4)	220 - 240 V AC			


MUZ-BT20VG

FUNCTION	SPL(dB(A))	LINE
COOLING	50	● — ●
HEATING	50	□ - - □

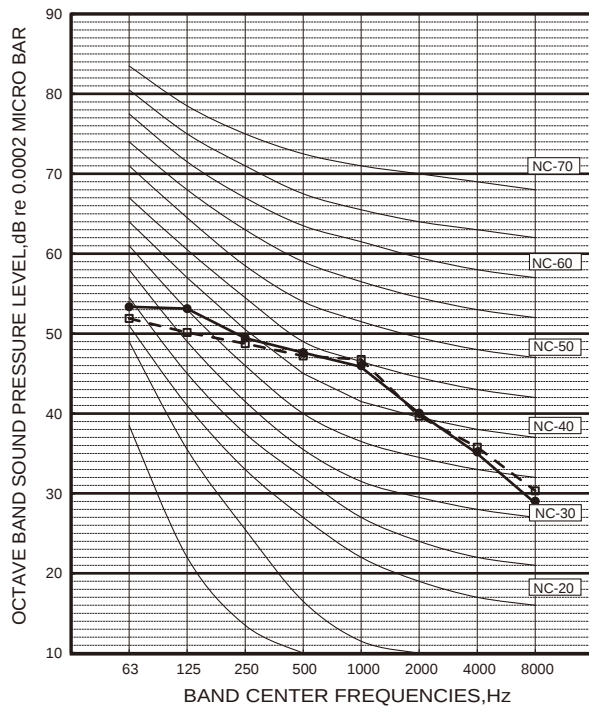


MUZ-BT25VG

FUNCTION	SPL(dB(A))	LINE
COOLING	50	● — ●
HEATING	50	□ - - □

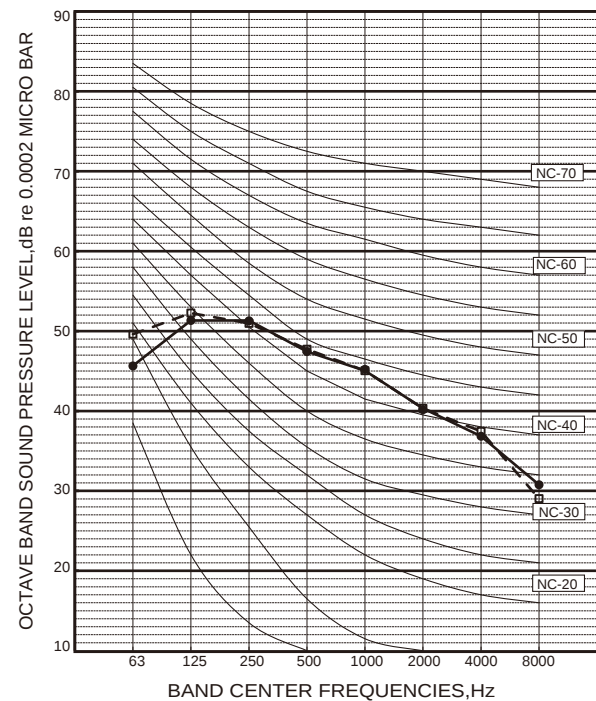


MUZ-BT35VG

FUNCTION	SPL(dB(A))	LINE
COOLING	52	● — ●
HEATING	52	□ - - □

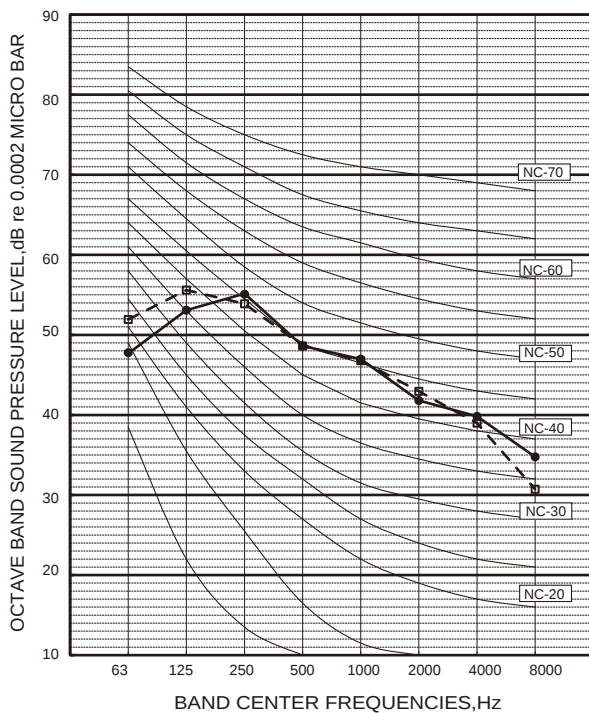


MUZ-BT50VG

FUNCTION	SPL(dB(A))	LINE
COOLING	50	● — ●
HEATING	51	□ - - □

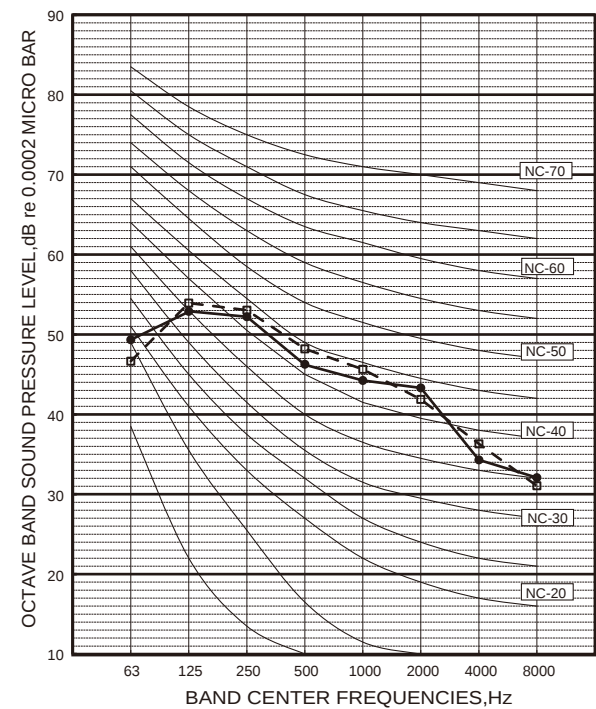

Test conditions

Cooling: Dry-bulb temperature 35°C
Wet-bulb temperature 24°C
Heating: Dry-bulb temperature 7°C
Wet-bulb temperature 6°C

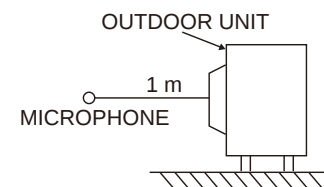

OUTLINES AND DIMENSIONS



REQUIRED SPACE

Open in principle
If there is no obstacle in front/
on both sides, ensure 100mm or more

Technical drawing of the MLU-8T25S25VG unit. The drawing includes a top view on the left and a side view on the right. The top view shows a rectangular unit with a width of 415 mm and a depth of 349.5 mm. The side view shows a unit with a height of 249.6 mm and a total length of 785 mm. Key features and dimensions are labeled:





- Top View:**
 - Width: 415 mm
 - Depth: 349.5 mm
 - Label: "Air in" with an arrow pointing to the front panel.
 - Label: "MLU-8T25S25VG only" with an arrow pointing to the front panel.
- Side View:**
 - Height: 249.6 mm
 - Total Length: 785 mm
 - Label: "Air in" with an arrow pointing to the top panel.
 - Label: "633 Drain hole" pointing to a hole on the top panel.
 - Label: "Air out" with an arrow pointing to the bottom panel.
 - Label: "2-10.3x19.3 slot" pointing to a slot on the bottom panel.
 - Label: "See page 16 for insulation 749-767" pointing to the side panel.

Technical drawing of the Mitsubishi Electric PUHZ-PN100V2000 split system indoor unit. The drawing shows a front view and a side view. The front view is a square unit with a circular grille in the center. The side view shows the unit's depth and the location of the service panel. Dimensions are provided in millimeters: overall width 699mm, overall height 538mm, grille diameter 500mm, and service panel width 121mm.

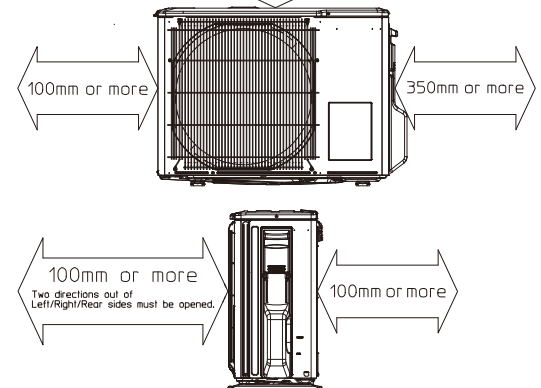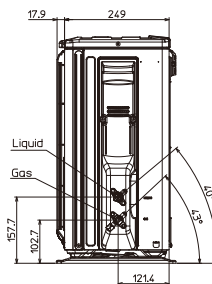


REFRIGERANT PIPE JOINT	LIQUID REFRIGERANT PIPE	FLARED 6.35(1/4")
	GAS REFRIGERANT PIPE	FLARED 9.52(3/8")


REQUIRED SPACE

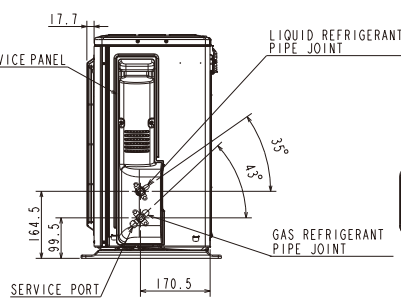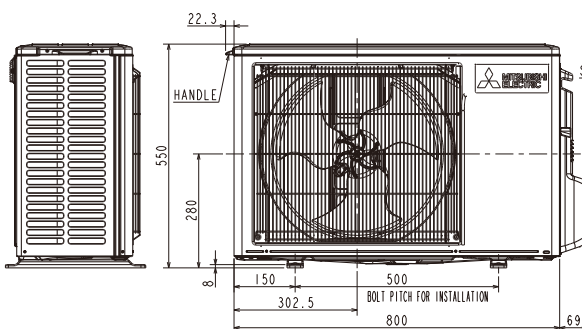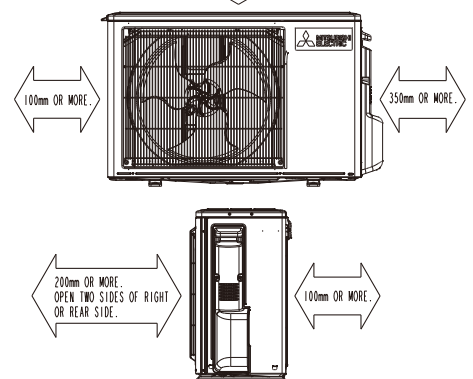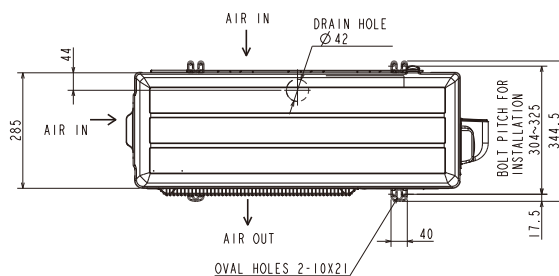

REFRIGERANT PIPE JOINT	LIQUID REFRIGERANT PIPE	FLARED 6.35(1/4")
	GAS REFRIGERANT PIPE	FLARED 12.7 (2/1")

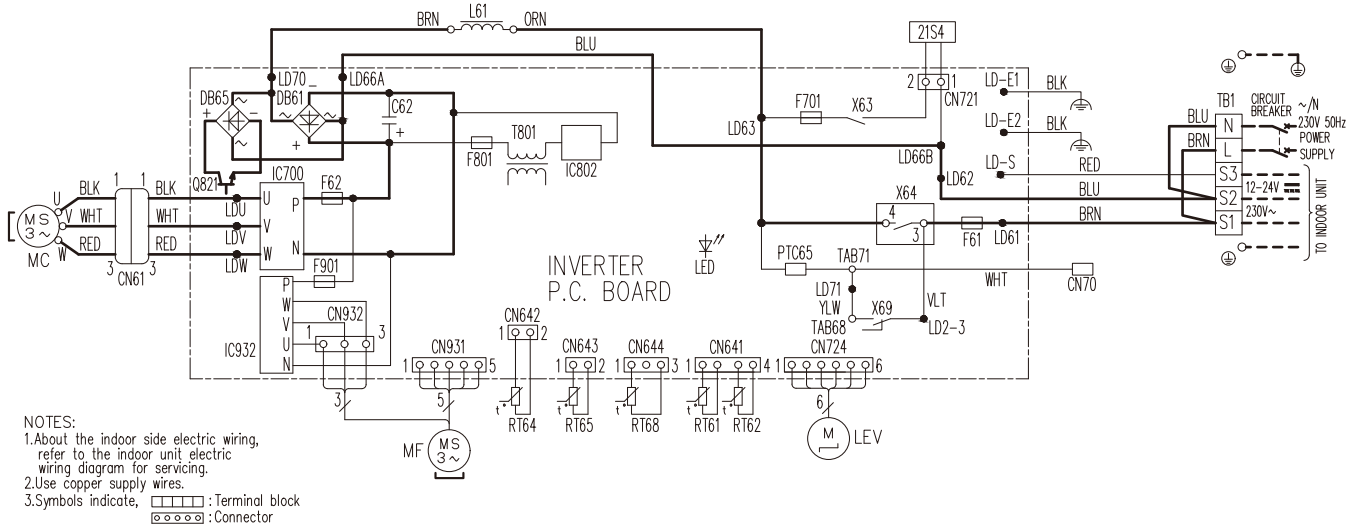
MUZ-BT20VG -[E1], [ER1] MUZ-BT25VG -[E1], [ER1] MUZ-BT35VG -[E1], [ER1]


SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CN61	CONNECTOR	LEV	EXPANSION VALVE COIL	RT64	FIN TEMP. THERMISTOR
C62	SMOOTHING CAPACITOR	L61	REACTOR	RT65	AMBIENT TEMP. THERMISTOR
DB61,DB65	DIODE MODULE	MC	COMPRESSOR	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
F61,F62	FUSE (15A 250V)	MF	FAN MOTOR	TB1	TERMINAL BLOCK
F701,F801,F901	FUSE (T3.15A 250V)	PTC65	CIRCUIT PROTECTION	T801	TRANSFORMER
IC700,IC932	POWER MODULE	Q821	SWITCHING POWER TRANSISTOR	X63,X64,X69	RELAY
IC802	POWER DEVICE	RT61	DEFROST THERMISTOR	21S4	REVERSING VALVE COIL
LED	LED	RT62	DISCHARGE TEMP. THERMISTOR		

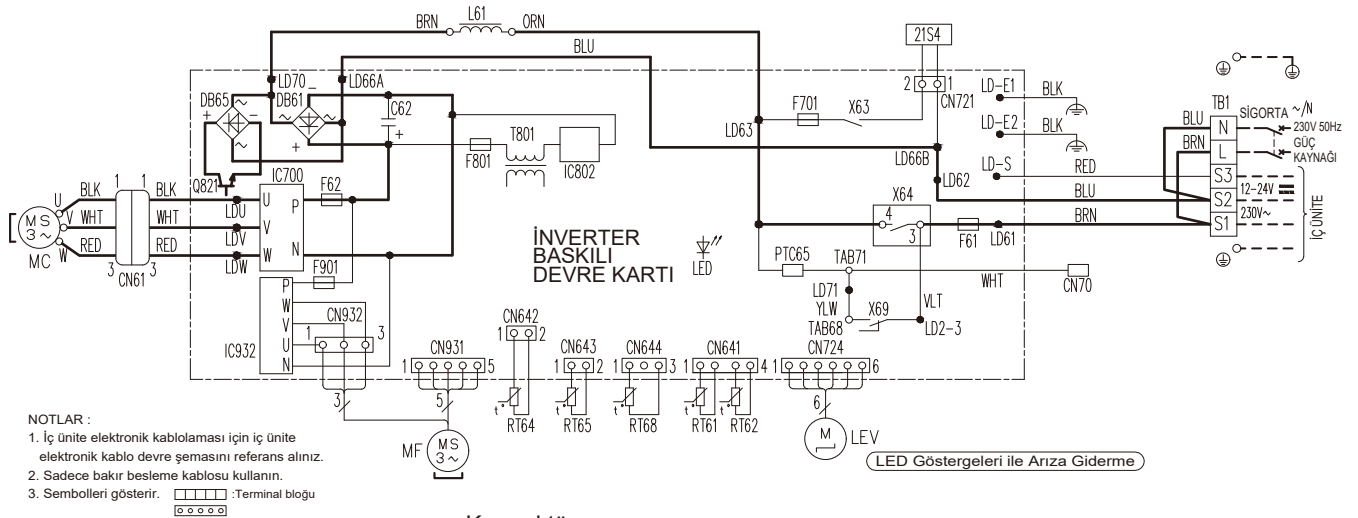MUZ-BT20VG -[ET1] MUZ-BT25VG -[ET1] MUZ-BT35VG -[ET1]


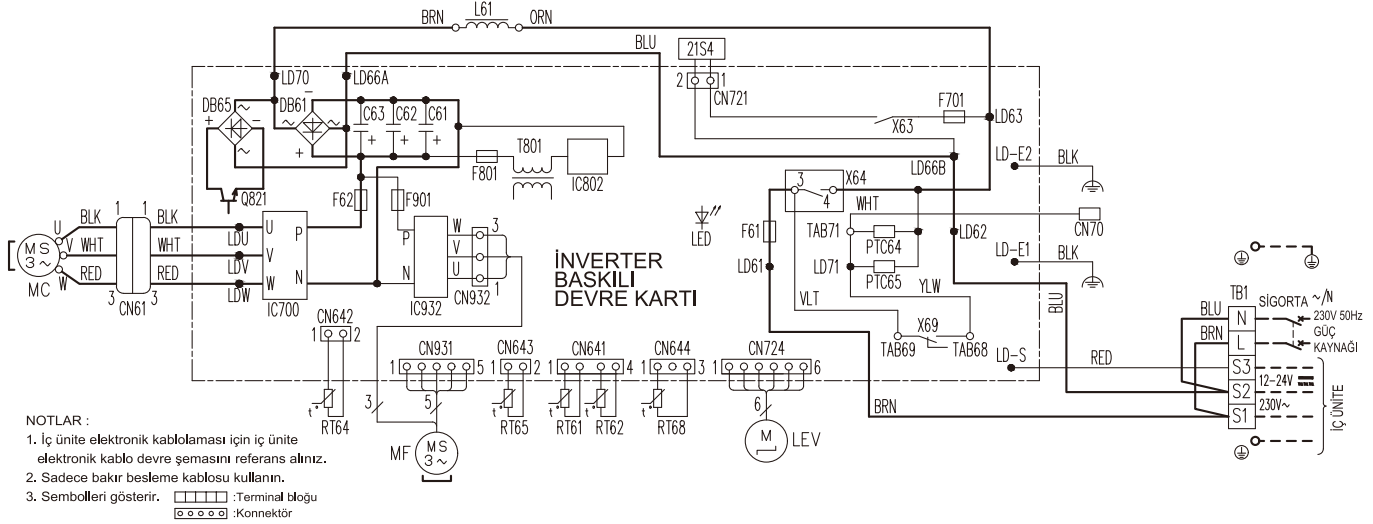
SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI
CN61	KONNEKTÖR	LEV	GENLEŞME VANASI SARGISI	RT64	FİN SICAKLIK TERMİSTÖRÜ
C62	KAPASİTÖR	L61	REAKTÖR	RT65	ORTAM SICAKLIK TERMİSTÖRÜ
DB61,DB65	DİYOT MODÜLÜ	MC	KOMPRESÖR	RT68	DIŞ ÜNİTE ŞANJÖR SICAKLIK TERMİSTÖRÜ
F61,F62	SİGORTA (15A 250V)	MF	FAN MOTORU	TB1	TERMINAL BLOĞU
F701,F801,F901	SİGORTA (T3. 15A 250V)	PTC65	DEVRE KORUMASI	T801	TRANSFORMATÖR
IC700,IC932	GÜÇ MODÜLÜ	Q821	SİVİÇLİ GÜÇ TRANSİSTÖRÜ	X63,X64,X69	RÖLE
IC802	GÜÇ CİHAZI	RT61	DEFROST TERMİSTÖRÜ	21S4	4 YOLLU VANA SARGISI
LED	LED	RT62	BASMA SICAKLIK TERMİSTÖRÜ		

MUZ-BT50VG -[E1, ER1]

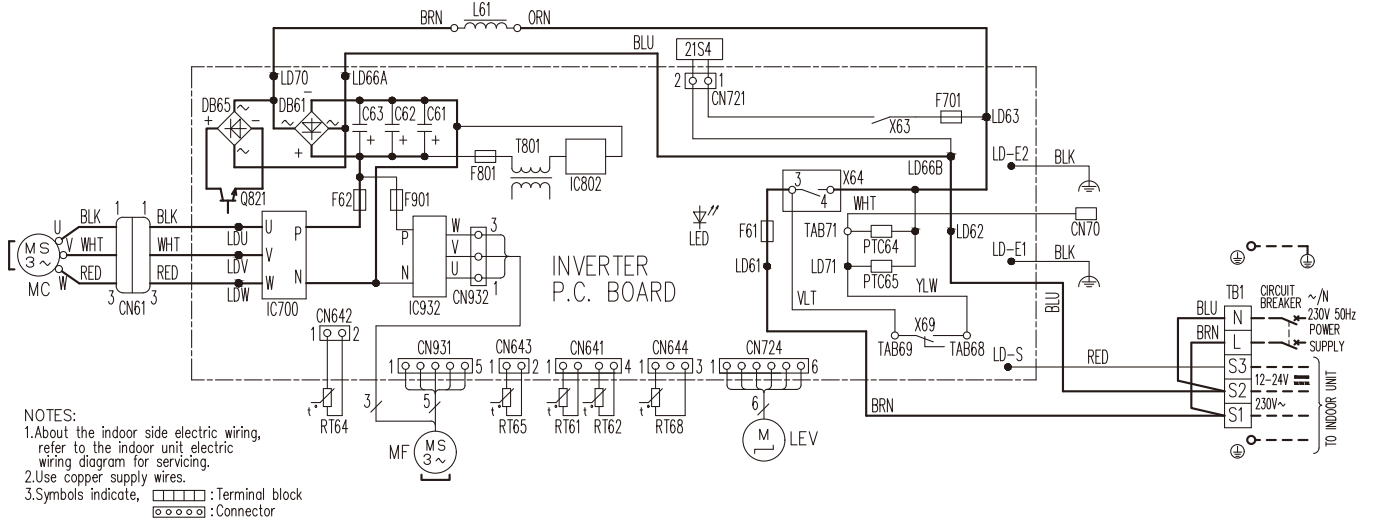

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CN61	CONNECTOR	LEV	EXPANSION VALVE COIL	RT65	AMBIENT TEMP. THERMISTOR
C61,C62,C63	SMOOTHING CAPACITOR	L61	REACTOR	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
DB61,DB65	DIODE MODULE	MC	COMPRESSOR	TB1	TERMINAL BLOCK
F61	FUSE (25A 250V)	MF	FAN MOTOR	T801	TRANSFORMER
F62	FUSE (15A 250V)	PTC64,PTC65	CIRCUIT PROTECTION	X63,X64,X69	RELAY
F701,F801,F901	FUSE (T3.15A/250V)	Q821	SWITCHING POWER TRANSISTOR	21S4	REVERSING VALVE COIL
IC700,IC932	POWER MODULE	RT61	DEFROST THERMISTOR		
IC802	POWER DEVICE	RT62	DISCHARGE TEMP. THERMISTOR		
LED	LED	RT64	FIN TEMP. THERMISTOR		


MUZ-BT50VG -[ET1]




SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI
CN61	KONNEKTÖR	LEV	GENLEŞME VANASI SARGISI	RT65	ORTAM SICAKLIK TERMİSTÖRÜ
C61,C62,C63	KAPASİTÖR	L61	REAKTÖR	RT68	DIŞ ÜNİTE EŞANJÖR SICAKLIK TERMİSTÖRÜ
DB61,DB65	DİYOT MODÜLÜ	MC	KOMPRESÖR	TB1	TERMİNAL BLOĞU
F61	SİGORTA (25A 250V)	MF	FAN MOTORU	T801	TRANSFORMATÖR
F62	SİGORTA (15A 250V)	PTC64,PTC65	DEVRE KORUMASI	X63,X64,X69	RÖLE
F701,F801,F901	SİGORTA (T3. 15A/250V)	Q821	SİVİCLİ GÜÇ TRANSİSTÖRÜ	21S4	4 YOLLU VANA SARGISI
IC700,IC932	GÜÇ MODÜLÜ	RT61	DEFROST TERMİSTÖRÜ		
IC802	GÜÇ CİHAZI	RT62	BASMA SICAKLIK TERMİSTÖRÜ		
LED	LED	RT64	FİN SICAKLIK TERMİSTÖRÜ		

MUZ-BT20VG MUZ-BT25VG MUZ-BT35VG

Unit: mm

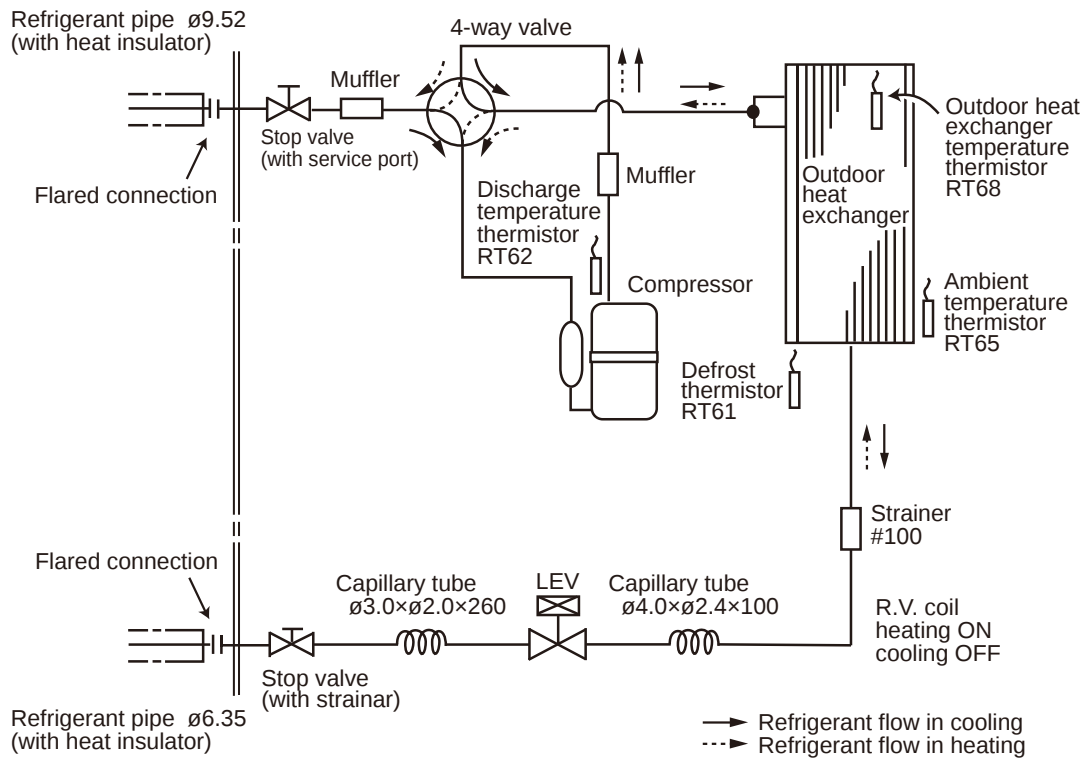


MUZ-BT50VG

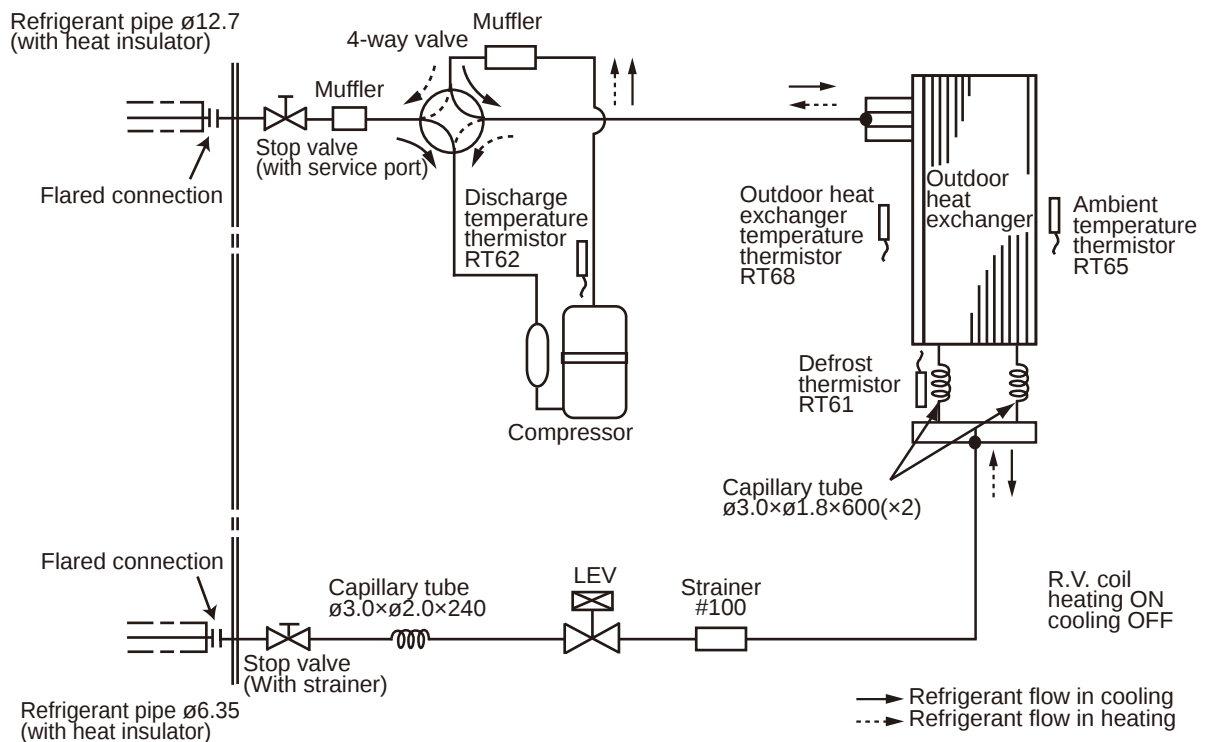

MAX. REFRIGERANT PIPING LENGTH and MAX. HEIGHT DIFFERENCE

Model	Refrigerant piping: m		Piping size O.D: mm	
	Max. Length A	Max. Height difference B	Gas	Liquid
MUZ-BT20/25/35VG	20	12	9.52	6.35
MUZ-BT50VG			12.7	

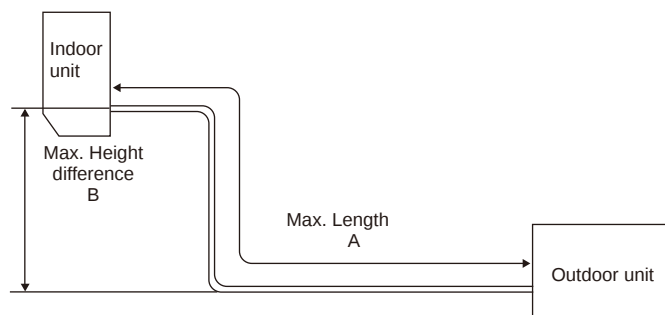

ADDITIONAL REFRIGERANT CHARGE (R32: g)

Model	Outdoor unit precharged	Refrigerant piping length (one way)									
		7 m	8 m	9 m	10 m	11 m	12 m	13 m	14 m	15 m	20 m
MUZ-BT20VG	450	0	20	40	60	80	100	120	140	160	260
MUZ-BT25VG	500										
MUZ-BT35VG	500										
MUZ-BT50VG	700										

Calculation: $X \text{ g} = 20 \text{ g/m} \times (\text{Refrigerant piping length (m)} - 7)$

NOTE: Refrigerant piping exceeding 7 m requires additional refrigerant charge according to the calculation.

MUZ-BT20VG MUZ-BT25VG MUZ-BT35VG MUZ-BT50VG

The standard specifications apply only to the operation of the air conditioner under normal conditions. Since operating conditions vary according to the areas where these units are installed, the following information has been provided to clarify the operating characteristics of the air conditioner under the conditions indicated by the performance curve.

(1) GUARANTEED VOLTAGE

198 ~ 264 V, 50 Hz

(2) AIR FLOW

Air flow should be set at MAX.




(3) MAIN READINGS




(1) Indoor intake air wet-bulb temperature:	°C [WB]	} Cooling
(2) Indoor outlet air wet-bulb temperature:	°C [WB]	
(3) Outdoor intake air dry-bulb temperature:	°C [DB]	
(4) Total input:	W	} Heating
(5) Indoor intake air dry-bulb temperature:	°C [DB]	
(6) Outdoor intake air wet-bulb temperature:	°C [WB]	
(7) Total input:	W	

Indoor air wet and dry bulb temperature difference on the left side of the following chart shows the difference between the indoor intake air wet and dry bulb temperature and the indoor outlet air wet and dry bulb temperature for your reference at service.

How to measure the indoor air wet and dry bulb temperature difference

1. Attach at least 2 sets of wet and dry bulb thermometers to the indoor air intake as shown in the figure, and at least 2 sets of wet and dry bulb thermometers to the indoor air outlet. The thermometers must be attached to the position where air speed is high.
2. Attach at least 2 sets of wet and dry bulb thermometers to the outdoor air intake.
Cover the thermometers to prevent direct rays of the sun.
3. Check that the air filter is cleaned.
4. Open windows and doors of room.
5. Press the EMERGENCY OPERATION switch once (twice) to start the EMERGENCY COOL (HEAT) MODE.
6. When system stabilizes after more than 15 minutes, measure temperature and take an average temperature.
7. 10 minutes later, measure temperature again and check that the temperature does not change.

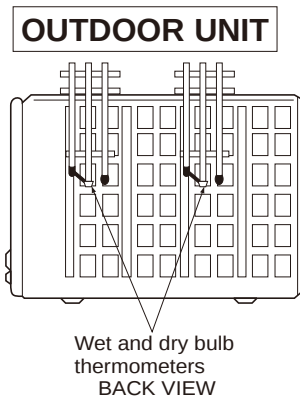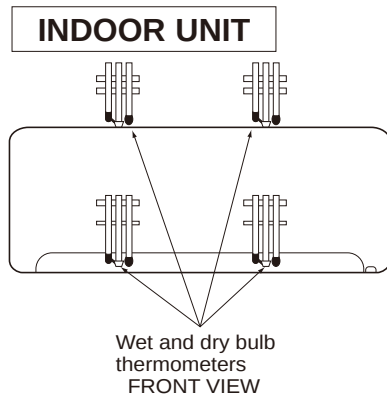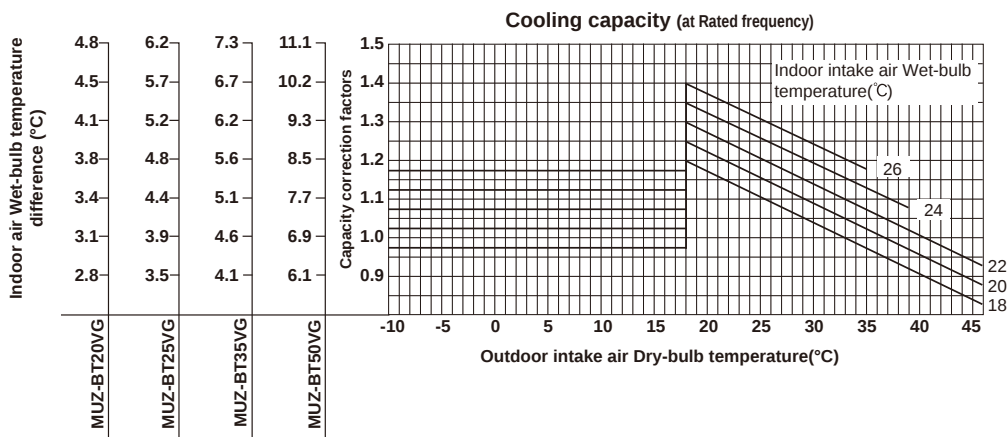
**9-1. CAPACITY AND INPUT CURVES**

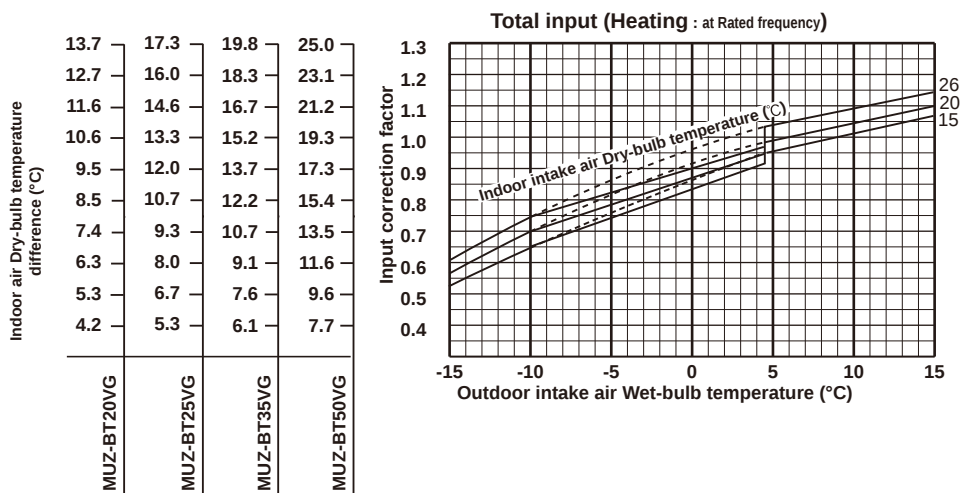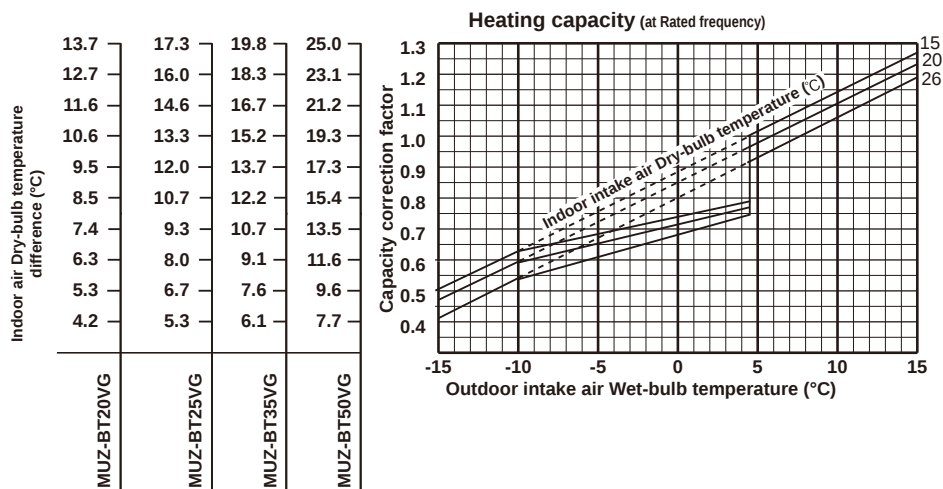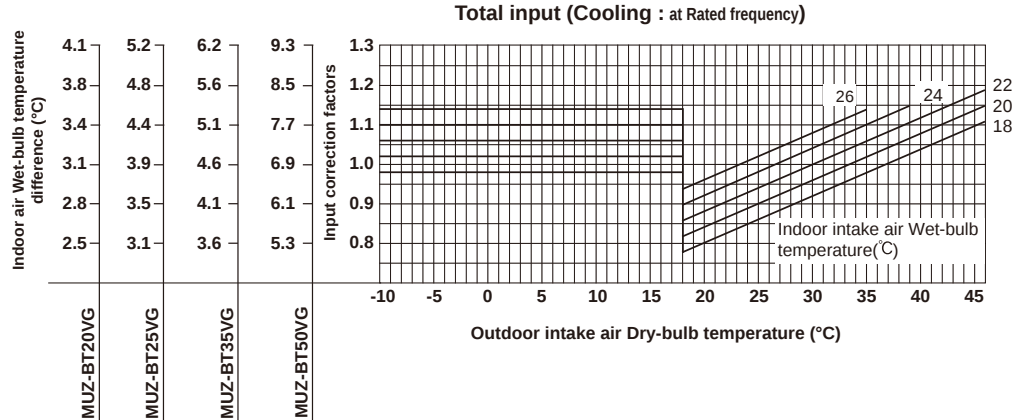


NOTE: The above broken lines are for the heating operation without any frost and defrost operation.

9-2. CAPACITY AND INPUT CORRECTION BY OPERATIONAL FREQUENCY OF COMPRESSOR


MUZ-BT20VG

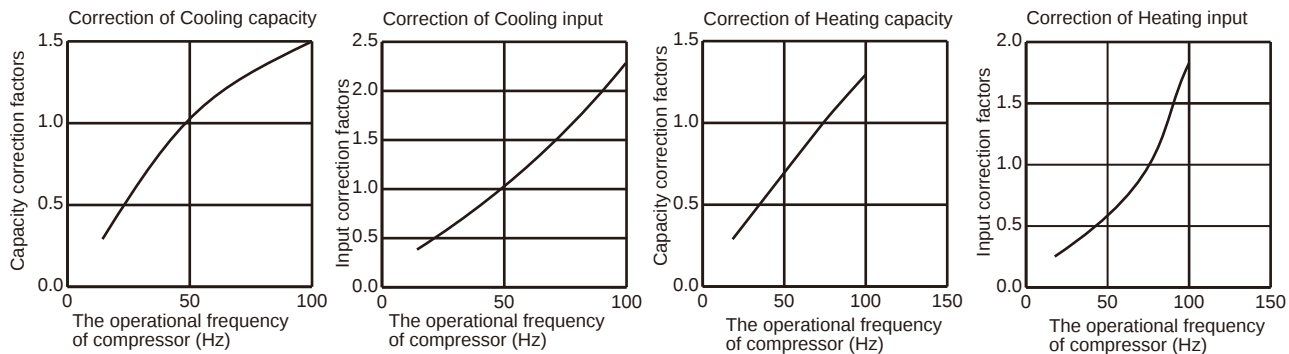


MUZ-BT25VG

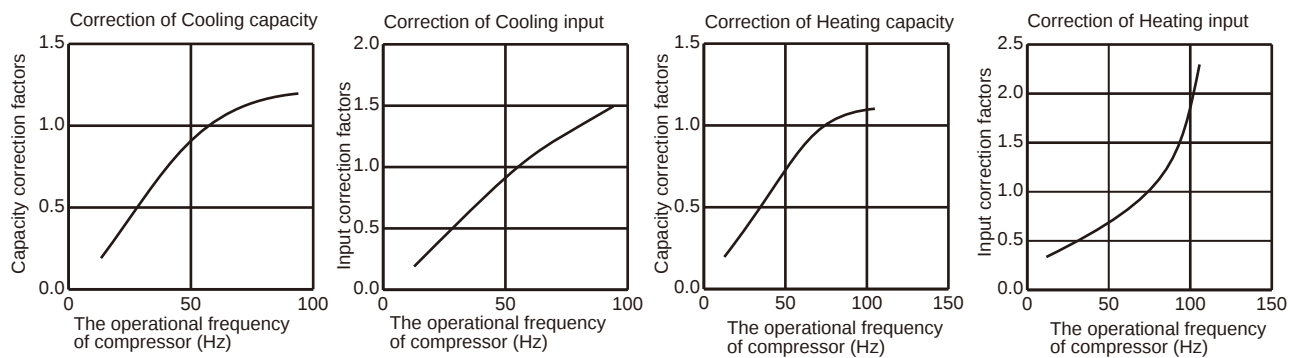

MUZ-BT35VG

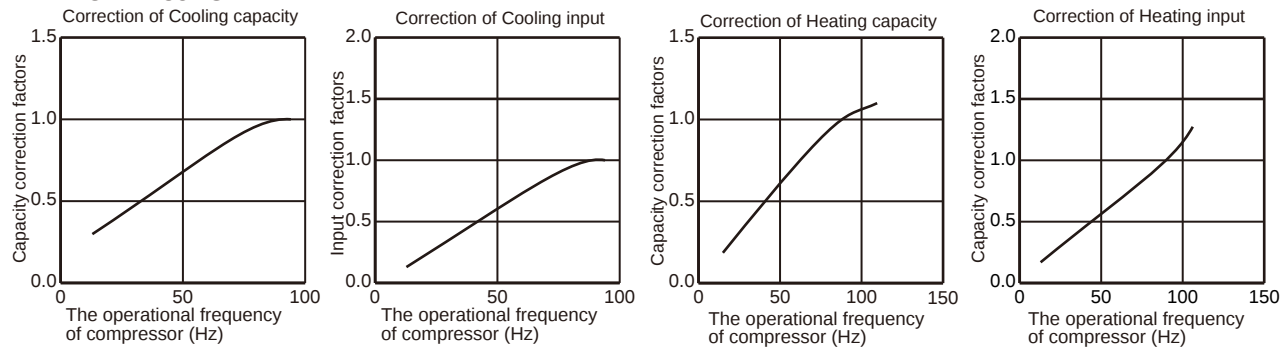

MUZ-BT50VG

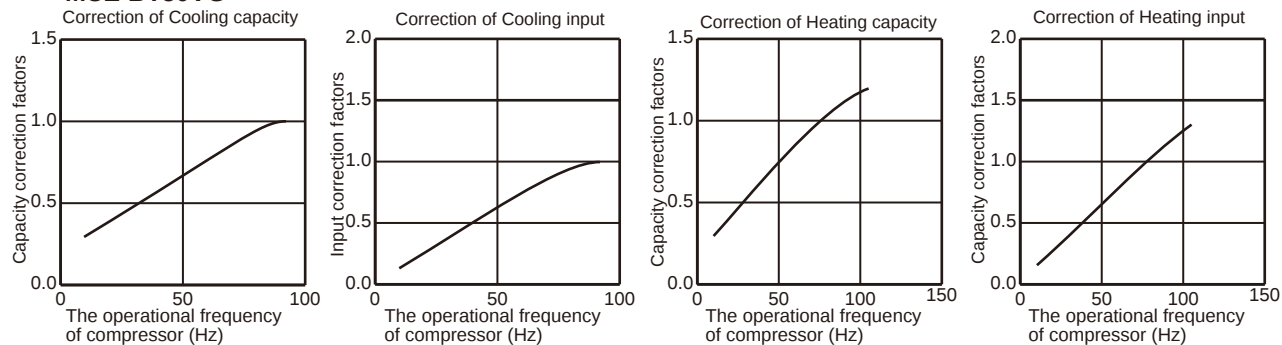

9-3. HOW TO OPERATE FIXED-FREQUENCY OPERATION

<Test run operation>

1. Press EMERGENCY OPERATION switch to start COOL or HEAT mode (COOL: Press once, HEAT: Press twice).
2. Test run operation starts and continues to operate for 30 minutes.
3. Compressor operates at rated frequency in COOL mode or 58 Hz in HEAT mode.
4. Indoor fan operates at High speed.
5. After 30 minutes, test run operation finishes and EMERGENCY OPERATION starts (operation frequency of compressor varies).
6. To cancel test run operation (EMERGENCY OPERATION), press EMERGENCY OPERATION switch or any button on remote controller.

9-4. OUTDOOR LOW PRESSURE AND OUTDOOR UNIT CURRENT


COOL operation

- ① Both indoor and outdoor unit are under the same temperature/humidity condition.
- ② Operation: TEST RUN OPERATION (Refer to 9-3.)


Dry-bulb temperature (°C)	Relative humidity (%)
20	50
25	60
30	70

Outdoor low pressure


MUZ-BT20VG

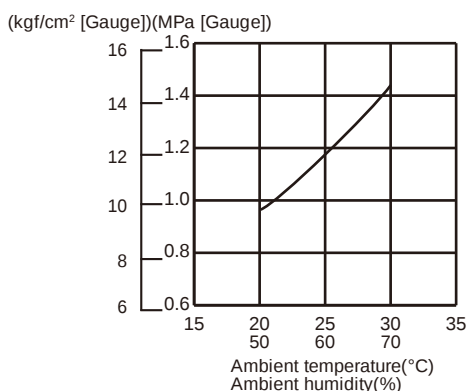


MUZ-BT25VG

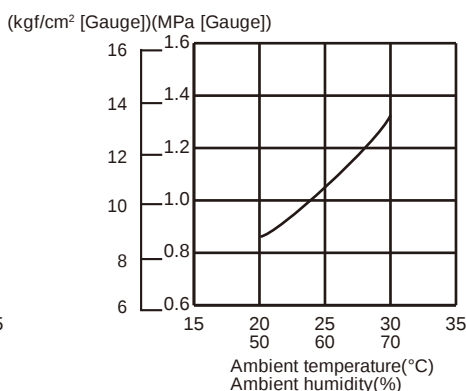

MUZ-BT35VG

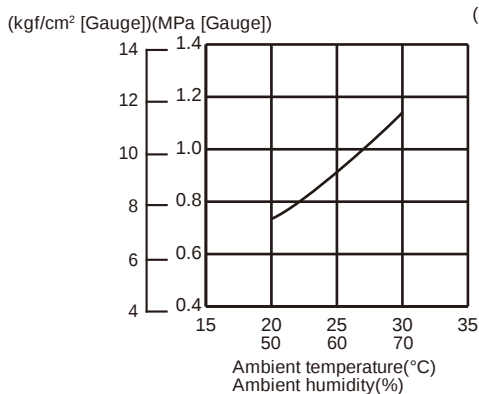

MUZ-BT50VG

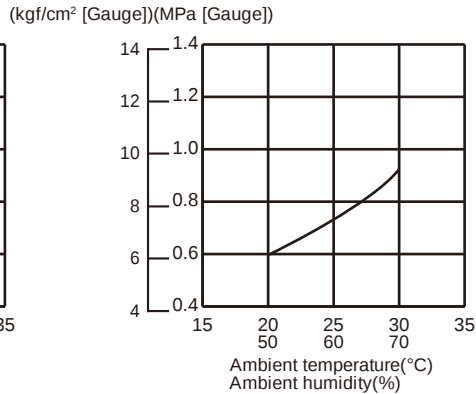


NOTE:

The unit of pressure has been changed to MPa on the international system of units (SI unit system)
The conversion factor is: **1 (MPa [Gauge]) = 10.2 (kgf/cm² [Gauge])**



Outdoor unit current

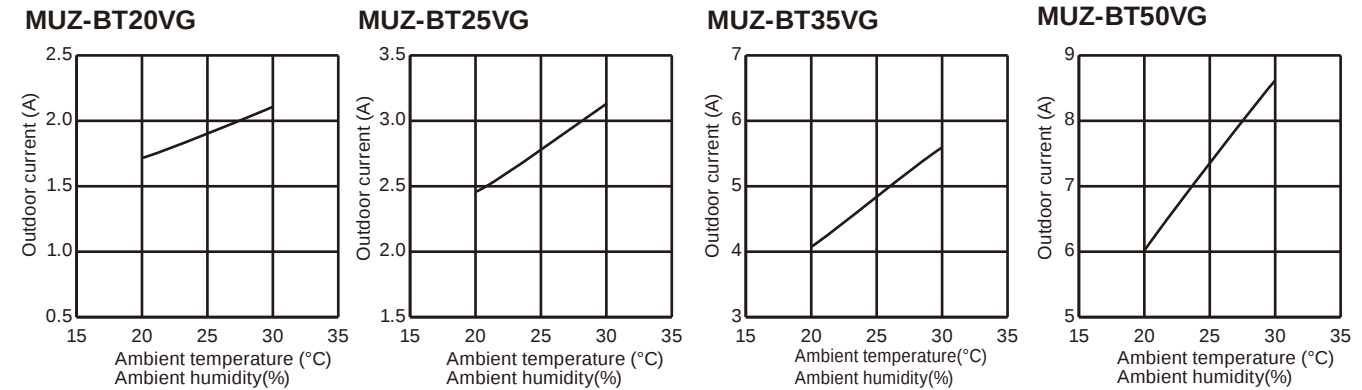


HEAT operation

① Condition:

	Indoor	Outdoor			
Dry bulb temperature (°C)	20.0	2	7	15	20.0
Wet bulb temperature (°C)	14.5	1	6	12	14.5

② Operation: Test run operation (Refer to 9-3.)

Outdoor unit current

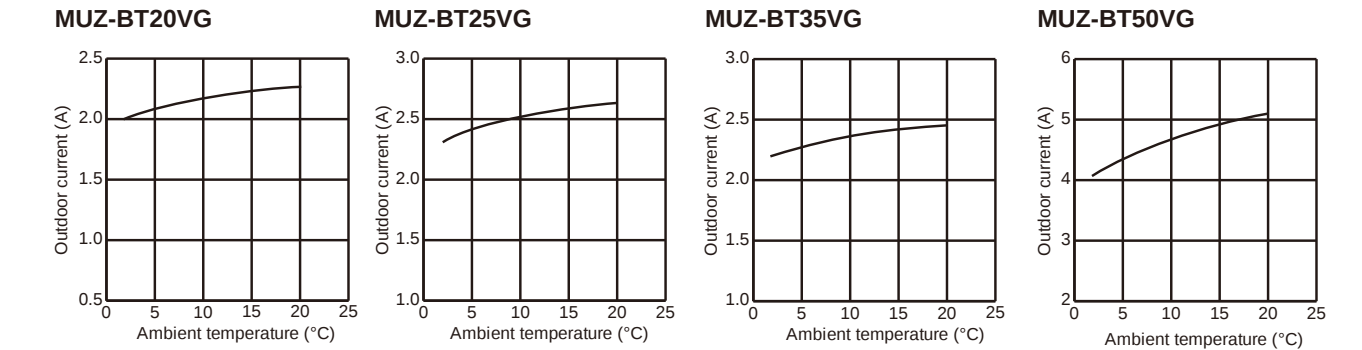

PERFORMANCE DATA COOL operation at Rated frequency

MUZ-BT20VG

CAPACITY: 2.0 kW

SHF: 0.99

INPUT: 450 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)															
		21				25				27				30			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	2.35	1.90	0.81	360	2.25	1.82	0.81	378	2.16	1.75	0.81	396	2.08	1.68	0.81	414
21	20	2.45	1.69	0.69	378	2.35	1.62	0.69	401	2.28	1.57	0.69	410	2.20	1.52	0.69	428
22	18	2.35	2.00	0.85	360	2.25	1.91	0.85	378	2.16	1.84	0.85	396	2.08	1.77	0.85	414
22	20	2.45	1.79	0.73	378	2.35	1.72	0.73	401	2.28	1.66	0.73	410	2.20	1.61	0.73	428
22	22	2.55	1.56	0.61	392	2.46	1.50	0.61	416	2.40	1.46	0.61	428	2.30	1.40	0.61	446
23	18	2.35	2.09	0.89	360	2.25	2.00	0.89	378	2.16	1.92	0.89	396	2.08	1.85	0.89	414
23	20	2.45	1.89	0.77	378	2.35	1.81	0.77	401	2.28	1.76	0.77	410	2.20	1.69	0.77	428
23	22	2.55	1.66	0.65	392	2.46	1.60	0.65	416	2.40	1.56	0.65	428	2.30	1.50	0.65	446
24	18	2.35	2.19	0.93	360	2.25	2.09	0.93	378	2.16	2.01	0.93	396	2.08	1.93	0.93	414
24	20	2.45	1.98	0.81	378	2.35	1.90	0.81	401	2.28	1.85	0.81	410	2.20	1.78	0.81	428
24	22	2.55	1.76	0.69	392	2.46	1.70	0.69	416	2.40	1.66	0.69	428	2.30	1.59	0.69	446
24	24	2.68	1.53	0.57	410	2.58	1.47	0.57	432	2.52	1.44	0.57	446	2.44	1.39	0.57	468
25	18	2.35	2.28	0.97	360	2.25	2.18	0.97	378	2.16	2.10	0.97	396	2.08	2.02	0.97	414
25	20	2.45	2.08	0.85	378	2.35	2.00	0.85	401	2.28	1.94	0.85	410	2.20	1.87	0.85	428
25	22	2.55	1.86	0.73	392	2.46	1.80	0.73	416	2.40	1.75	0.73	428	2.30	1.68	0.73	446
25	24	2.68	1.63	0.61	410	2.58	1.57	0.61	432	2.52	1.54	0.61	446	2.44	1.49	0.61	468
26	18	2.35	2.35	1.00	360	2.25	2.25	1.00	378	2.16	2.16	1.00	396	2.08	2.08	1.00	414
26	20	2.45	2.18	0.89	378	2.35	2.09	0.89	401	2.28	2.03	0.89	410	2.20	1.96	0.89	428
26	22	2.55	1.96	0.77	392	2.46	1.89	0.77	416	2.40	1.85	0.77	428	2.30	1.77	0.77	446
26	24	2.68	1.74	0.65	410	2.58	1.68	0.65	432	2.52	1.64	0.65	446	2.44	1.59	0.65	468
26	26	2.76	1.46	0.53	432	2.68	1.42	0.53	455	2.64	1.40	0.53	468	2.56	1.36	0.53	482
27	18	2.35	2.35	1.00	360	2.25	2.25	1.00	378	2.16	2.16	1.00	396	2.08	2.08	1.00	414
27	20	2.45	2.28	0.93	378	2.35	2.19	0.93	401	2.28	2.12	0.93	410	2.20	2.05	0.93	428
27	22	2.55	2.07	0.81	392	2.46	1.99	0.81	416	2.40	1.94	0.81	428	2.30	1.86	0.81	446
27	24	2.68	1.85	0.69	410	2.58	1.78	0.69	432	2.52	1.74	0.69	446	2.44	1.68	0.69	468
27	26	2.76	1.57	0.57	432	2.68	1.53	0.57	455	2.64	1.50	0.57	468	2.56	1.46	0.57	482
28	18	2.35	2.35	1.00	360	2.25	2.25	1.00	378	2.16	2.16	1.00	396	2.08	2.08	1.00	414
28	20	2.45	2.38	0.97	378	2.35	2.28	0.97	401	2.28	2.21	0.97	410	2.20	2.13	0.97	428
28	22	2.55	2.17	0.85	392	2.46	2.09	0.85	416	2.40	2.04	0.85	428	2.30	1.96	0.85	446
28	24	2.68	1.96	0.73	410	2.58	1.88	0.73	432	2.52	1.84	0.73	446	2.44	1.78	0.73	468
28	26	2.76	1.68	0.61	432	2.68	1.63	0.61	455	2.64	1.61	0.61	468	2.56	1.56	0.61	482
29	18	2.35	2.35	1.00	360	2.25	2.25	1.00	378	2.16	2.16	1.00	396	2.08	2.08	1.00	414
29	20	2.45	2.45	1.00	378	2.35	2.35	1.00	401	2.28	2.28	1.00	410	2.20	2.20	1.00	428
29	22	2.55	2.27	0.89	392	2.46	2.19	0.89	416	2.40	2.14	0.89	428	2.30	2.05	0.89	446
29	24	2.68	2.06	0.77	410	2.58	1.99	0.77	432	2.52	1.94	0.77	446	2.44	1.88	0.77	468
29	26	2.76	1.79	0.65	432	2.68	1.74	0.65	455	2.64	1.72	0.65	468	2.56	1.66	0.65	482
30	18	2.35	2.35	1.00	360	2.25	2.25	1.00	378	2.16	2.16	1.00	396	2.08	2.08	1.00	414
30	20	2.45	2.45	1.00	378	2.35	2.35	1.00	401	2.28	2.28	1.00	410	2.20	2.20	1.00	428
30	22	2.55	2.37	0.93	392	2.46	2.29	0.93	416	2.40	2.23	0.93	428	2.30	2.14	0.93	446
30	24	2.68	2.17	0.81	410	2.58	2.09	0.81	432	2.52	2.04	0.81	446	2.44	1.98	0.81	468
30	26	2.76	1.90	0.69	432	2.68	1.85	0.69	455	2.64	1.82	0.69	468	2.56	1.77	0.69	482
31	18	2.35	2.35	1.00	360	2.25	2.25	1.00	378	2.16	2.16	1.00	396	2.08	2.08	1.00	414
31	20	2.45	2.45	1.00	378	2.35	2.35	1.00	401	2.28	2.28	1.00	410	2.20	2.20	1.00	428
31	22	2.55	2.47	0.97	392	2.46	2.39	0.97	416	2.40	2.33	0.97	428	2.30	2.23	0.97	446
31	24	2.68	2.28	0.85	410	2.58	2.19	0.85	432	2.52	2.14	0.85	446	2.44	2.07	0.85	468
31	26	2.76	2.01	0.73	432	2.68	1.96	0.73	455	2.64	1.93	0.73	468	2.56	1.87	0.73	482
32	18	2.35	2.35	1.00	360	2.25	2.25	1.00	378	2.16	2.16	1.00	396	2.08	2.08	1.00	414
32	20	2.45	2.45	1.00	378	2.35	2.35	1.00	401	2.28	2.28	1.00	410	2.20	2.20	1.00	428
32	22	2.55	2.55	1.00	392	2.46	2.46	1.00	416	2.40	2.40	1.00	428	2.30	2.30	1.00	446
32	24	2.68	2.39	0.89	410	2.58	2.30	0.89	432	2.52	2.24	0.89	446	2.44	2.17	0.89	468
32	26	2.76	2.13	0.77	432	2.68	2.06	0.77	455	2.64	2.03	0.77	468	2.56	1.97	0.77	482

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation at Rated frequency

MUZ-BT20VG

CAPACITY: 2.0 kW

SHF: 0.99

INPUT: 450 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)											
		35				40				46			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	1.96	1.59	0.81	441	1.80	1.46	0.81	468	1.66	1.34	0.81	486
21	20	2.06	1.42	0.69	459	1.92	1.32	0.69	482	1.78	1.23	0.69	509
22	18	1.96	1.67	0.85	441	1.80	1.53	0.85	468	1.66	1.41	0.85	486
22	20	2.06	1.50	0.73	459	1.92	1.40	0.73	482	1.78	1.30	0.73	509
22	22	2.18	1.33	0.61	477	2.04	1.24	0.61	504	1.90	1.16	0.61	522
23	18	1.96	1.74	0.89	441	1.80	1.60	0.89	468	1.66	1.48	0.89	486
23	20	2.06	1.59	0.77	459	1.92	1.48	0.77	482	1.78	1.37	0.77	509
23	22	2.18	1.42	0.65	477	2.04	1.33	0.65	504	1.90	1.24	0.65	522
24	18	1.96	1.82	0.93	441	1.80	1.67	0.93	468	1.66	1.54	0.93	486
24	20	2.06	1.67	0.81	459	1.92	1.56	0.81	482	1.78	1.44	0.81	509
24	22	2.18	1.50	0.69	477	2.04	1.41	0.69	504	1.90	1.31	0.69	522
24	24	2.30	1.31	0.57	495	2.16	1.23	0.57	518	2.04	1.16	0.57	540
25	18	1.96	1.90	0.97	441	1.80	1.75	0.97	468	1.66	1.61	0.97	486
25	20	2.06	1.75	0.85	459	1.92	1.63	0.85	482	1.78	1.51	0.85	509
25	22	2.18	1.59	0.73	477	2.04	1.49	0.73	504	1.90	1.39	0.73	522
25	24	2.30	1.40	0.61	495	2.16	1.32	0.61	518	2.04	1.24	0.61	540
26	18	1.96	1.96	1.00	441	1.80	1.80	1.00	468	1.66	1.66	1.00	486
26	20	2.06	1.83	0.89	459	1.92	1.71	0.89	482	1.78	1.58	0.89	509
26	22	2.18	1.68	0.77	477	2.04	1.57	0.77	504	1.90	1.46	0.77	522
26	24	2.30	1.50	0.65	495	2.16	1.40	0.65	518	2.04	1.33	0.65	540
26	26	2.42	1.28	0.53	513	2.28	1.21	0.53	536	2.14	1.13	0.53	558
27	18	1.96	1.96	1.00	441	1.80	1.80	1.00	468	1.66	1.66	1.00	486
27	20	2.06	1.92	0.93	459	1.92	1.79	0.93	482	1.78	1.66	0.93	509
27	22	2.18	1.77	0.81	477	2.04	1.65	0.81	504	1.90	1.54	0.81	522
27	24	2.30	1.59	0.69	495	2.16	1.49	0.69	518	2.04	1.41	0.69	540
27	26	2.42	1.38	0.57	513	2.28	1.30	0.57	536	2.14	1.22	0.57	558
28	18	1.96	1.96	1.00	441	1.80	1.80	1.00	468	1.66	1.66	1.00	486
28	20	2.06	2.00	0.97	459	1.92	1.86	0.97	482	1.78	1.73	0.97	509
28	22	2.18	1.85	0.85	477	2.04	1.73	0.85	504	1.90	1.62	0.85	522
28	24	2.30	1.68	0.73	495	2.16	1.58	0.73	518	2.04	1.49	0.73	540
28	26	2.42	1.48	0.61	513	2.28	1.39	0.61	536	2.14	1.31	0.61	558
29	18	1.96	1.96	1.00	441	1.80	1.80	1.00	468	1.66	1.66	1.00	486
29	20	2.06	2.06	1.00	459	1.92	1.92	1.00	482	1.78	1.78	1.00	509
29	22	2.18	1.94	0.89	477	2.04	1.82	0.89	504	1.90	1.69	0.89	522
29	24	2.30	1.77	0.77	495	2.16	1.66	0.77	518	2.04	1.57	0.77	540
29	26	2.42	1.57	0.65	513	2.28	1.48	0.65	536	2.14	1.39	0.65	558
30	18	1.96	1.96	1.00	441	1.80	1.80	1.00	468	1.66	1.66	1.00	486
30	20	2.06	2.06	1.00	459	1.92	1.92	1.00	482	1.78	1.78	1.00	509
30	22	2.18	2.03	0.93	477	2.04	1.90	0.93	504	1.90	1.77	0.93	522
30	24	2.30	1.86	0.81	495	2.16	1.75	0.81	518	2.04	1.65	0.81	540
30	26	2.42	1.67	0.69	513	2.28	1.57	0.69	536	2.14	1.48	0.69	558
31	18	1.96	1.96	1.00	441	1.80	1.80	1.00	468	1.66	1.66	1.00	486
31	20	2.06	2.06	1.00	459	1.92	1.92	1.00	482	1.78	1.78	1.00	509
31	22	2.18	2.11	0.97	477	2.04	1.98	0.97	504	1.90	1.84	0.97	522
31	24	2.30	1.96	0.85	495	2.16	1.84	0.85	518	2.04	1.73	0.85	540
31	26	2.42	1.77	0.73	513	2.28	1.66	0.73	536	2.14	1.56	0.73	558
32	18	1.96	1.96	1.00	441	1.80	1.80	1.00	468	1.66	1.66	1.00	486
32	20	2.06	2.06	1.00	459	1.92	1.92	1.00	482	1.78	1.78	1.00	509
32	22	2.18	2.18	1.00	477	2.04	2.04	1.00	504	1.90	1.90	1.00	522
32	24	2.30	2.05	0.89	495	2.16	1.92	0.89	518	2.04	1.82	0.89	540
32	26	2.42	1.86	0.77	513	2.28	1.76	0.77	536	2.14	1.65	0.77	558

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation at Rated frequency

MUZ-BT25VG

CAPACITY: 2.5 kW

SHF: 0.92

INPUT: 700 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)															
		21				25				27				30			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	2.94	2.17	0.74	560	2.81	2.08	0.74	588	2.70	2.00	0.74	616	2.60	1.92	0.74	644
21	20	3.06	1.90	0.62	588	2.94	1.82	0.62	623	2.85	1.77	0.62	637	2.75	1.71	0.62	665
22	18	2.94	2.29	0.78	560	2.81	2.19	0.78	588	2.70	2.11	0.78	616	2.60	2.03	0.78	644
22	20	3.06	2.02	0.66	588	2.94	1.94	0.66	623	2.85	1.88	0.66	637	2.75	1.82	0.66	665
22	22	3.19	1.72	0.54	609	3.08	1.66	0.54	648	3.00	1.62	0.54	665	2.88	1.55	0.54	693
23	18	2.94	2.41	0.82	560	2.81	2.31	0.82	588	2.70	2.21	0.82	616	2.60	2.13	0.82	644
23	20	3.06	2.14	0.70	588	2.94	2.06	0.70	623	2.85	2.00	0.70	637	2.75	1.93	0.70	665
23	22	3.19	1.85	0.58	609	3.08	1.78	0.58	648	3.00	1.74	0.58	665	2.88	1.67	0.58	693
24	18	2.94	2.53	0.86	560	2.81	2.42	0.86	588	2.70	2.32	0.86	616	2.60	2.24	0.86	644
24	20	3.06	2.27	0.74	588	2.94	2.17	0.74	623	2.85	2.11	0.74	637	2.75	2.04	0.74	665
24	22	3.19	1.98	0.62	609	3.08	1.91	0.62	648	3.00	1.86	0.62	665	2.88	1.78	0.62	693
24	24	3.35	1.68	0.50	637	3.23	1.61	0.50	672	3.15	1.58	0.50	693	3.05	1.53	0.50	728
25	18	2.94	2.64	0.90	560	2.81	2.53	0.90	588	2.70	2.43	0.90	616	2.60	2.34	0.90	644
25	20	3.06	2.39	0.78	588	2.94	2.29	0.78	623	2.85	2.22	0.78	637	2.75	2.15	0.78	665
25	22	3.19	2.10	0.66	609	3.08	2.03	0.66	648	3.00	1.98	0.66	665	2.88	1.90	0.66	693
25	24	3.35	1.81	0.54	637	3.23	1.74	0.54	672	3.15	1.70	0.54	693	3.05	1.65	0.54	728
26	18	2.94	2.76	0.94	560	2.81	2.64	0.94	588	2.70	2.54	0.94	616	2.60	2.44	0.94	644
26	20	3.06	2.51	0.82	588	2.94	2.41	0.82	623	2.85	2.34	0.82	637	2.75	2.26	0.82	665
26	22	3.19	2.23	0.70	609	3.08	2.15	0.70	648	3.00	2.10	0.70	665	2.88	2.01	0.70	693
26	24	3.35	1.94	0.58	637	3.23	1.87	0.58	672	3.15	1.83	0.58	693	3.05	1.77	0.58	728
26	26	3.45	1.59	0.46	672	3.35	1.54	0.46	707	3.30	1.52	0.46	728	3.20	1.47	0.46	749
27	18	2.94	2.88	0.98	560	2.81	2.76	0.98	588	2.70	2.65	0.98	616	2.60	2.55	0.98	644
27	20	3.06	2.63	0.86	588	2.94	2.53	0.86	623	2.85	2.45	0.86	637	2.75	2.37	0.86	665
27	22	3.19	2.36	0.74	609	3.08	2.28	0.74	648	3.00	2.22	0.74	665	2.88	2.13	0.74	693
27	24	3.35	2.08	0.62	637	3.23	2.00	0.62	672	3.15	1.95	0.62	693	3.05	1.89	0.62	728
27	26	3.45	1.73	0.50	672	3.35	1.68	0.50	707	3.30	1.65	0.50	728	3.20	1.60	0.50	749
28	18	2.94	2.94	1.00	560	2.81	2.81	1.00	588	2.70	2.70	1.00	616	2.60	2.60	1.00	644
28	20	3.06	2.76	0.90	588	2.94	2.64	0.90	623	2.85	2.57	0.90	637	2.75	2.48	0.90	665
28	22	3.19	2.49	0.78	609	3.08	2.40	0.78	648	3.00	2.34	0.78	665	2.88	2.24	0.78	693
28	24	3.35	2.21	0.66	637	3.23	2.13	0.66	672	3.15	2.08	0.66	693	3.05	2.01	0.66	728
28	26	3.45	1.86	0.54	672	3.35	1.81	0.54	707	3.30	1.78	0.54	728	3.20	1.73	0.54	749
29	18	2.94	2.94	1.00	560	2.81	2.81	1.00	588	2.70	2.70	1.00	616	2.60	2.60	1.00	644
29	20	3.06	2.88	0.94	588	2.94	2.76	0.94	623	2.85	2.68	0.94	637	2.75	2.59	0.94	665
29	22	3.19	2.61	0.82	609	3.08	2.52	0.82	648	3.00	2.46	0.82	665	2.88	2.36	0.82	693
29	24	3.35	2.35	0.70	637	3.23	2.26	0.70	672	3.15	2.21	0.70	693	3.05	2.14	0.70	728
29	26	3.45	2.00	0.58	672	3.35	1.94	0.58	707	3.30	1.91	0.58	728	3.20	1.86	0.58	749
30	18	2.94	2.94	1.00	560	2.81	2.81	1.00	588	2.70	2.70	1.00	616	2.60	2.60	1.00	644
30	20	3.06	3.00	0.98	588	2.94	2.88	0.98	623	2.85	2.79	0.98	637	2.75	2.70	0.98	665
30	22	3.19	2.74	0.86	609	3.08	2.64	0.86	648	3.00	2.58	0.86	665	2.88	2.47	0.86	693
30	24	3.35	2.48	0.74	637	3.23	2.39	0.74	672	3.15	2.33	0.74	693	3.05	2.26	0.74	728
30	26	3.45	2.14	0.62	672	3.35	2.08	0.62	707	3.30	2.05	0.62	728	3.20	1.98	0.62	749
31	18	2.94	2.94	1.00	560	2.81	2.81	1.00	588	2.70	2.70	1.00	616	2.60	2.60	1.00	644
31	20	3.06	3.06	1.00	588	2.94	2.94	1.00	623	2.85	2.85	1.00	637	2.75	2.75	1.00	665
31	22	3.19	2.87	0.90	609	3.08	2.77	0.90	648	3.00	2.70	0.90	665	2.88	2.59	0.90	693
31	24	3.35	2.61	0.78	637	3.23	2.52	0.78	672	3.15	2.46	0.78	693	3.05	2.38	0.78	728
31	26	3.45	2.28	0.66	672	3.35	2.21	0.66	707	3.30	2.18	0.66	728	3.20	2.11	0.66	749
32	18	2.94	2.94	1.00	560	2.81	2.81	1.00	588	2.70	2.70	1.00	616	2.60	2.60	1.00	644
32	20	3.06	3.06	1.00	588	2.94	2.94	1.00	623	2.85	2.85	1.00	637	2.75	2.75	1.00	665
32	22	3.19	3.00	0.94	609	3.08	2.89	0.94	648	3.00	2.82	0.94	665	2.88	2.70	0.94	693
32	24	3.35	2.75	0.82	637	3.23	2.64	0.82	672	3.15	2.58	0.82	693	3.05	2.50	0.82	728
32	26	3.45	2.42	0.70	672	3.35	2.35	0.70	707	3.30	2.31	0.70	728	3.20	2.24	0.70	749

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature



PERFORMANCE DATA COOL operation at Rated frequency

MUZ-BT25VG

CAPACITY: 2.5 kW

SHF: 0.92

INPUT: 700 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)											
		35				40				46			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	2.45	1.81	0.74	686	2.25	1.67	0.74	728	2.08	1.54	0.74	756
21	20	2.58	1.60	0.62	714	2.40	1.49	0.62	749	2.23	1.38	0.62	791
22	18	2.45	1.91	0.78	686	2.25	1.76	0.78	728	2.08	1.62	0.78	756
22	20	2.58	1.70	0.66	714	2.40	1.58	0.66	749	2.23	1.47	0.66	791
22	22	2.73	1.47	0.54	742	2.55	1.38	0.54	784	2.38	1.28	0.54	812
23	18	2.45	2.01	0.82	686	2.25	1.85	0.82	728	2.08	1.70	0.82	756
23	20	2.58	1.80	0.70	714	2.40	1.68	0.70	749	2.23	1.56	0.70	791
23	22	2.73	1.58	0.58	742	2.55	1.48	0.58	784	2.38	1.38	0.58	812
24	18	2.45	2.11	0.86	686	2.25	1.94	0.86	728	2.08	1.78	0.86	756
24	20	2.58	1.91	0.74	714	2.40	1.78	0.74	749	2.23	1.65	0.74	791
24	22	2.73	1.69	0.62	742	2.55	1.58	0.62	784	2.38	1.47	0.62	812
24	24	2.88	1.44	0.50	770	2.70	1.35	0.50	805	2.55	1.28	0.50	840
25	18	2.45	2.21	0.90	686	2.25	2.03	0.90	728	2.08	1.87	0.9	756
25	20	2.58	2.01	0.78	714	2.40	1.87	0.78	749	2.23	1.74	0.78	791
25	22	2.73	1.80	0.66	742	2.55	1.68	0.66	784	2.38	1.57	0.66	812
25	24	2.88	1.55	0.54	770	2.70	1.46	0.54	805	2.55	1.38	0.54	840
26	18	2.45	2.30	0.94	686	2.25	2.12	0.94	728	2.08	1.95	0.94	756
26	20	2.58	2.11	0.82	714	2.40	1.97	0.82	749	2.23	1.82	0.82	791
26	22	2.73	1.91	0.70	742	2.55	1.79	0.70	784	2.38	1.66	0.70	812
26	24	2.88	1.67	0.58	770	2.70	1.57	0.58	805	2.55	1.48	0.58	840
26	26	3.03	1.39	0.46	798	2.85	1.31	0.46	833	2.68	1.23	0.46	868
27	18	2.45	2.40	0.98	686	2.25	2.21	0.98	728	2.08	2.03	0.98	756
27	20	2.58	2.21	0.86	714	2.40	2.06	0.86	749	2.23	1.91	0.86	791
27	22	2.73	2.02	0.74	742	2.55	1.89	0.74	784	2.38	1.76	0.74	812
27	24	2.88	1.78	0.62	770	2.70	1.67	0.62	805	2.55	1.58	0.62	840
27	26	3.03	1.51	0.50	798	2.85	1.43	0.50	833	2.68	1.34	0.50	868
28	18	2.45	2.45	1.00	686	2.25	2.25	1.00	728	2.08	2.08	1.00	756
28	20	2.58	2.32	0.90	714	2.40	2.16	0.90	749	2.23	2.00	0.90	791
28	22	2.73	2.13	0.78	742	2.55	1.99	0.78	784	2.38	1.85	0.78	812
28	24	2.88	1.90	0.66	770	2.70	1.78	0.66	805	2.55	1.68	0.66	840
28	26	3.03	1.63	0.54	798	2.85	1.54	0.54	833	2.68	1.44	0.54	868
29	18	2.45	2.45	1.00	686	2.25	2.25	1.00	728	2.08	2.08	1.00	756
29	20	2.58	2.42	0.94	714	2.40	2.26	0.94	749	2.23	2.09	0.94	791
29	22	2.73	2.23	0.82	742	2.55	2.09	0.82	784	2.38	1.95	0.82	812
29	24	2.88	2.01	0.70	770	2.70	1.89	0.70	805	2.55	1.79	0.70	840
29	26	3.03	1.75	0.58	798	2.85	1.65	0.58	833	2.68	1.55	0.58	868
30	18	2.45	2.45	1.00	686	2.25	2.25	1.00	728	2.08	2.08	1.00	756
30	20	2.58	2.52	0.98	714	2.40	2.35	0.98	749	2.23	2.18	0.98	791
30	22	2.73	2.34	0.86	742	2.55	2.19	0.86	784	2.38	2.04	0.86	812
30	24	2.88	2.13	0.74	770	2.70	2.00	0.74	805	2.55	1.89	0.74	840
30	26	3.03	1.88	0.62	798	2.85	1.77	0.62	833	2.68	1.66	0.62	868
31	18	2.45	2.45	1.00	686	2.25	2.25	1.00	728	2.08	2.08	1.00	756
31	20	2.58	2.58	1.00	714	2.40	2.40	1.00	749	2.23	2.23	1.00	791
31	22	2.73	2.45	0.90	742	2.55	2.30	0.90	784	2.38	2.14	0.90	812
31	24	2.88	2.24	0.78	770	2.70	2.11	0.78	805	2.55	1.99	0.78	840
31	26	3.03	2.00	0.66	798	2.85	1.88	0.66	833	2.68	1.77	0.66	868
32	18	2.45	2.45	1.00	686	2.25	2.25	1.00	728	2.08	2.08	1.00	756
32	20	2.58	2.58	1.00	714	2.40	2.40	1.00	749	2.23	2.23	1.00	791
32	22	2.73	2.56	0.94	742	2.55	2.40	0.94	784	2.38	2.23	0.94	812
32	24	2.88	2.36	0.82	770	2.70	2.21	0.82	805	2.55	2.09	0.82	840
32	26	3.03	2.12	0.70	798	2.85	2.00	0.70	833	2.68	1.87	0.70	868

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation at Rated frequency

MUZ-BT35VG

CAPACITY: 3.5 kW

SHF: 0.84

INPUT: 1240 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)															
		21				25				27				30			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	4.11	2.71	0.66	992	3.94	2.60	0.66	1042	3.78	2.49	0.66	1091	3.64	2.40	0.66	1141
21	20	4.29	2.32	0.54	1042	4.11	2.22	0.54	1104	3.99	2.15	0.54	1128	3.85	2.08	0.54	1178
22	18	4.11	2.88	0.70	992	3.94	2.76	0.70	1042	3.78	2.65	0.70	1091	3.64	2.55	0.70	1141
22	20	4.29	2.49	0.58	1042	4.11	2.39	0.58	1104	3.99	2.31	0.58	1128	3.85	2.23	0.58	1178
22	22	4.46	2.05	0.46	1079	4.31	1.98	0.46	1147	4.20	1.93	0.46	1178	4.03	1.85	0.46	1228
23	18	4.11	3.04	0.74	992	3.94	2.91	0.74	1042	3.78	2.80	0.74	1091	3.64	2.69	0.74	1141
23	20	4.29	2.66	0.62	1042	4.11	2.55	0.62	1104	3.99	2.47	0.62	1128	3.85	2.39	0.62	1178
23	22	4.46	2.23	0.50	1079	4.31	2.15	0.50	1147	4.20	2.10	0.50	1178	4.03	2.01	0.50	1228
24	18	4.11	3.21	0.78	992	3.94	3.07	0.78	1042	3.78	2.95	0.78	1091	3.64	2.84	0.78	1141
24	20	4.29	2.83	0.66	1042	4.11	2.71	0.66	1104	3.99	2.63	0.66	1128	3.85	2.54	0.66	1178
24	22	4.46	2.41	0.54	1079	4.31	2.32	0.54	1147	4.20	2.27	0.54	1178	4.03	2.17	0.54	1228
24	24	4.69	1.97	0.42	1128	4.52	1.90	0.42	1190	4.41	1.85	0.42	1228	4.27	1.79	0.42	1290
25	18	4.11	3.37	0.82	992	3.94	3.23	0.82	1042	3.78	3.10	0.82	1091	3.64	2.98	0.82	1141
25	20	4.29	3.00	0.70	1042	4.11	2.88	0.70	1104	3.99	2.79	0.70	1128	3.85	2.70	0.70	1178
25	22	4.46	2.59	0.58	1079	4.31	2.50	0.58	1147	4.20	2.44	0.58	1178	4.03	2.33	0.58	1228
25	24	4.69	2.16	0.46	1128	4.52	2.08	0.46	1190	4.41	2.03	0.46	1228	4.27	1.96	0.46	1290
26	18	4.11	3.54	0.86	992	3.94	3.39	0.86	1042	3.78	3.25	0.86	1091	3.64	3.13	0.86	1141
26	20	4.29	3.17	0.74	1042	4.11	3.04	0.74	1104	3.99	2.95	0.74	1128	3.85	2.85	0.74	1178
26	22	4.46	2.77	0.62	1079	4.31	2.67	0.62	1147	4.20	2.60	0.62	1178	4.03	2.50	0.62	1228
26	24	4.69	2.35	0.50	1128	4.52	2.26	0.50	1190	4.41	2.21	0.50	1228	4.27	2.14	0.50	1290
26	26	4.83	1.84	0.38	1190	4.69	1.78	0.38	1252	4.62	1.76	0.38	1290	4.48	1.70	0.38	1327
27	18	4.11	3.70	0.90	992	3.94	3.54	0.90	1042	3.78	3.40	0.90	1091	3.64	3.28	0.90	1141
27	20	4.29	3.34	0.78	1042	4.11	3.21	0.78	1104	3.99	3.11	0.78	1128	3.85	3.00	0.78	1178
27	22	4.46	2.95	0.66	1079	4.31	2.84	0.66	1147	4.20	2.77	0.66	1178	4.03	2.66	0.66	1228
27	24	4.69	2.53	0.54	1128	4.52	2.44	0.54	1190	4.41	2.38	0.54	1228	4.27	2.31	0.54	1290
27	26	4.83	2.03	0.42	1190	4.69	1.97	0.42	1252	4.62	1.94	0.42	1290	4.48	1.88	0.42	1327
28	18	4.11	3.87	0.94	992	3.94	3.70	0.94	1042	3.78	3.55	0.94	1091	3.64	3.42	0.94	1141
28	20	4.29	3.52	0.82	1042	4.11	3.37	0.82	1104	3.99	3.27	0.82	1128	3.85	3.16	0.82	1178
28	22	4.46	3.12	0.70	1079	4.31	3.01	0.70	1147	4.20	2.94	0.70	1178	4.03	2.82	0.70	1228
28	24	4.69	2.72	0.58	1128	4.52	2.62	0.58	1190	4.41	2.56	0.58	1228	4.27	2.48	0.58	1290
28	26	4.83	2.22	0.46	1190	4.69	2.16	0.46	1252	4.62	2.13	0.46	1290	4.48	2.06	0.46	1327
29	18	4.11	4.03	0.98	992	3.94	3.86	0.98	1042	3.78	3.70	0.98	1091	3.64	3.57	0.98	1141
29	20	4.29	3.69	0.86	1042	4.11	3.54	0.86	1104	3.99	3.43	0.86	1128	3.85	3.31	0.86	1178
29	22	4.46	3.30	0.74	1079	4.31	3.19	0.74	1147	4.20	3.11	0.74	1178	4.03	2.98	0.74	1228
29	24	4.69	2.91	0.62	1128	4.52	2.80	0.62	1190	4.41	2.73	0.62	1228	4.27	2.65	0.62	1290
29	26	4.83	2.42	0.50	1190	4.69	2.35	0.50	1252	4.62	2.31	0.50	1290	4.48	2.24	0.50	1327
30	18	4.11	4.11	1.00	992	3.94	3.94	1.00	1042	3.78	3.78	1.00	1091	3.64	3.64	1.00	1141
30	20	4.29	3.86	0.90	1042	4.11	3.70	0.90	1104	3.99	3.59	0.90	1128	3.85	3.47	0.90	1178
30	22	4.46	3.48	0.78	1079	4.31	3.36	0.78	1147	4.20	3.28	0.78	1178	4.03	3.14	0.78	1228
30	24	4.69	3.10	0.66	1128	4.52	2.98	0.66	1190	4.41	2.91	0.66	1228	4.27	2.82	0.66	1290
30	26	4.83	2.61	0.54	1190	4.69	2.53	0.54	1252	4.62	2.49	0.54	1290	4.48	2.42	0.54	1327
31	18	4.11	4.11	1.00	992	3.94	3.94	1.00	1042	3.78	3.78	1.00	1091	3.64	3.64	1.00	1141
31	20	4.29	4.03	0.94	1042	4.11	3.87	0.94	1104	3.99	3.75	0.94	1128	3.85	3.62	0.94	1178
31	22	4.46	3.66	0.82	1079	4.31	3.53	0.82	1147	4.20	3.44	0.82	1178	4.03	3.30	0.82	1228
31	24	4.69	3.28	0.70	1128	4.52	3.16	0.70	1190	4.41	3.09	0.70	1228	4.27	2.99	0.70	1290
31	26	4.83	2.80	0.58	1190	4.69	2.72	0.58	1252	4.62	2.68	0.58	1290	4.48	2.60	0.58	1327
32	18	4.11	4.11	1.00	992	3.94	3.94	1.00	1042	3.78	3.78	1.00	1091	3.64	3.64	1.00	1141
32	20	4.29	4.20	0.98	1042	4.11	4.03	0.98	1104	3.99	3.91	0.98	1128	3.85	3.77	0.98	1178
32	22	4.46	3.84	0.86	1079	4.31	3.70	0.86	1147	4.20	3.61	0.86	1178	4.03	3.46	0.86	1228
32	24	4.69	3.47	0.74	1128	4.52	3.34	0.74	1190	4.41	3.26	0.74	1228	4.27	3.16	0.74	1290
32	26	4.83	2.99	0.62	1190	4.69	2.91	0.62	1252	4.62	2.86	0.62	1290	4.48	2.78	0.62	1327

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation at Rated frequency

MUZ-BT35VG

CAPACITY: 3.5 kW

SHF: 0.84

INPUT: 1240 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)											
		35				40				46			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	3.43	2.26	0.66	1215	3.15	2.08	0.66	1290	2.91	1.92	0.66	1339
21	20	3.61	1.95	0.54	1265	3.36	1.81	0.54	1327	3.12	1.68	0.54	1401
22	18	3.43	2.40	0.70	1215	3.15	2.21	0.70	1290	2.91	2.03	0.70	1339
22	20	3.61	2.09	0.58	1265	3.36	1.95	0.58	1327	3.12	1.81	0.58	1401
22	22	3.82	1.75	0.46	1314	3.57	1.64	0.46	1389	3.33	1.53	0.46	1438
23	18	3.43	2.54	0.74	1215	3.15	2.33	0.74	1290	2.91	2.15	0.74	1339
23	20	3.61	2.24	0.62	1265	3.36	2.08	0.62	1327	3.12	1.93	0.62	1401
23	22	3.82	1.91	0.50	1314	3.57	1.79	0.50	1389	3.33	1.66	0.50	1438
24	18	3.43	2.68	0.78	1215	3.15	2.46	0.78	1290	2.91	2.27	0.78	1339
24	20	3.61	2.38	0.66	1265	3.36	2.22	0.66	1327	3.12	2.06	0.66	1401
24	22	3.82	2.06	0.54	1314	3.57	1.93	0.54	1389	3.33	1.80	0.54	1438
24	24	4.03	1.69	0.42	1364	3.78	1.59	0.42	1426	3.57	1.50	0.42	1488
25	18	3.43	2.81	0.82	1215	3.15	2.58	0.82	1290	2.91	2.38	0.82	1339
25	20	3.61	2.52	0.70	1265	3.36	2.35	0.70	1327	3.12	2.18	0.70	1401
25	22	3.82	2.21	0.58	1314	3.57	2.07	0.58	1389	3.33	1.93	0.58	1438
25	24	4.03	1.85	0.46	1364	3.78	1.74	0.46	1426	3.57	1.64	0.46	1488
26	18	3.43	2.95	0.86	1215	3.15	2.71	0.86	1290	2.91	2.50	0.86	1339
26	20	3.61	2.67	0.74	1265	3.36	2.49	0.74	1327	3.12	2.31	0.74	1401
26	22	3.82	2.37	0.62	1314	3.57	2.21	0.62	1389	3.33	2.06	0.62	1438
26	24	4.03	2.01	0.50	1364	3.78	1.89	0.50	1426	3.57	1.79	0.50	1488
26	26	4.24	1.61	0.38	1414	3.99	1.52	0.38	1476	3.75	1.42	0.38	1538
27	18	3.43	3.09	0.90	1215	3.15	2.84	0.90	1290	2.91	2.61	0.90	1339
27	20	3.61	2.81	0.78	1265	3.36	2.62	0.78	1327	3.12	2.43	0.78	1401
27	22	3.82	2.52	0.66	1314	3.57	2.36	0.66	1389	3.33	2.19	0.66	1438
27	24	4.03	2.17	0.54	1364	3.78	2.04	0.54	1426	3.57	1.93	0.54	1488
27	26	4.24	1.78	0.42	1414	3.99	1.68	0.42	1476	3.75	1.57	0.42	1538
28	18	3.43	3.22	0.94	1215	3.15	2.96	0.94	1290	2.91	2.73	0.94	1339
28	20	3.61	2.96	0.82	1265	3.36	2.76	0.82	1327	3.12	2.55	0.82	1401
28	22	3.82	2.67	0.70	1314	3.57	2.50	0.70	1389	3.33	2.33	0.70	1438
28	24	4.03	2.33	0.58	1364	3.78	2.19	0.58	1426	3.57	2.07	0.58	1488
28	26	4.24	1.95	0.46	1414	3.99	1.84	0.46	1476	3.75	1.72	0.46	1538
29	18	3.43	3.36	0.98	1215	3.15	3.09	0.98	1290	2.91	2.85	0.98	1339
29	20	3.61	3.10	0.86	1265	3.36	2.89	0.86	1327	3.12	2.68	0.86	1401
29	22	3.82	2.82	0.74	1314	3.57	2.64	0.74	1389	3.33	2.46	0.74	1438
29	24	4.03	2.50	0.62	1364	3.78	2.34	0.62	1426	3.57	2.21	0.62	1488
29	26	4.24	2.12	0.50	1414	3.99	2.00	0.50	1476	3.75	1.87	0.50	1538
30	18	3.43	3.43	1.00	1215	3.15	3.15	1.00	1290	2.91	2.91	1.00	1339
30	20	3.61	3.24	0.90	1265	3.36	3.02	0.90	1327	3.12	2.80	0.90	1401
30	22	3.82	2.98	0.78	1314	3.57	2.78	0.78	1389	3.33	2.59	0.78	1438
30	24	4.03	2.66	0.66	1364	3.78	2.49	0.66	1426	3.57	2.36	0.66	1488
30	26	4.24	2.29	0.54	1414	3.99	2.15	0.54	1476	3.75	2.02	0.54	1538
31	18	3.43	3.43	1.00	1215	3.15	3.15	1.00	1290	2.91	2.91	1.00	1339
31	20	3.61	3.39	0.94	1265	3.36	3.16	0.94	1327	3.12	2.93	0.94	1401
31	22	3.82	3.13	0.82	1314	3.57	2.93	0.82	1389	3.33	2.73	0.82	1438
31	24	4.03	2.82	0.70	1364	3.78	2.65	0.70	1426	3.57	2.50	0.70	1488
31	26	4.24	2.46	0.58	1414	3.99	2.31	0.58	1476	3.75	2.17	0.58	1538
32	18	3.43	3.43	1.00	1215	3.15	3.15	1.00	1290	2.91	2.91	1.00	1339
32	20	3.61	3.53	0.98	1265	3.36	3.29	0.98	1327	3.12	3.05	0.98	1401
32	22	3.82	3.28	0.86	1314	3.57	3.07	0.86	1389	3.33	2.86	0.86	1438
32	24	4.03	2.98	0.74	1364	3.78	2.80	0.74	1426	3.57	2.64	0.74	1488
32	26	4.24	2.63	0.62	1414	3.99	2.47	0.62	1476	3.75	2.32	0.62	1538

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation at Rated frequency

MUZ-BT50VG

CAPACITY: 5.0 kW

SHF: 0.73

INPUT: 2050 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)															
		21				25				27				30			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	5.88	3.23	0.55	1640	5.63	3.09	0.55	1722	5.40	2.97	0.55	1804	5.20	2.86	0.55	1886
21	20	6.13	2.63	0.43	1722	5.88	2.53	0.43	1825	5.70	2.45	0.43	1866	5.50	2.37	0.43	1948
22	18	5.88	3.47	0.59	1640	5.63	3.32	0.59	1722	5.40	3.19	0.59	1804	5.20	3.07	0.59	1886
22	20	6.13	2.88	0.47	1722	5.88	2.76	0.47	1825	5.70	2.68	0.47	1866	5.50	2.59	0.47	1948
22	22	6.38	2.23	0.35	1784	6.15	2.15	0.35	1896	6.00	2.10	0.35	1948	5.75	2.01	0.35	2030
23	18	5.88	3.70	0.63	1640	5.63	3.54	0.63	1722	5.40	3.40	0.63	1804	5.20	3.28	0.63	1886
23	20	6.13	3.12	0.51	1722	5.88	3.00	0.51	1825	5.70	2.91	0.51	1866	5.50	2.81	0.51	1948
23	22	6.38	2.49	0.39	1784	6.15	2.40	0.39	1896	6.00	2.34	0.39	1948	5.75	2.24	0.39	2030
24	18	5.88	3.94	0.67	1640	5.63	3.77	0.67	1722	5.40	3.62	0.67	1804	5.20	3.48	0.67	1886
24	20	6.13	3.37	0.55	1722	5.88	3.23	0.55	1825	5.70	3.14	0.55	1866	5.50	3.03	0.55	1948
24	22	6.38	2.74	0.43	1784	6.15	2.64	0.43	1896	6.00	2.58	0.43	1948	5.75	2.47	0.43	2030
24	24	6.70	2.08	0.31	1866	6.45	2.00	0.31	1968	6.30	1.95	0.31	2030	6.10	1.89	0.31	2132
25	18	5.88	4.17	0.71	1640	5.63	3.99	0.71	1722	5.40	3.83	0.71	1804	5.20	3.69	0.71	1886
25	20	6.13	3.61	0.59	1722	5.88	3.47	0.59	1825	5.70	3.36	0.59	1866	5.50	3.25	0.59	1948
25	22	6.38	3.00	0.47	1784	6.15	2.89	0.47	1896	6.00	2.82	0.47	1948	5.75	2.70	0.47	2030
25	24	6.70	2.35	0.35	1866	6.45	2.26	0.35	1968	6.30	2.21	0.35	2030	6.10	2.14	0.35	2132
26	18	5.88	4.41	0.75	1640	5.63	4.22	0.75	1722	5.40	4.05	0.75	1804	5.20	3.90	0.75	1886
26	20	6.13	3.86	0.63	1722	5.88	3.70	0.63	1825	5.70	3.59	0.63	1866	5.50	3.47	0.63	1948
26	22	6.38	3.25	0.51	1784	6.15	3.14	0.51	1896	6.00	3.06	0.51	1948	5.75	2.93	0.51	2030
26	24	6.70	2.61	0.39	1866	6.45	2.52	0.39	1968	6.30	2.46	0.39	2030	6.10	2.38	0.39	2132
26	26	6.90	1.86	0.27	1968	6.70	1.81	0.27	2071	6.60	1.78	0.27	2132	6.40	1.73	0.27	2194
27	18	5.88	4.64	0.79	1640	5.63	4.44	0.79	1722	5.40	4.27	0.79	1804	5.20	4.11	0.79	1886
27	20	6.13	4.10	0.67	1722	5.88	3.94	0.67	1825	5.70	3.82	0.67	1866	5.50	3.69	0.67	1948
27	22	6.38	3.51	0.55	1784	6.15	3.38	0.55	1896	6.00	3.30	0.55	1948	5.75	3.16	0.55	2030
27	24	6.70	2.88	0.43	1866	6.45	2.77	0.43	1968	6.30	2.71	0.43	2030	6.10	2.62	0.43	2132
27	26	6.90	2.14	0.31	1968	6.70	2.08	0.31	2071	6.60	2.05	0.31	2132	6.40	1.98	0.31	2194
28	18	5.88	4.88	0.83	1640	5.63	4.67	0.83	1722	5.40	4.48	0.83	1804	5.20	4.32	0.83	1886
28	20	6.13	4.35	0.71	1722	5.88	4.17	0.71	1825	5.70	4.05	0.71	1866	5.50	3.91	0.71	1948
28	22	6.38	3.76	0.59	1784	6.15	3.63	0.59	1896	6.00	3.54	0.59	1948	5.75	3.39	0.59	2030
28	24	6.70	3.15	0.47	1866	6.45	3.03	0.47	1968	6.30	2.96	0.47	2030	6.10	2.87	0.47	2132
28	26	6.90	2.42	0.35	1968	6.70	2.35	0.35	2071	6.60	2.31	0.35	2132	6.40	2.24	0.35	2194
29	18	5.88	5.11	0.87	1640	5.63	4.89	0.87	1722	5.40	4.70	0.87	1804	5.20	4.52	0.87	1886
29	20	6.13	4.59	0.75	1722	5.88	4.41	0.75	1825	5.70	4.28	0.75	1866	5.50	4.13	0.75	1948
29	22	6.38	4.02	0.63	1784	6.15	3.87	0.63	1896	6.00	3.78	0.63	1948	5.75	3.62	0.63	2030
29	24	6.70	3.42	0.51	1866	6.45	3.29	0.51	1968	6.30	3.21	0.51	2030	6.10	3.11	0.51	2132
29	26	6.90	2.69	0.39	1968	6.70	2.61	0.39	2071	6.60	2.57	0.39	2132	6.40	2.50	0.39	2194
30	18	5.88	5.35	0.91	1640	5.63	5.12	0.91	1722	5.40	4.91	0.91	1804	5.20	4.73	0.91	1886
30	20	6.13	4.84	0.79	1722	5.88	4.64	0.79	1825	5.70	4.50	0.79	1866	5.50	4.35	0.79	1948
30	22	6.38	4.27	0.67	1784	6.15	4.12	0.67	1896	6.00	4.02	0.67	1948	5.75	3.85	0.67	2030
30	24	6.70	3.69	0.55	1866	6.45	3.55	0.55	1968	6.30	3.47	0.55	2030	6.10	3.36	0.55	2132
30	26	6.90	2.97	0.43	1968	6.70	2.88	0.43	2071	6.60	2.84	0.43	2132	6.40	2.75	0.43	2194
31	18	5.88	5.58	0.95	1640	5.63	5.34	0.95	1722	5.40	5.13	0.95	1804	5.20	4.94	0.95	1886
31	20	6.13	5.08	0.83	1722	5.88	4.88	0.83	1825	5.70	4.73	0.83	1866	5.50	4.57	0.83	1948
31	22	6.38	4.53	0.71	1784	6.15	4.37	0.71	1896	6.00	4.26	0.71	1948	5.75	4.08	0.71	2030
31	24	6.70	3.95	0.59	1866	6.45	3.81	0.59	1968	6.30	3.72	0.59	2030	6.10	3.60	0.59	2132
31	26	6.90	3.24	0.47	1968	6.70	3.15	0.47	2071	6.60	3.10	0.47	2132	6.40	3.01	0.47	2194
32	18	5.88	5.82	0.99	1640	5.63	5.57	0.99	1722	5.40	5.35	0.99	1804	5.20	5.15	0.99	1886
32	20	6.13	5.33	0.87	1722	5.88	5.11	0.87	1825	5.70	4.96	0.87	1866	5.50	4.79	0.87	1948
32	22	6.38	4.78	0.75	1784	6.15	4.61	0.75	1896	6.00	4.50	0.75	1948	5.75	4.31	0.75	2030
32	24	6.70	4.22	0.63	1866	6.45	4.06	0.63	1968	6.30	3.97	0.63	2030	6.10	3.84	0.63	2132
32	26	6.90	3.52	0.51	1968	6.70	3.42	0.51	2071	6.60	3.37	0.51	2132	6.40	3.26	0.51	2194

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation at Rated frequency

MUZ-BT50VG

CAPACITY: 5.0 kW

SHF: 0.73

INPUT: 2050 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)											
		35				40				46			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	4.90	2.70	0.55	2009	4.50	2.48	0.55	2132	4.15	2.28	0.55	2214
21	20	5.15	2.21	0.43	2091	4.80	2.06	0.43	2194	4.45	1.91	0.43	2317
22	18	4.90	2.89	0.59	2009	4.50	2.66	0.59	2132	4.15	2.45	0.59	2214
22	20	5.15	2.42	0.47	2091	4.80	2.26	0.47	2194	4.45	2.09	0.47	2317
22	22	5.45	1.91	0.35	2173	5.10	1.79	0.35	2296	4.75	1.66	0.35	2378
23	18	4.90	3.09	0.63	2009	4.50	2.84	0.63	2132	4.15	2.61	0.63	2214
23	20	5.15	2.63	0.51	2091	4.80	2.45	0.51	2194	4.45	2.27	0.51	2317
23	22	5.45	2.13	0.39	2173	5.10	1.99	0.39	2296	4.75	1.85	0.39	2378
24	18	4.90	3.28	0.67	2009	4.50	3.02	0.67	2132	4.15	2.78	0.67	2214
24	20	5.15	2.83	0.55	2091	4.80	2.64	0.55	2194	4.45	2.45	0.55	2317
24	22	5.45	2.34	0.43	2173	5.10	2.19	0.43	2296	4.75	2.04	0.43	2378
24	24	5.75	1.78	0.31	2255	5.40	1.67	0.31	2358	5.10	1.58	0.31	2460
25	18	4.90	3.48	0.71	2009	4.50	3.20	0.71	2132	4.15	2.95	0.71	2214
25	20	5.15	3.04	0.59	2091	4.80	2.83	0.59	2194	4.45	2.63	0.59	2317
25	22	5.45	2.56	0.47	2173	5.10	2.40	0.47	2296	4.75	2.23	0.47	2378
25	24	5.75	2.01	0.35	2255	5.40	1.89	0.35	2358	5.10	1.79	0.35	2460
26	18	4.90	3.68	0.75	2009	4.50	3.38	0.75	2132	4.15	3.11	0.75	2214
26	20	5.15	3.24	0.63	2091	4.80	3.02	0.63	2194	4.45	2.80	0.63	2317
26	22	5.45	2.78	0.51	2173	5.10	2.60	0.51	2296	4.75	2.42	0.51	2378
26	24	5.75	2.24	0.39	2255	5.40	2.11	0.39	2358	5.10	1.99	0.39	2460
26	26	6.05	1.63	0.27	2337	5.70	1.54	0.27	2440	5.35	1.44	0.27	2542
27	18	4.90	3.87	0.79	2009	4.50	3.56	0.79	2132	4.15	3.28	0.79	2214
27	20	5.15	3.45	0.67	2091	4.80	3.22	0.67	2194	4.45	2.98	0.67	2317
27	22	5.45	3.00	0.55	2173	5.10	2.81	0.55	2296	4.75	2.61	0.55	2378
27	24	5.75	2.47	0.43	2255	5.40	2.32	0.43	2358	5.10	2.19	0.43	2460
27	26	6.05	1.88	0.31	2337	5.70	1.77	0.31	2440	5.35	1.66	0.31	2542
28	18	4.90	4.07	0.83	2009	4.50	3.74	0.83	2132	4.15	3.44	0.83	2214
28	20	5.15	3.66	0.71	2091	4.80	3.41	0.71	2194	4.45	3.16	0.71	2317
28	22	5.45	3.22	0.59	2173	5.10	3.01	0.59	2296	4.75	2.80	0.59	2378
28	24	5.75	2.70	0.47	2255	5.40	2.54	0.47	2358	5.10	2.40	0.47	2460
28	26	6.05	2.12	0.35	2337	5.70	2.00	0.35	2440	5.35	1.87	0.35	2542
29	18	4.90	4.26	0.87	2009	4.50	3.92	0.87	2132	4.15	3.61	0.87	2214
29	20	5.15	3.86	0.75	2091	4.80	3.60	0.75	2194	4.45	3.34	0.75	2317
29	22	5.45	3.43	0.63	2173	5.10	3.21	0.63	2296	4.75	2.99	0.63	2378
29	24	5.75	2.93	0.51	2255	5.40	2.75	0.51	2358	5.10	2.60	0.51	2460
29	26	6.05	2.36	0.39	2337	5.70	2.22	0.39	2440	5.35	2.09	0.39	2542
30	18	4.90	4.46	0.91	2009	4.50	4.10	0.91	2132	4.15	3.78	0.91	2214
30	20	5.15	4.07	0.79	2091	4.80	3.79	0.79	2194	4.45	3.52	0.79	2317
30	22	5.45	3.65	0.67	2173	5.10	3.42	0.67	2296	4.75	3.18	0.67	2378
30	24	5.75	3.16	0.55	2255	5.40	2.97	0.55	2358	5.10	2.81	0.55	2460
30	26	6.05	2.60	0.43	2337	5.70	2.45	0.43	2440	5.35	2.30	0.43	2542
31	18	4.90	4.66	0.95	2009	4.50	4.28	0.95	2132	4.15	3.94	0.95	2214
31	20	5.15	4.27	0.83	2091	4.80	3.98	0.83	2194	4.45	3.69	0.83	2317
31	22	5.45	3.87	0.71	2173	5.10	3.62	0.71	2296	4.75	3.37	0.71	2378
31	24	5.75	3.39	0.59	2255	5.40	3.19	0.59	2358	5.10	3.01	0.59	2460
31	26	6.05	2.84	0.47	2337	5.70	2.68	0.47	2440	5.35	2.51	0.47	2542
32	18	4.90	4.85	0.99	2009	4.50	4.46	0.99	2132	4.15	4.11	0.99	2214
32	20	5.15	4.48	0.87	2091	4.80	4.18	0.87	2194	4.45	3.87	0.87	2317
32	22	5.45	4.09	0.75	2173	5.10	3.83	0.75	2296	4.75	3.56	0.75	2378
32	24	5.75	3.62	0.63	2255	5.40	3.40	0.63	2358	5.10	3.21	0.63	2460
32	26	6.05	3.09	0.51	2337	5.70	2.91	0.51	2440	5.35	2.73	0.51	2542

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA HEAT operation at Rated frequency**MUZ-BT20VG**

CAPACITY: 2.50kW INPUT: 550 W

INDOOR DB (°C)	OUTDOOR WB (°C)													
	-10		-5		0		5		10		15		20	
	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	1.58	358	1.90	429	2.23	484	2.55	523	2.88	556	3.18	572	3.50	583
21	1.50	385	1.80	457	2.13	506	2.43	545	2.75	572	3.05	589	3.36	611
26	1.35	413	1.68	484	1.98	534	2.30	572	2.63	600	2.93	616	3.25	633

MUZ-BT25VG

CAPACITY: 3.15kW INPUT: 1040 W

INDOOR DB (°C)	OUTDOOR WB (°C)													
	-10		-5		0		5		10		15		20	
	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	1.98	676	2.39	811	2.80	915	3.21	988	3.62	1050	4.00	1082	4.41	1102
21	1.89	728	2.27	863	2.68	957	3.06	1030	3.47	1082	3.84	1113	4.24	1154
26	1.70	780	2.11	915	2.49	1009	2.90	1082	3.31	1134	3.69	1165	4.10	1196

MUZ-BT35VG

CAPACITY: 3.60 kW INPUT: 930 W

INDOOR DB (°C)	OUTDOOR WB (°C)													
	-10		-5		0		5		10		15		20	
	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	2.27	605	2.74	725	3.20	818	3.67	884	4.14	939	4.57	967	5.04	986
21	2.16	651	2.59	772	3.06	856	3.49	921	3.96	967	4.39	995	4.84	1032
26	1.94	698	2.41	818	2.84	902	3.31	967	3.78	1014	4.21	1042	4.68	1070

MUZ-BT50VG

CAPACITY: 5.40 kW INPUT: 1550 W

INDOOR DB (°C)	OUTDOOR WB (°C)													
	-10		-5		0		5		10		15		20	
	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	3.40	1008	4.10	1209	4.81	1364	5.51	1473	6.21	1566	6.86	1612	7.56	1643
21	3.24	1085	3.89	1287	4.59	1426	5.24	1535	5.94	1612	6.59	1659	7.26	1721
26	2.92	1163	3.62	1364	4.27	1504	4.97	1612	5.67	1690	6.32	1736	7.02	1783


NOTE: Q: Total capacity (kW) INPUT : Total power input (W) DB: Dry-bulb temperature WB: Wet-bulb temperature

MUZ-BT20VG MUZ-BT25VG MUZ-BT35VG MUZ-BT50VG
10-1. OUTDOOR FAN MOTOR CONTROL

The fan motor turns ON/OFF, interlocking with the compressor.

[ON] The fan motor turns ON 5 seconds before the compressor starts up.

[OFF] The fan motor turns OFF 15 seconds after the compressor has stopped running.

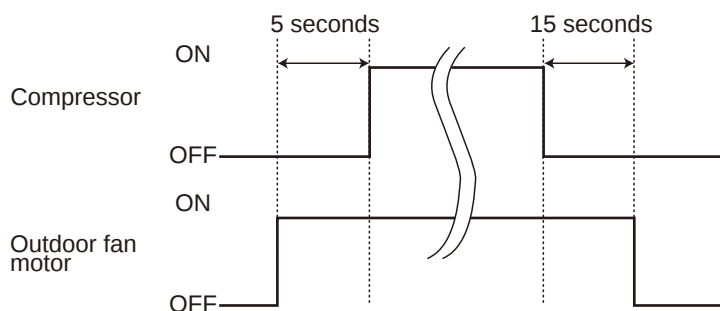

10-2. R.V. COIL CONTROL

Heating ON

Cooling OFF

Dry OFF

NOTE: The 4-way valve reverses for 5 seconds right before start-up of the compressor.

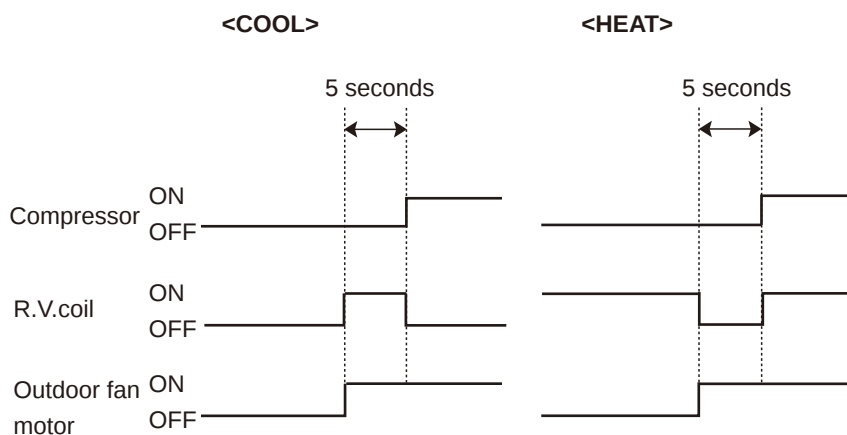
10-3. RELATION BETWEEN MAIN SENSOR AND ACTUATOR

Sensor	Purpose	Actuator					
		Compressor	LEV	Outdoor fan motor	R.V. coil	Indoor fan motor	Defrost heater
Discharge temperature thermistor	Protection	○	○				
Indoor coil temperature thermistor	Cooling: Coil frost prevention	○					
	Heating: High pressure protection	○	○				
Defrost thermistor	Heating: Defrosting	○	○	○	○	○	
Fin temperature thermistor	Protection	○		○			
Ambient temperature thermistor	Cooling: Low ambient temperature operation	○	○	○			
	Heating: Defrosting (Heater)						○
Outdoor heat exchanger temperature thermistor	Cooling: Low ambient temperature operation	○	○	○			
	Cooling: High pressure protection	○	○	○			

MUZ-BT20VG MUZ-BT25VG MUZ-BT35VG MUZ-BT50VG
11-1. CHANGE IN DEFROST SETTING
Changing defrost finish temperature

<JS> To change the defrost finish temperature, cut/solder the JS wire of the outdoor inverter P.C. board.
(Refer to 12-6-1.)

	Jumper wire	Defrost finish temperature (°C)
JS	Soldered (Initial setting)	5
	None (Cut)	10

11-2. PRE-HEAT CONTROL SETTING
PRE-HEAT CONTROL

When moisture gets into the refrigerant cycle, it may interfere the start-up of the compressor at low outside temperature. The pre-heat control prevents this interference. The pre-heat control turns ON when the discharge temperature thermistor is 20°C or below. When the pre-heat control turns ON, the compressor is energized. (About 50 W)

Pre-heat control setting

<JK>

ON: To activate the pre-heat control, cut the JK wire of the inverter P.C. board.

OFF: To deactivate the pre-heat control, solder the JK wire of the inverter P.C. board.

(Refer to 12-6.1)

NOTE: When the inverter P.C. board is replaced, check the jumper wires, and cut/solder them if necessary.

MUZ-BT20VG MUZ-BT25VG MUZ-BT35VG MUZ-BT50VG
12-1. CAUTIONS ON TROUBLESHOOTING
1. Before troubleshooting, check the following

- 1) Check the power supply voltage.
- 2) Check the indoor/outdoor connecting wire for miswiring.

2. Take care of the following during servicing

- 1) Before servicing the air conditioner, be sure to turn OFF the main unit first with the remote controller, and then after confirming the horizontal vane is closed, turn OFF the breaker and/or disconnect the power plug.
- 2) Be sure to turn OFF the power supply before removing the front panel, the cabinet, the top panel, and the electronic control P.C. board.
- 3) When removing the electrical parts, be careful of the residual voltage of smoothing capacitor.
- 4) When removing the electronic control P.C. board, hold the edge of the board with care NOT to apply stress on the components.
- 5) When connecting or disconnecting the connectors, hold the connector housing. DO NOT pull the lead wires.

<Incorrect>



Lead wiring

<Correct>



Connector housing

3. Troubleshooting procedure

- 1) Check if the OPERATION INDICATOR lamp on the indoor unit is blinking on and off to indicate an abnormality.
To make sure, check how many times the OPERATION INDICATOR lamp is blinking on and off before starting service work.
- 2) Before servicing, check that the connector and terminal are connected properly.
- 3) When the electronic control P.C. board seems to be defective, check the copper foil pattern for disconnection and the components for bursting and discoloration.
- 4) Refer to 12-2 and 12-3.


12-2. FAILURE MODE RECALL FUNCTION

Outline of the function

This air conditioner can memorize the abnormal condition which has occurred once.


Even though LED indication listed on the troubleshooting check table (12-3.) disappears, the memorized failure details can be recalled.

1. Flow chart of failure mode recall function for the indoor/outdoor unit

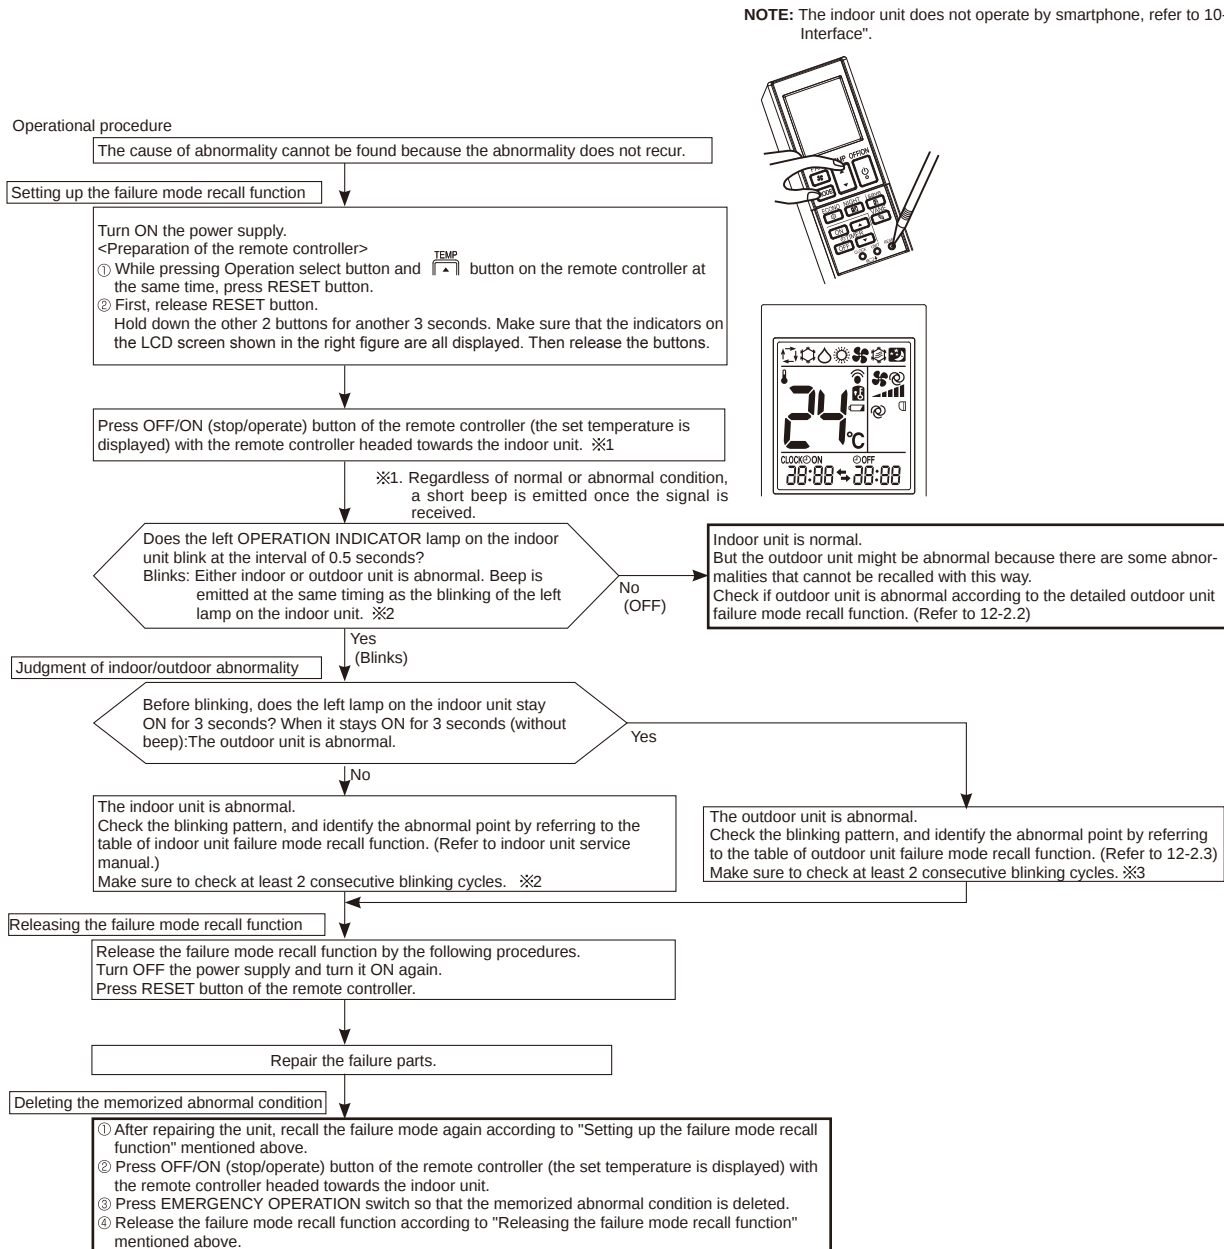


NOTE: 1. Make sure to release the failure mode recall function after it is set up, otherwise the unit cannot operate properly.
2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

※2. Blinking pattern when the indoor unit is abnormal:

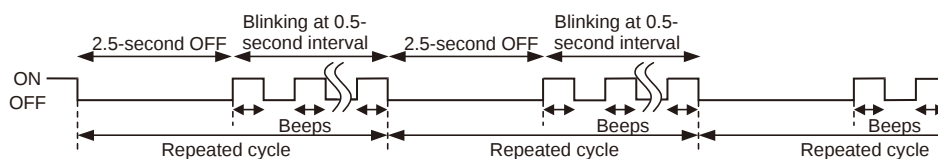


※3. Blinking pattern when the outdoor unit is abnormal:

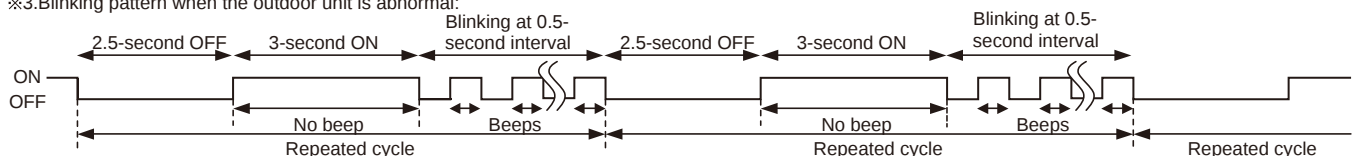


Operational procedure



※2.Blinking pattern when outdoor unit is abnormal:

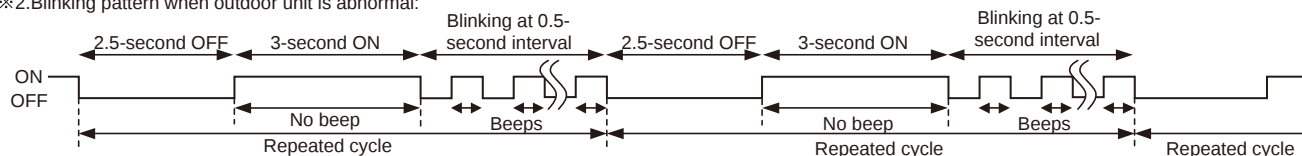



3. Table of outdoor unit failure mode recall function

NOTE: Blinking patterns of this mode differ from the ones of TROUBLESHOOTING CHECK TABLE (12-3.).

Left OPERATOR INDICATOR lamp (Indoor unit)	Abnormal point (Failure mode/protection)	LED indication (Outdoor P.C. board)	Condition	Remedy	Indoor/outdoor unit failure mode recall function	Outdoor unit failure mode recall function
OFF	None (Normal)	—	—	—	—	—
1-time blink 2.5 seconds OFF	Indoor/outdoor communication, receiving error	—	Any signals from the inverter P.C. board cannot be received normally for 3 minutes.	•Refer to 12-5. ㉔ How to check miswiring and serial signal error.	○	○
	Indoor/outdoor communication, receiving error	—	Although the inverter P.C. board sends signal "0", signal "1" has been received 30 consecutive times.	•Refer to 12-5. ㉔ How to check miswiring and serial signal error.		
2-time blink 2.5 seconds OFF	Outdoor power system	—	Overcurrent protection cut-out operates 3 consecutive times within 1 minute after the compressor gets started.	•Reconnect connectors. •Refer to 12-5. ㉔ How to check inverter/compressor". •Check stop valve.	○	○
3-time blink 2.5 seconds OFF	Discharge temperature thermistor	1-time blink every 2.5 seconds	Thermistor shorts or opens during compressor running.	•Refer to 12-5. ㉔ "Check of outdoor thermistors". Defective outdoor thermistors can be identified by checking the blinking pattern of LED.	○	○
	Defrost thermistor					
	Fin temperature thermistor	3-time blink 2.5 seconds OFF				
	P.C. board temperature thermistor	4-time blink 2.5 seconds OFF				
	Ambient temperature thermistor	2-time blink 2.5 seconds OFF				
	Outdoor heat exchanger temperature thermistor	—				
4-time blink 2.5 seconds OFF	Overcurrent	11-time blink 2.5 seconds OFF	Large current flows into power module (IC700).	•Reconnect compressor connector. •Refer to 12-5. ㉔ How to check inverter/compressor". •Check stop valve.	—	○
	Compressor synchronous abnormality (Compressor start-up failure protection)	12-time blink 2.5 seconds OFF	Waveform of compressor current is distorted.	•Reconnect compressor connector. •Refer to 12-5. ㉔ How to check inverter/compressor".	—	○
5-time blink 2.5 seconds OFF	Discharge temperature	—	Temperature of discharge temperature thermistor exceeds 116°C, compressor stops. Compressor can restart if discharge temperature thermistor reads 100°C or less 3 minutes later.	•Check refrigerant circuit and refrigerant amount. •Refer to 12-5. ㉔ "Check of LEV".	—	○
6-time blink 2.5 seconds OFF	High pressure	—	Temperature of indoor coil thermistor exceeds 70°C in HEAT mode. Temperature of defrost thermistor exceeds 70°C in COOL mode.	•Check refrigerant circuit and refrigerant amount. •Check stop valve.	—	○
7-time blink 2.5 seconds OFF	Fin temperature/P.C. board temperature	7-time blink 2.5 seconds OFF	Temperature of fin temperature thermistor on the inverter P.C. board exceeds 75 ~ 86°C, or temperature of P.C. board temperature thermistor on the inverter P.C. board exceeds 72 ~ 85°C.	•Check around outdoor unit. •Check outdoor unit air passage. •Refer to 12-5. ㉔ "Check of outdoor fan motor".	—	○
8-time blink 2.5 seconds OFF	Outdoor fan motor	—	Outdoor fan has stopped 3 times in a row within 30 seconds after outdoor fan startup.	•Refer to 12-5. ㉔ "Check of outdoor fan motor". Refer to 12-5. ㉔ "Check of inverter P.C. board".	—	○
9-time blink 2.5 seconds OFF	Nonvolatile memory data	5-time blink 2.5 seconds OFF	Nonvolatile memory data cannot be read properly.	•Replace the inverter P.C. board.	○	○
	Power module (IC700)	6-time blink 2.5 seconds OFF	The interface short circuit occurs in the output of the power module (IC700). The compressor winding shorts circuit.	•Refer to 12-5. ㉔ How to check inverter/compressor".	—	

NOTE: Blinking patterns of this mode differ from the ones of TROUBLESHOOTING CHECK TABLE (12-3.).

Left OPERATION INDICATOR lamp (Indoor unit)	Abnormal point (Failure mode/protection)	LED indication (Outdoor P.C. board)	Condition	Remedy	Indoor/outdoor unit failure mode recall function	Outdoor unit failure mode recall function
10-time blink 2.5 seconds OFF	Discharge temperature	—	Temperature of discharge temperature thermistor has been 50°C or less for 20 minutes.	- Refer to 12-5.⑧"Check of LEV". - Check refrigerant circuit and refrigerant amount.	—	○
11-time blink 2.5 seconds OFF	Bus-bar voltage (DC)	8-time blink 2.5 seconds OFF	Bus-bar voltage of inverter cannot be detected normally.	Refer to 12-5.⑨"How to check inverter/compressor".	—	○
	Each phase current of compressor	9-time blink 2.5 seconds OFF	Each phase current of compressor cannot be detected normally.			
14-time blink 2.5 seconds OFF	Stop valve (Closed valve)	14-time blink 2.5 seconds OFF	Closed valve is detected by compressor current.	Check stop valve.	○	○
	4-way valve/ Pipe temperature	16-time blink 2.5 seconds OFF	The 4-way valve does not work properly. The indoor coil thermistor detects an abnormal temperature.	- Check the 4-way valve. - Replace the inverter P.C. board.		
16-time blink 2.5 seconds OFF	Outdoor refrigerant system abnormality	1-time blink 2.5 seconds OFF	A closed valve and air trapped in the refrigerant circuit are detected based on the temperature sensed by the indoor and outdoor thermistors and the current of the compressor.	- Check for a gas leak in a connecting piping etc. - Check the stop valve. - Refer to 12-5. ⑩ "Check of outdoor refrigerant circuit".	○	○

12-3. TROUBLESHOOTING CHECK TABLE


No.	Symptom	LED indication	Abnormal point/ Condition	Condition	Remedy
1	Outdoor unit does not operate.	1-time blink every 2.5 seconds	Outdoor power system	Overcurrent protection cut-out operates 3 consecutive times within 1 minute after the compressor gets started.	•Reconnect connector of compressor. •Refer to 12-5.㉔ "How to check inverter/compressor". •Check stop valve.
2			Outdoor thermistors	Discharge temperature thermistor, fin temperature thermistor, defrost thermistor, P.C. board temperature thermistor, outdoor heat exchanger temperature thermistor or ambient temperature thermistor shorts or opens during compressor running.	•Refer to 12-5.㉔ "Check of outdoor thermistors".
3			Outdoor control system	Nonvolatile memory data cannot be read properly. (The left OPERATION INDICATOR lamp on the indoor unit lights up or blinks 7-time.)	•Replace inverter P.C. board.
4		6-time blink 2.5 seconds OFF	Serial signal	The communication fails between the indoor and outdoor unit for 3 minutes.	•Refer to 12-5.㉔ "How to check miswiring and serial signal error.
5		11-time blink 2.5 seconds OFF	Stop valve/ Closed valve	Closed valve is detected by compressor current.	•Check stop valve.
6		14-time blink 2.5 seconds OFF	Outdoor unit (Other abnormality)	Outdoor unit is defective.	•Refer to 12-2.2. "Flow chart of the detailed outdoor unit failure mode recall function".
7		16-time blink 2.5 seconds OFF	4-way valve/ Pipe temperature	The 4-way valve does not work properly. The indoor coil thermistor detects an abnormal temperature.	•Refer to 12-5.㉔ "Check of R.V. coil". •Replace the inverter P.C. board.
8		17-time blink 2.5 seconds OFF	Outdoor refrigerant system abnormality	A closed valve and air trapped in the refrigerant circuit are detected based on the temperature sensed by the indoor and outdoor thermistors and the current of the compressor.	•Check for a gas leak in a connecting piping etc. •Check the stop valve. •Refer to 12-5.㉔ "Check of outdoor refrigerant circuit".
9	'Outdoor unit stops and restarts 3 minutes later' is repeated.	2-time blink 2.5 seconds OFF	Overcurrent protection	Large current flows into power module (IC700).	•Reconnect connector of compressor. •Refer to 12-5.㉔ "How to check inverter/compressor". •Check stop valve.
10		3-time blink 2.5 seconds OFF	Discharge temperature overheat protection	Temperature of discharge temperature thermistor exceeds 116°C, compressor stops. Compressor can restart if discharge temperature thermistor reads 100°C or less 3 minutes later.	•Check refrigerant circuit and refrigerant amount. •Refer to 12-5.㉔ "Check of LEV".
11		4-time blink 2.5 seconds OFF	Fin temperature / P.C. board temperature thermistor overheat protection	Temperature of fin temperature thermistor on the heat sink exceeds 75 ~ 86°C or temperature of P.C. board temperature thermistor on the inverter P.C. board exceeds 72 ~ 85°C.	•Check around outdoor unit. •Check outdoor unit air passage. •Refer to 12-5.㉔ "Check of outdoor fan motor".
12		5-time blink 2.5 seconds OFF	High pressure protection	Indoor coil thermistor exceeds 70°C in HEAT mode. Defrost thermistor exceeds 70°C in COOL mode.	•Check refrigerant circuit and refrigerant amount. •Check stop valve.
13		8-time blink 2.5 seconds OFF	Compressor synchronous abnormality	The waveform of compressor current is distorted.	•Reconnect connector of compressor. •Refer to 12-5.㉔ "How to check inverter/compressor".
14		10-time blink 2.5 seconds OFF	Outdoor fan motor	Outdoor fan has stopped 3 times in a row within 30 seconds after outdoor fan start-up.	•Refer to 12-5.㉔ "Check of outdoor fan motor. •Refer to 12-5.㉔ "Check of inverter P.C. board.
15		12-time blink 2.5 seconds OFF	Each phase current of compressor	Each phase current of compressor cannot be detected normally.	•Refer to 12-5.㉔ "How to check inverter/compressor".
16		13-time blink 2.5 seconds OFF	Bus-bar voltage (DC)	Bus-bar voltage of inverter cannot be detected normally.	•It occurs with following case. Instantaneous power voltage drop. (Short time power failure) •Refer to 12-5.㉔ "Check of power supply". •Refer to 12-5.㉔ "How to check inverter/compressor".
17	Outdoor unit operates.	1-time blink 2.5 seconds OFF	Frequency drop by current protection	When the input current exceeds approximately 10A, compressor frequency lowers.	•The unit is normal, but check the following. •Check if indoor filters are clogged. •Check if refrigerant is short. •Check if indoor/outdoor unit air circulation is short cycled.
18		3-time blink 2.5 seconds OFF	Frequency drop by high pressure protection	Temperature of indoor coil thermistor exceeds 55°C in HEAT mode, compressor frequency lowers.	
			Frequency drop by defrosting in COOL mode	Indoor coil thermistor reads 8°C or less in COOL mode, compressor frequency lowers.	
19		4-time blink 2.5 seconds OFF	Frequency drop by discharge temperature protection	Temperature of discharge temperature thermistor exceeds 111°C, compressor frequency lowers.	•Check refrigerant circuit and refrigerant amount. •Refer to 12-5.㉔ "Check of LEV". •Refer to 12-5.㉔ "Check of outdoor thermistors".
20		5-time blink 2.5 seconds OFF	Outside temperature thermistor protection	When the outside temperature thermistor shorts or opens, protective operation without that thermistor is performed.	•Refer to 12-5.㉔ Check of outdoor thermistors.




No.	Symptom	LED indication	Abnormal point/ Condition	Condition	Remedy
21	Outdoor unit operates.	7-time blink 2.5 seconds OFF	Low discharge temperature protection	Temperature of discharge temperature thermistor has been 50°C or less for 20 minutes.	- Refer to 12-5.⑧ "Check of LEV". - Check refrigerant circuit and refrigerant amount.
22		8-time blink 2.5 seconds OFF	PAM protection PAM: Pulse Amplitude Modulation	The overcurrent flows into PFC (Power factor correction: IC820) or the bus-bar voltage reaches 394 V or more, PAM stops and restarts.	This is not malfunction. PAM protection will be activated in the following cases: 1 Instantaneous power voltage drop. (Short time power failure) 2 When the power supply voltage is high.
23		9-time blink 2.5 seconds OFF	Inverter check mode	The connector of compressor is disconnected, inverter check mode starts.	Check if the connector of the compressor is correctly connected. Refer to 12-5.④ "How to check inverter/compressor".

NOTE: 1. The location of LED is illustrated at the right figure. Refer to 12-6.1.
 2. LED is lighted during normal operation.

The blinking frequency shows the number of times the LED blinks after every 2.5-second OFF.
 (Example) When the blinking frequency is "2".

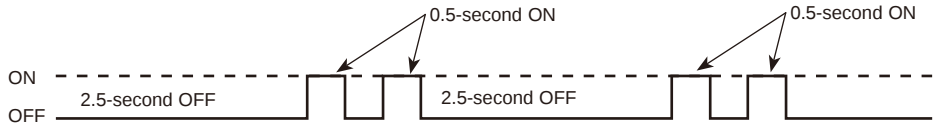

Inverter P.C. board




12-4. TROUBLE CRITERION OF MAIN PARTS

Part name	Check method and criterion	Figure											
Defrost thermistor (RT61) Fin temperature thermistor (RT64) Ambient temperature thermistor (RT65) Outdoor heat exchanger temperature thermistor (RT68)	Measure the resistance with a tester. Refer to 12-6. "Test point diagram and voltage", 1. "Inverter P.C. board", for the chart of thermistor.												
Discharge temperature thermistor (RT62)	Measure the resistance with a tester. Before measurement, hold the thermistor with your hands to warm it up. Refer to 12-6. "Test point diagram and voltage", 1. "Inverter P.C. board", for the chart of thermistor.												
Compressor	Measure the resistance between terminals using a tester. (Temperature: -10 ~ 40°C) <table><tr><td></td><td colspan="2">Normal (Ω)</td></tr><tr><td></td><td>MUZ-BT20/25/35VG</td><td>MUZ-BT50VG</td></tr><tr><td>U-V</td><td rowspan="3">1.59 ~ 2.16</td><td rowspan="3">0.82 ~ 1.11</td></tr><tr><td>U-W</td></tr><tr><td>V-W</td></tr></table>		Normal (Ω)			MUZ-BT20/25/35VG	MUZ-BT50VG	U-V	1.59 ~ 2.16	0.82 ~ 1.11	U-W	V-W	
	Normal (Ω)												
	MUZ-BT20/25/35VG	MUZ-BT50VG											
U-V	1.59 ~ 2.16	0.82 ~ 1.11											
U-W													
V-W													
Outdoor fan motor	Measure the resistance between lead wires using a tester. (Temperature: -10 ~ 40°C) <table><tr><td>Color of lead wire</td><td colspan="2">Normal (Ω)</td></tr><tr><td></td><td>MUZ-BT20/25/35VG</td><td>MUZ-BT50VG</td></tr><tr><td>RED – BLK BLK – WHT WHT – RED</td><td>32 ~ 43</td><td>15 ~ 20</td></tr></table>	Color of lead wire	Normal (Ω)			MUZ-BT20/25/35VG	MUZ-BT50VG	RED – BLK BLK – WHT WHT – RED	32 ~ 43	15 ~ 20			
Color of lead wire	Normal (Ω)												
	MUZ-BT20/25/35VG	MUZ-BT50VG											
RED – BLK BLK – WHT WHT – RED	32 ~ 43	15 ~ 20											
R. V. coil (21S4)	Measure the resistance using a tester. (Temperature: -10 ~ 40°C) <table><tr><td>Normal (kΩ)</td></tr><tr><td>1.41 ~ 2.00</td></tr></table>	Normal (kΩ)	1.41 ~ 2.00										
Normal (kΩ)													
1.41 ~ 2.00													
Expansion valve coil (LEV)	Measure the resistance using a tester. (Temperature: -10 ~ 40°C) <table><tr><td>Color of lead wire</td><td>Normal (Ω)</td></tr><tr><td>RED – ORN</td><td rowspan="4">37 ~ 54</td></tr><tr><td>RED – WHT</td></tr><tr><td>RED – BLU</td></tr><tr><td>RED – YLW</td></tr></table>	Color of lead wire	Normal (Ω)	RED – ORN	37 ~ 54	RED – WHT	RED – BLU	RED – YLW					
Color of lead wire	Normal (Ω)												
RED – ORN	37 ~ 54												
RED – WHT													
RED – BLU													
RED – YLW													

12-5. TROUBLESHOOTING FLOW

Ⓐ How to check inverter/compressor

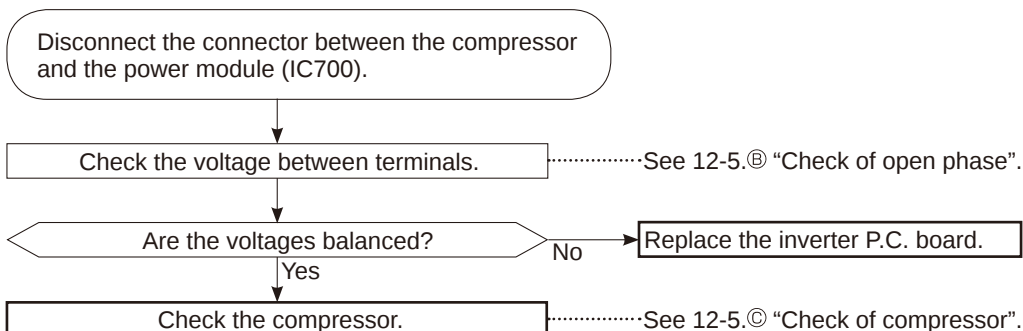

Ⓑ Check of open phase

- With the connector between the compressor and the power module (IC700) disconnected, activate the inverter and check if the inverter is normal by measuring **the voltage balance** between the terminals.

Output voltage is 50 - 130 V. (The voltage may differ according to the tester.)

<< Operation method >>

Start cooling or heating operation by pressing EMERGENCY OPERATION switch on the indoor unit. (TEST RUN OPERATION: Refer to 9-3.)


<<Measurement point>>

At 3 points ※ Measure AC voltage between the lead wires at 3 points.

BLK (U)-WHT (V)
BLK (U)-RED (W)
WHT(V)-RED (W)

- NOTE:** 1. Output voltage varies according to power supply voltage.
2. Measure the voltage by analog type tester.
3. During this check, LED of the inverter P.C. board blinks 9 times. (Refer to 12-6.1.)

Ⓒ Check of compressor

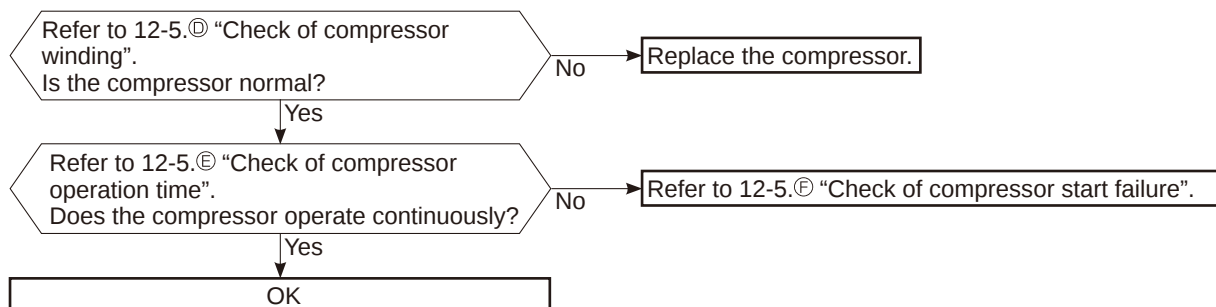

D Check of compressor winding

- Disconnect the connector between the compressor and the power module (IC700), and measure the resistance between the compressor terminals.

<<Measurement point>>

At 3 points

BLK-WHT

BLK-RED

WHT-RED

※ Measure the resistance between the lead wires at 3 points.

<<Judgement>>

Refer to 12-4.

0 [Ω]Abnormal [short]

Infinite [Ω]Abnormal [open]

NOTE: Be sure to zero the ohmmeter before measurement.

E Check of compressor operation time

- Connect the compressor and activate the inverter. Then measure the time until the inverter stops due to overcurrent.


<<Operation method>>

Start heating or cooling operation by pressing EMERGENCY OPERATION switch on the indoor unit. (TEST RUN OPERATION: Refer to 9-3.)

<<Measurement>>

Measure the time from the start of compressor to the stop of compressor due to overcurrent.

<<Judgement>>

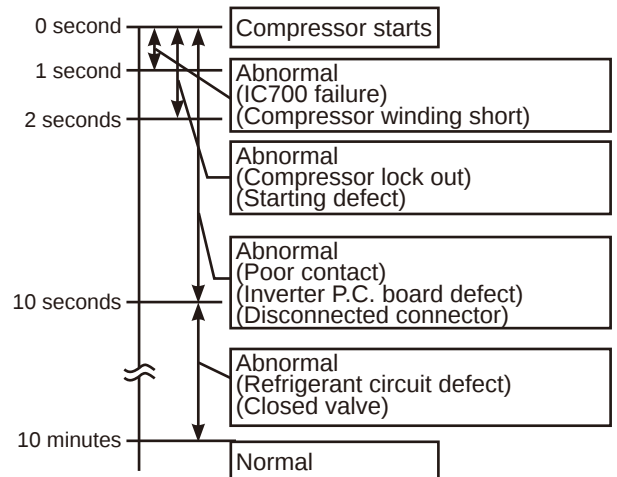

F Check of compressor start failure

Confirm that ①~④ is normal.

•Electrical circuit check

①. Contact of the compressor connector

②. Output voltage of inverter P.C. board and balance of them (See 12-5.⑥)

③. Direct current voltage between DB61(+) and (-) on the inverter P.C. board

④. Voltage between outdoor terminal block S1-S2

Does the compressor run for 10 seconds or more after it starts?

Yes

Check the refrigerant circuit.
Check the stop valve.

No


After the compressor is heated with a drier,
does the compressor start? ※1

No

Replace the compressor.

Yes

Compressor start failure. Activate pre-heat control.
(Refer to 11-2. "PRE-HEAT CONTROL SETTING")

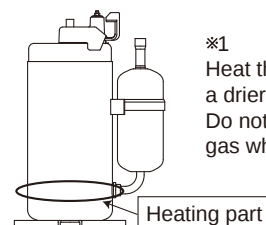

※1
Heat the compressor with
a drier for about 20 minutes.
Do not recover refrigerant
gas while heating.

Check of outdoor thermistors

Disconnect the connector of thermistor in the inverter P.C. board (see below table), and measure the resistance of thermistor.

Is the resistance of thermistor normal?
(Refer to 12-6.1.)

No

Replace the thermistor except RT64.
When RT64 is abnormal, replace the inverter P.C. board.

Yes

Reconnect the connector of thermistor.
Turn ON the power supply and press EMERGENCY OPERATION switch.

Does the unit operate for 10 minutes or more
without showing thermistor abnormality?

No

Replace the inverter P.C. board.

Yes


OK (Cause is poor contact.)

Thermistor	Symbol	Connector, Pin No.	Board
Defrost	RT61	Between CN641 pin1 and pin2	Inverter P.C. board
Discharge temperature	RT62	Between CN641 pin3 and pin4	
Fin temperature	RT64	Between CN642 pin1 and pin2	
Ambient temperature	RT65	Between CN643 pin1 and pin2	
Outdoor heat exchanger temperature	RT68	Between CN644 pin1 and pin3	


H Check of R.V. coil

- * First of all, measure the resistance of R.V. coil to check if the coil is defective. Refer to 12-4.
- * In case CN721 is disconnected or R.V. coil is open, voltage is generated between the terminal pins of the connector although no signal is being transmitted to R.V. coil.
Check if CN721 is connected.

Unit operates in COOL mode even if it is set to HEAT mode.

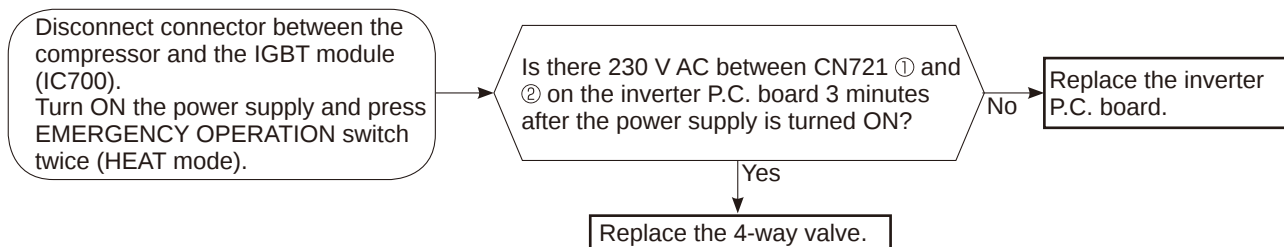

Unit operates in HEAT mode even if it is set to COOL mode.

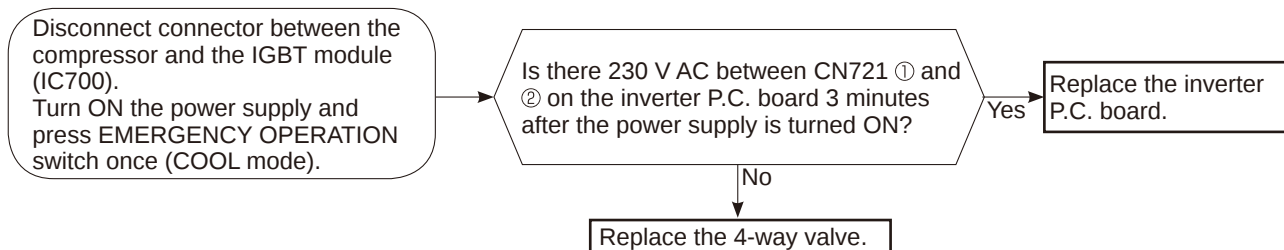

① Check of outdoor fan motor

Disconnect the connectors CN931 and CN932 from the inverter P.C. board.
Check the connection between the connector CN931 and CN932.

Is the resistance between each terminal of outdoor fan motor normal?
(Refer to 12-4.)

Yes

No

Disconnect CN932 from the inverter P.C. board, and turn on the power supply.

Rotate the outdoor fan motor manually and measure the voltage of CN931.
Between 1(+) and 5(-)
Between 2(+) and 5(-)
Between 3(+) and 5(-)

Does the voltage between each terminal become 5 and 0 V DC repeatedly?

(Fixed to either 5 or 0 V DC)

Yes

No

Does the outdoor fan motor rotate smoothly?


Yes

No


Replace the inverter P.C. board.

Replace the outdoor fan motor.

J Check of power supply

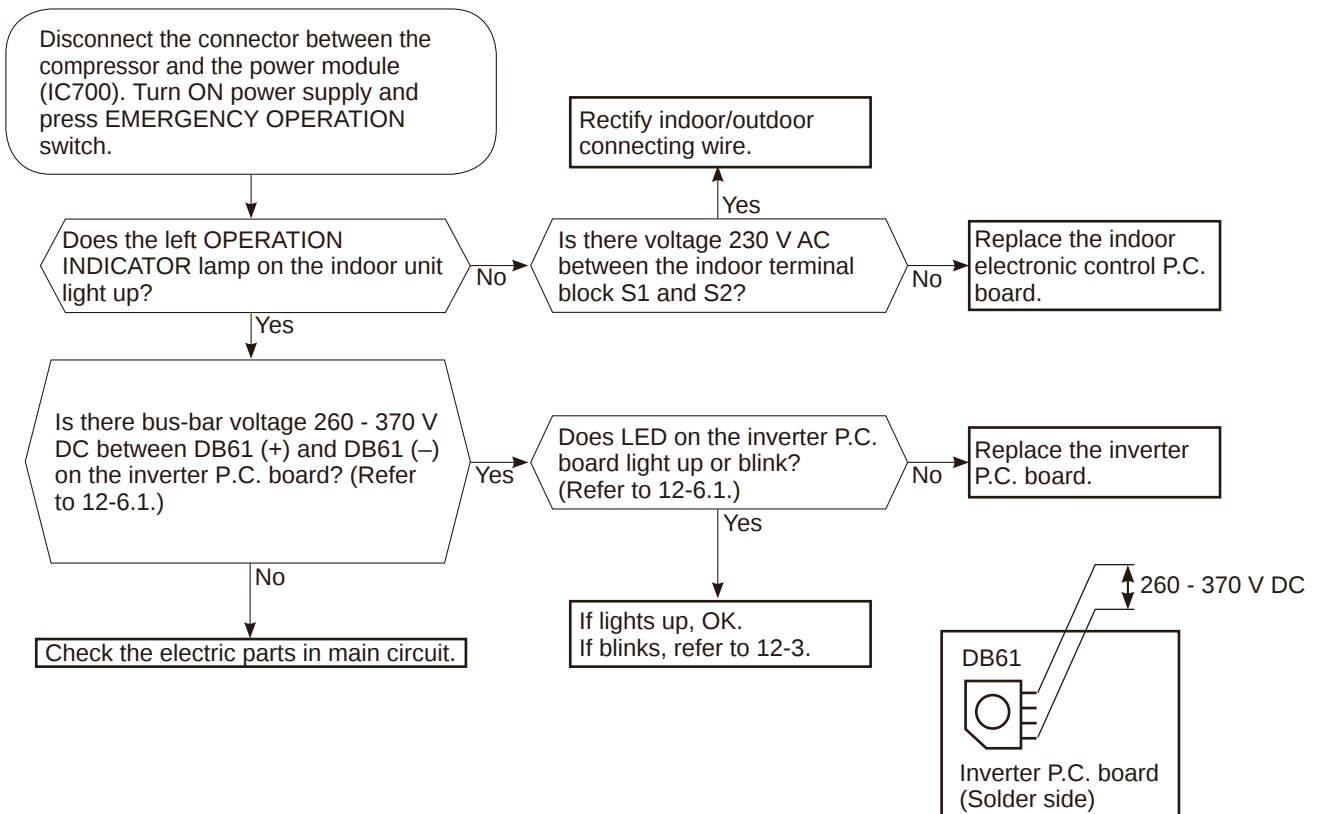

K Check of LEV (Expansion valve)

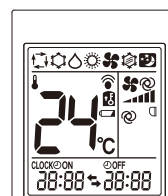

Turn ON the power supply.

<Preparation of the remote controller>

- ① While pressing both Operation select button and  button on the remote controller at the same time, press RESET button.
- ② First, release RESET button.
Hold down the other 2 buttons for another 3 seconds.
Make sure that the indicators on the LCD screen shown in the right figure are all displayed. Then release the buttons.

Press OFF/ON (stop/operate) button of the remote controller (the set temperature is displayed) with the remote controller headed towards the indoor unit. *1

Expansion valve operates in full-opening direction.

Do you hear the expansion valve "click, click....."?
Do you feel the expansion valve vibrate when touching it?

Yes

OK

No

Is LEV coil properly fixed to the expansion valve?

No

Properly fix the LEV coil to the expansion valve.

Yes

Does the resistance of LEV coil have the characteristics? (Refer to 12-4.)

Yes

Measure each voltage between connector pins of CN724 on the inverter P.C. board.
1. Pin③(-) — Pin①(+)
2. Pin④(-) — Pin①(+)
3. Pin⑤(-) — Pin①(+)
4. Pin⑥(-) — Pin①(+)
Is there about 3 - 5 V AC between each?
NOTE: Measure the voltage by an analog tester.

No

Replace the inverter P.C. board.

No

Replace the LEV coil.

Yes


Replace the expansion valve.

*1. Regardless of normal or abnormal condition, a short beep is emitted once the signal is received.


NOTE: After check of LEV, take the following steps.

1. Turn OFF the power supply and turn it ON again.
2. Press RESET button on the remote controller.

Ⓐ Check of inverter P.C. board

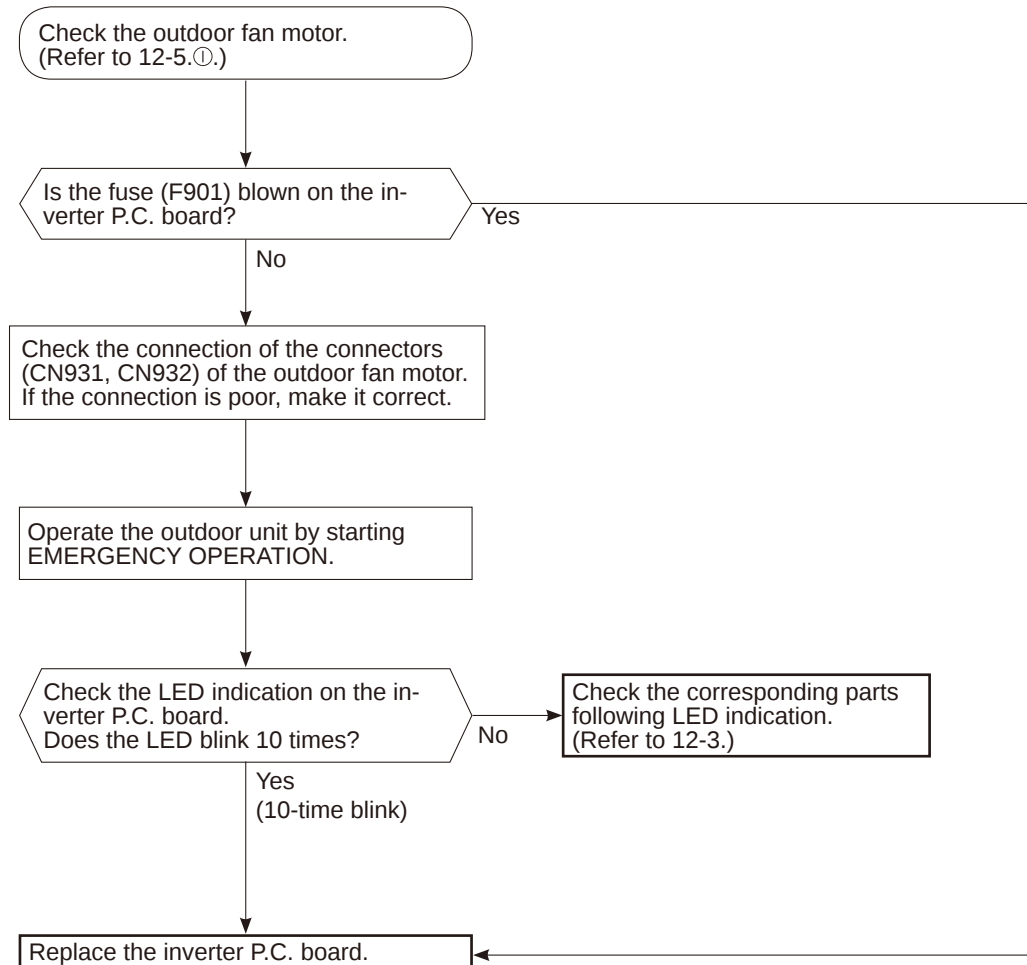

M How to check miswiring and serial signal error

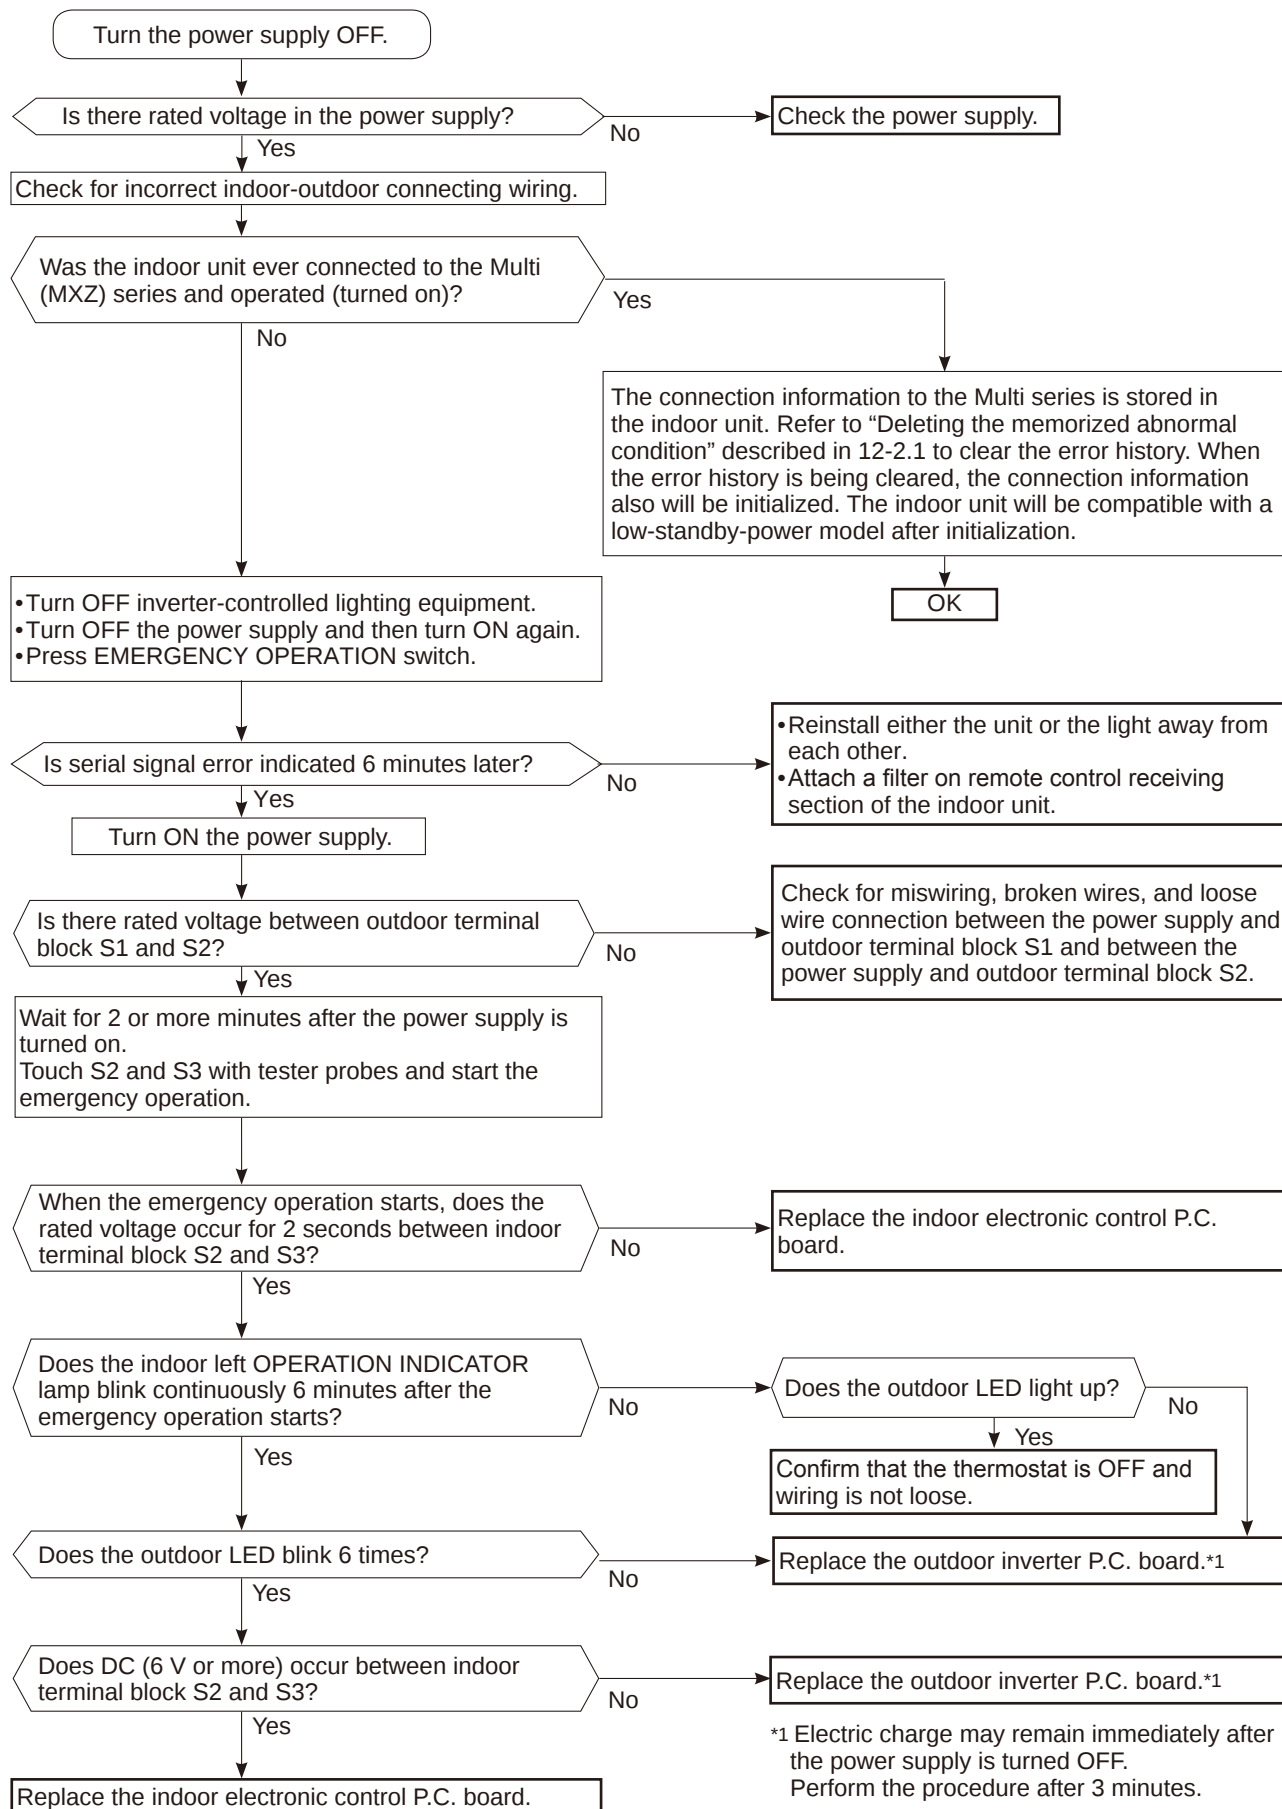



N Check of the outdoor refrigerant circuit

Has the operation stopped during pump down?

Yes

The operation has stopped to prevent the diesel explosion caused by air trapped in the refrigerant circuit. Close the stop valve, and disconnect the power plug or turn the breaker OFF. ※

※ **CAUTION** : Do not start the operation again to prevent hazards.

No

Was the operation started with the stop valve closed, and was it opened during operation?


Yes

The unit occasionally stops when the stop valve is opened or closed during operation. Open the stop valve and start the cooling operation again.

No

The refrigerant gas amount may be 60% or less than the normal amount. Identify where the gas is leaking from, and fix the leak.

⦿ Electromagnetic noise enters into TV sets or radios

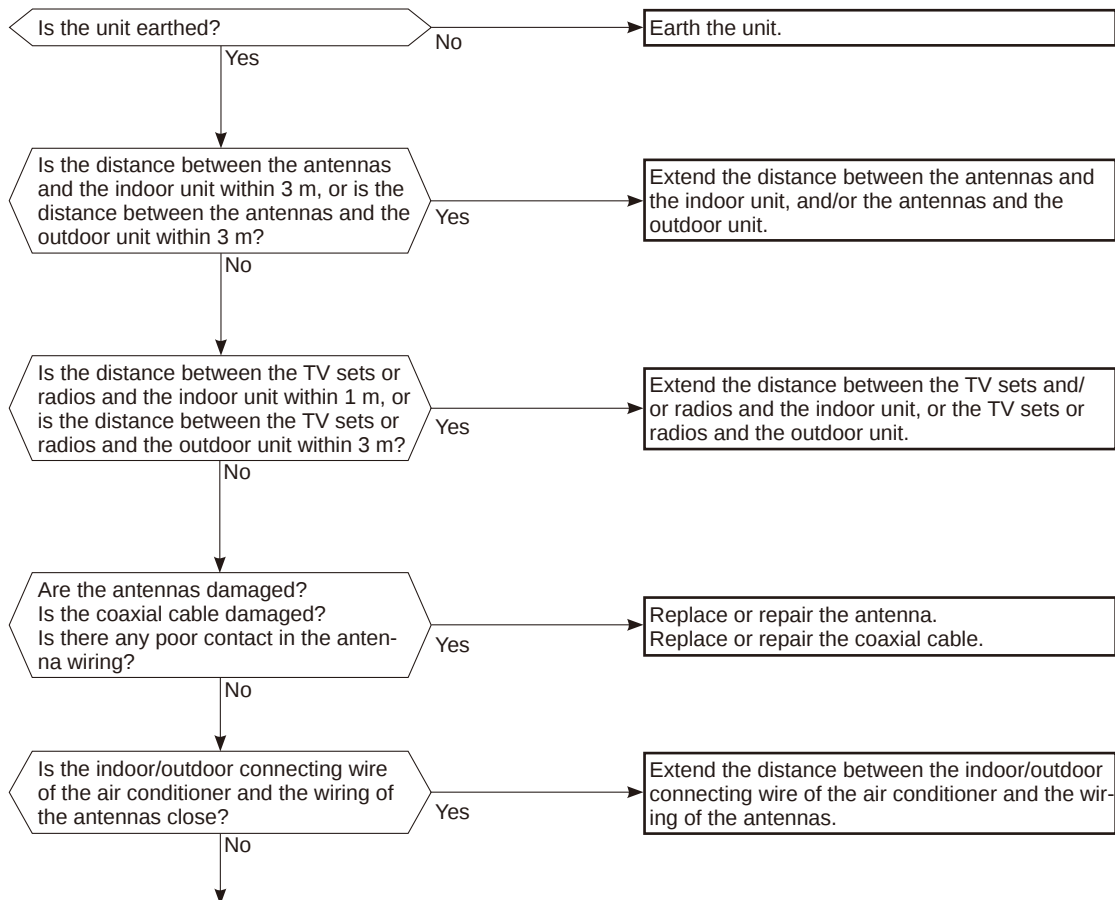

Even if all of the above conditions are fulfilled, the electromagnetic noise may enter, depending on the electric field strength or the installation condition (combination of specific conditions such as antennas or wiring).


Check the following before asking for service.

1. Devices affected by the electromagnetic noise
TV sets, radios (FM/AM broadcast, shortwave)
2. Channel, frequency, broadcast station affected by the electromagnetic noise
3. Channel, frequency, broadcast station unaffected by the electromagnetic noise
4. Layout of:
indoor/outdoor unit of the air conditioner, indoor/outdoor wiring, earth wire, antennas, wiring from antennas, receiver
5. Electric field intensity of the broadcast station affected by the electromagnetic noise
6. Presence or absence of amplifier such as booster
7. Operation condition of air conditioner when the electromagnetic noise enters in
 - 1) Turn OFF the power supply once, and then turn ON the power supply. In this situation, check for the electromagnetic noise.
 - 2) Within 3 minutes after turning ON the power supply, press OFF/ON (stop/operate) button on the remote controller for power ON, and check for the electromagnetic noise.
 - 3) After a short time (3 minutes later after turning ON), the outdoor unit starts running. During operation, check for the electromagnetic noise.
 - 4) Press OFF/ON (stop/operate) button on the remote controller for power OFF, when the outdoor unit stops but the indoor/outdoor communication still runs on. In this situation, check for the electromagnetic noise.

12-6. TEST POINT DIAGRAM AND VOLTAGE




1. Inverter P.C. board

MUZ-BT20VG MUZ-BT25VG MUZ-BT35VG

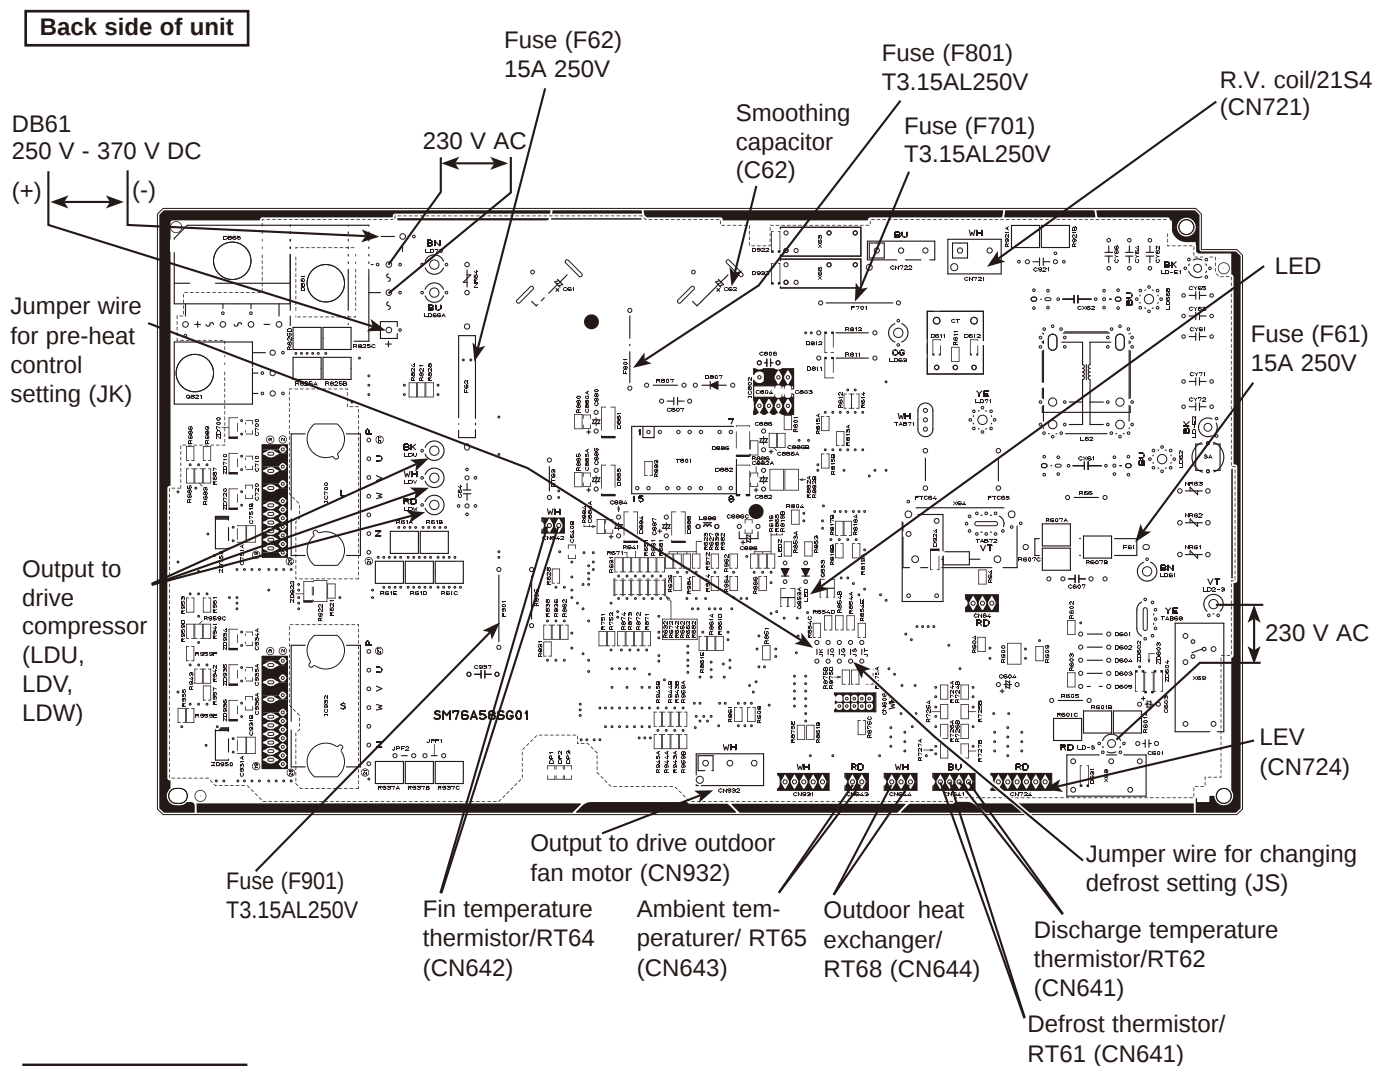


Front side of unit




Defrost thermistor (RT61)
Ambient temperature thermistor (RT65)
Outdoor heat exchanger temperature thermistor (RT68)

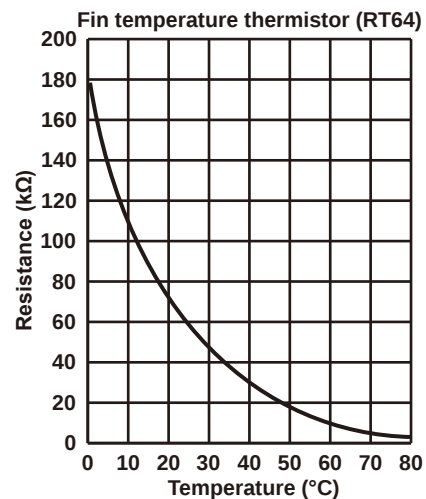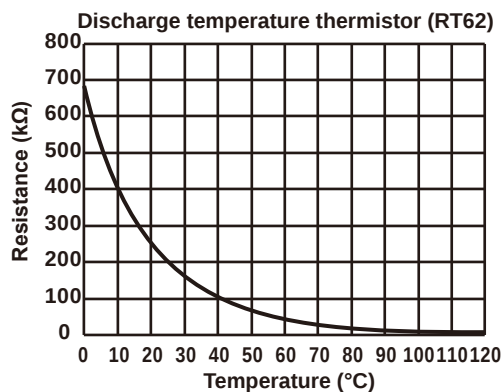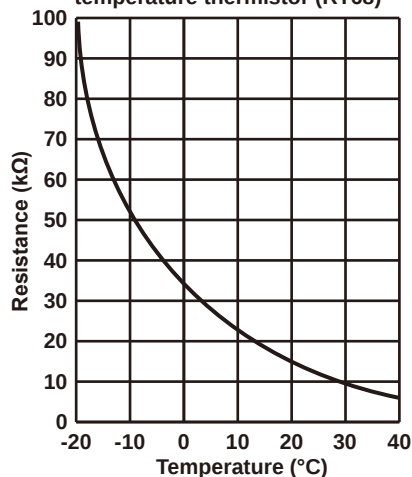

1. Inverter P.C. board MUZ-BT50VG

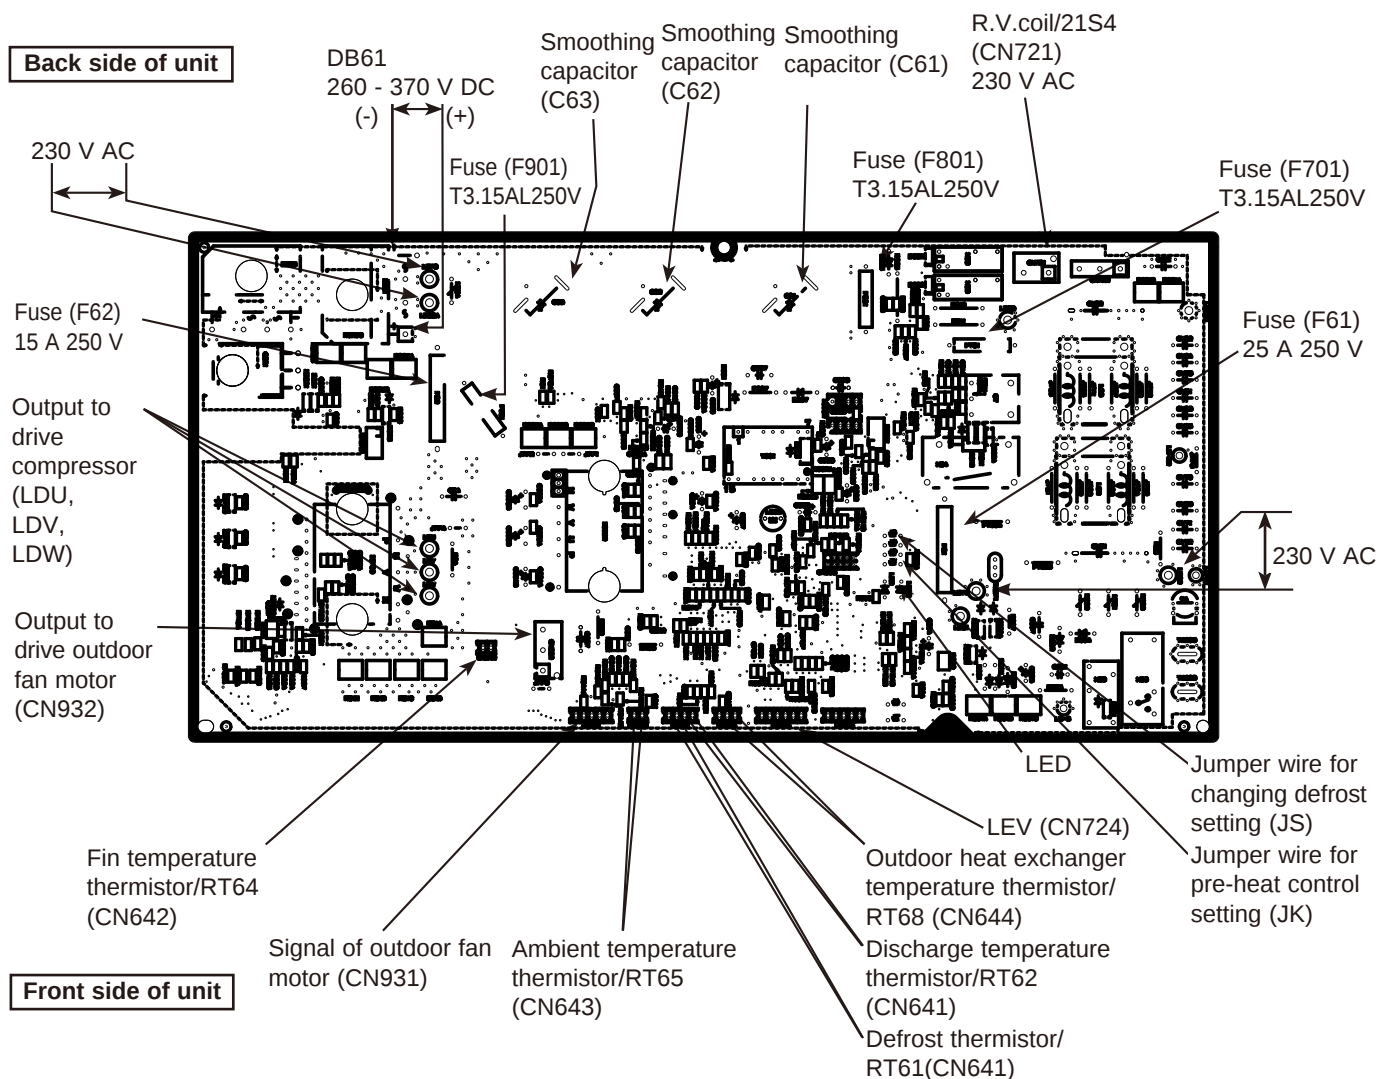

Defrost thermistor(RT61)
Ambient temperature thermistor(RT65)
Outdoor heat exchanger temperature thermistor(RT68)

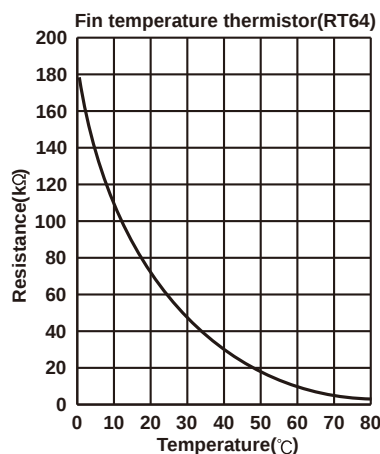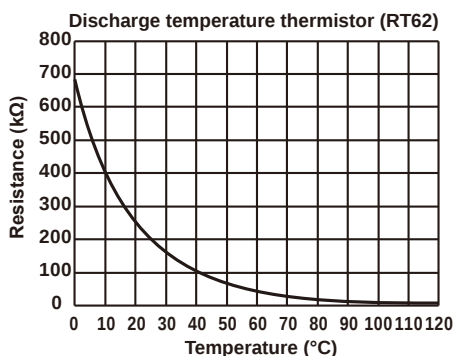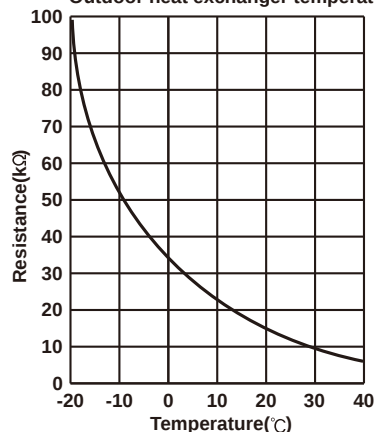

<Detaching method of the terminal with locking mechanism >


The terminal which has the locking mechanism can be detached as shown below.

There are following 2 types of the terminal with locking mechanism.


The terminal without locking mechanism can be detached by pulling it out.

Check the shape of the terminal before detaching.

(1) Slide the sleeve and check if there is a locking lever or not.

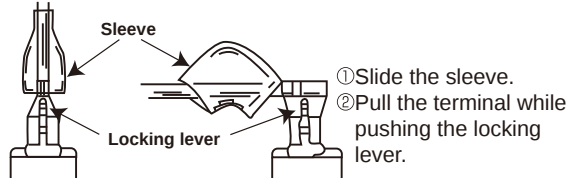

(2) The terminal with this connector shown below has the locking mechanism.



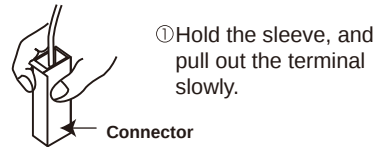
**13-1. MUZ-BT20VG MUZ-BT25VG MUZ-BT35VG**

NOTE: Turn OFF the power supply before disassembly.

→ : Indicates the visible parts in the photos.
 ---→ : Indicates the invisible parts in the photos.

OPERATING PROCEDURE**1. Removing the cabinet and the panels**

- (1) Remove the screws fixing the service panel.
- (2) Pull down the service panel and remove it.
- (3) Disconnect the power supply and indoor/outdoor connecting wire.
- (4) Remove the screws fixing the top panel.
- (5) Remove the top panel.
- (6) Remove the screws fixing the cabinet.
- (7) Remove the cabinet.
- (8) Remove the fixing screws of the terminal block support and the back panel. (Photo 4)
- (9) Remove the screws fixing the back panel.
- (10) Remove the back panel.

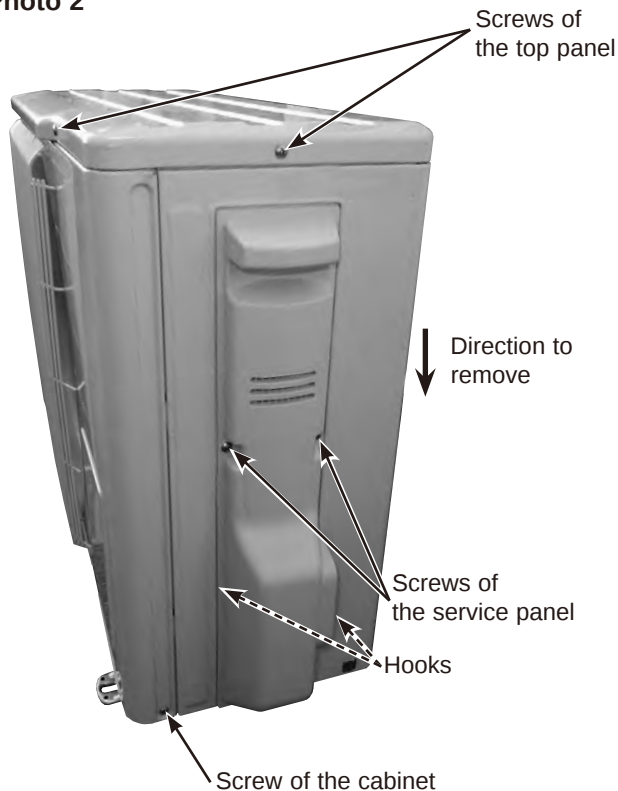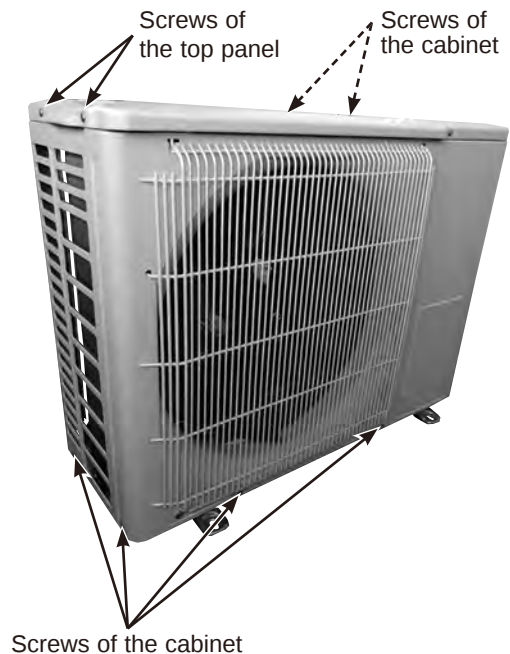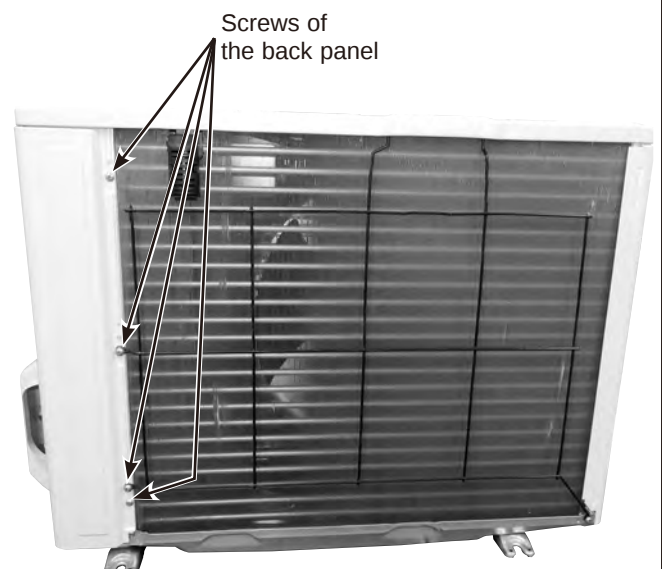Photo 2**PHOTOS****Photo 1****Photo 3**

OPERATING PROCEDURE


2. Removing the inverter assembly, inverter P.C. board

- (1) Remove the cabinet and the panels. (Refer to section 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
 - <Inverter P.C. board>
 - CN721 (R.V. coil)
 - CN931, CN932 (Fan motor)
 - CN641 (Defrost thermistor and discharge temperature thermistor)
 - CN643 (Ambient temperature thermistor)
 - CN644 (Outdoor heat exchanger temperature thermistor)
 - CN724 (LEV)
- (3) Remove the compressor connector (CN61).
- (4) Remove the screw fixing the heat sink support and the separator.
- (5) Remove the screw fixing the P.C. board support and the motor support.
- (6) Remove the inverter assembly.
- (7) Remove the screws of the earth wire and the terminal block support.
- (8) Remove the screw of the earth wire.
- (9) Remove the screw of the terminal block and remove the terminal block.
- (10) Remove the heat sink support from the P.C. board support.
- (11) Unhook the catch of the inverter P.C. board and remove the inverter P.C. board from the P.C. board support.

3. Removing the R.V. coil

- (1) Remove the cabinet and the panels. (Refer to section 1.)
- (2) Disconnect the following connectors:
 - <Inverter P.C. board>
 - CN721 (R.V. coil)
- (3) Remove the R.V. coil.

Photo 6

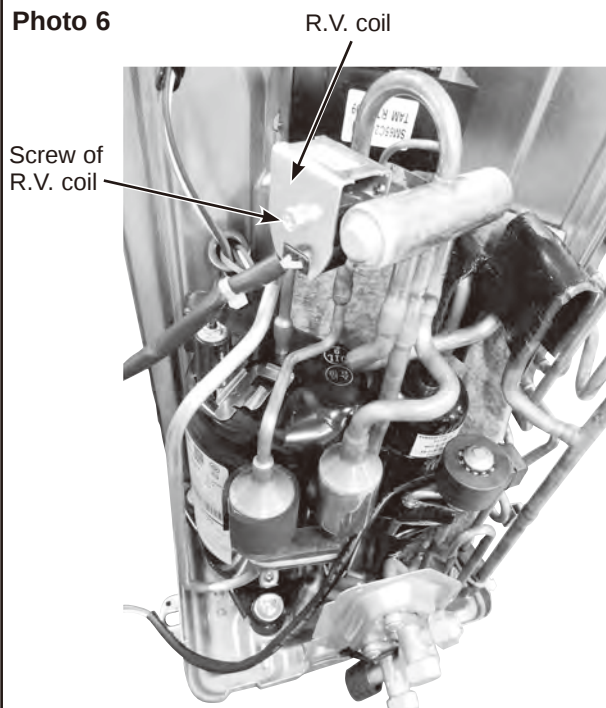

PHOTOS

Photo 4


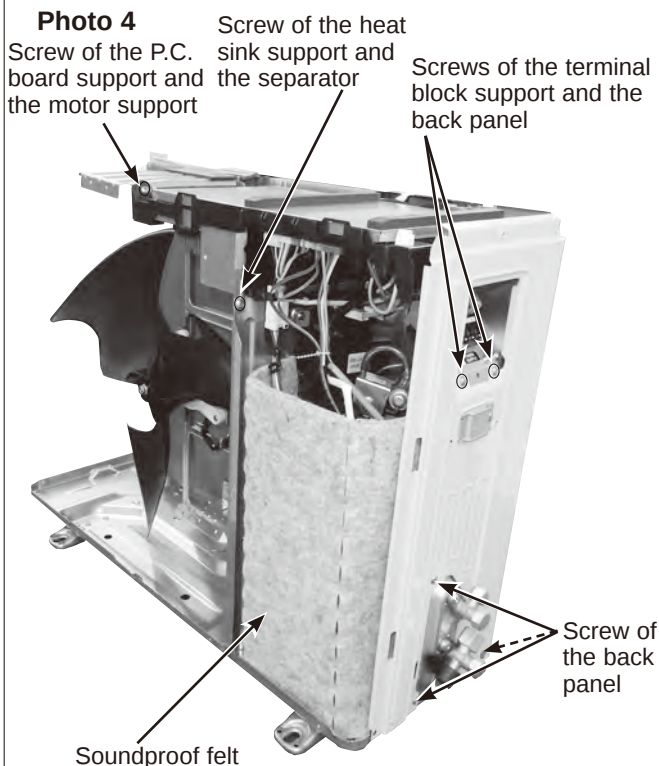


Photo 5 (Inverter assembly)

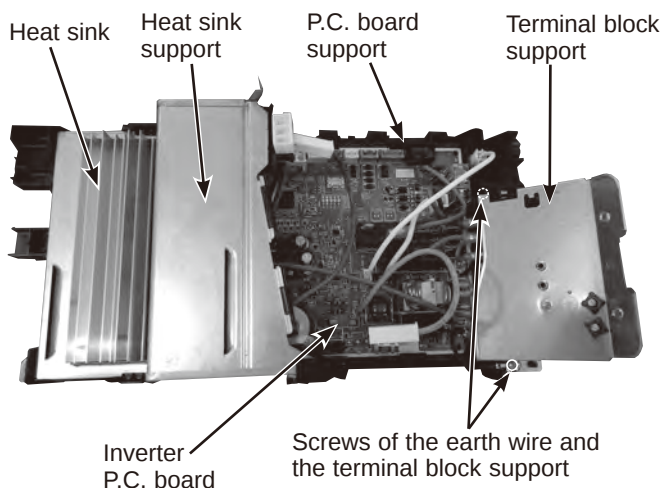

OPERATING PROCEDURE

4. Removing the discharge temperature thermistor, the defrost thermistor, the ambient temperature thermistor and the outdoor heat exchanger temperature thermistor

- (1) Remove the cabinet and the panels. (Refer to section 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
<Inverter P.C. board>
CN641 (Defrost thermistor and discharge temperature thermistor)
CN643 (Ambient temperature thermistor)
CN644 (Outdoor heat exchanger temperature thermistor)
- (3) Pull out the discharge temperature thermistor from its holder.
- (4) Pull out the defrost thermistor from its holder. (Photo 8)
- (5) Pull out the outdoor heat exchanger temperature thermistor from its holder.
- (6) Pull out the ambient temperature thermistor from its holder.

5. Removing the outdoor fan motor

- (1) Remove the cabinet and the panels. (Refer to section 1.)
- (2) Disconnect the following connectors:
<Inverter P.C. board>
CN931, CN932 (Fan motor)
- (3) Remove the fan motor lead wire from where it is fastened on the separator.
- (4) Remove the propeller fan nut.
- (5) Remove the propeller fan.
- (6) Remove the screws fixing the fan motor.
- (7) Remove the fan motor.

PHOTOS

Photo 7

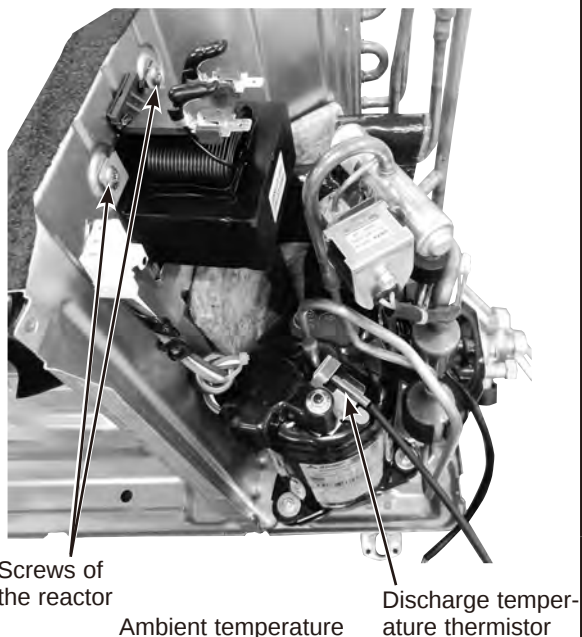


Photo 8



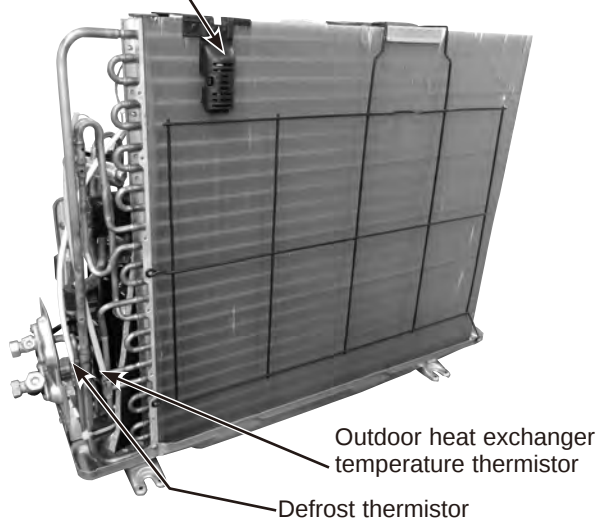


Photo 9

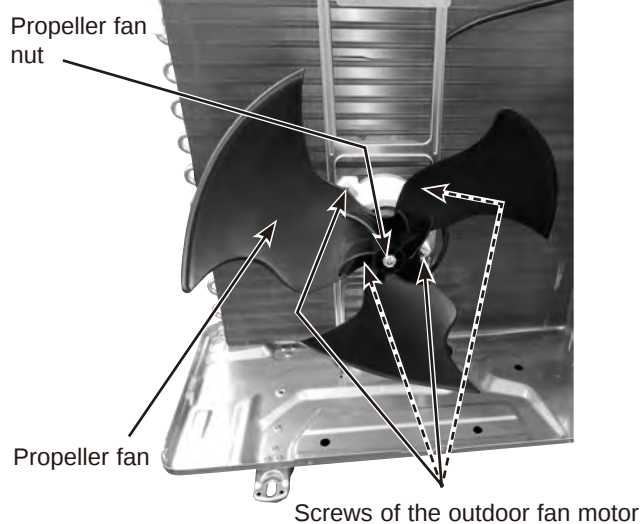

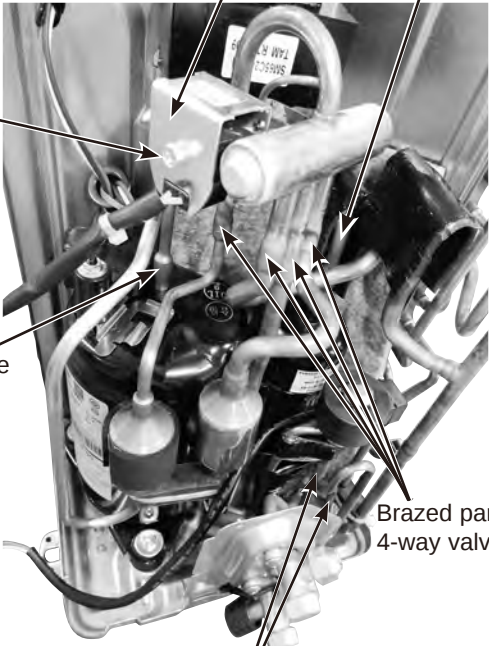

OPERATING PROCEDURE	PHOTOS
6. Removing the compressor and the 4-way valve (1) Remove the cabinet and the panels. (Refer to section 1.) (2) Remove the inverter assembly. (Refer to section 2.) (3) Remove the screws of the reactor and remove the reactor. (4) Remove the screws of the separator and remove the separator. (5) Remove the soundproof felt. (6) Remove the terminal cover and the compressor lead wire. (7) Recover gas from the refrigerant circuit. NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa). (8) Detach the brazed part of the suction and the discharge pipe connected with the compressor. (9) Detach the brazed part of pipes connected with the 4-way valve. (10) Remove the nuts of compressor legs. (11) Remove the compressor.	Photo 10  R.V. coil Suction pipe brazed part Screw of R.V. coil Discharge pipe brazed part Brazed parts of 4-way valve Brazed parts of LEV valve
7. Removing the LEV assembly (1) Detaching the brazed part of pipes connected with LEV valve.	

13-2. MUZ-BT50VG


NOTE: Turn OFF the power supply before disassembly.

OPERATING PROCEDURE

1. Removing the cabinet

- (1) Remove the screw fixing the service panel.
- (2) Pull down the service panel and remove it.
- (3) Disconnect the power supply cord and indoor/outdoor connecting wire.
- (4) Remove the screws fixing the top panel.
- (5) Remove the top panel.
- (6) Remove the screws fixing the cabinet.
- (7) Remove the cabinet.
- (8) Remove the screws fixing the back panel.
- (9) Remove the back panel.

Photo 3

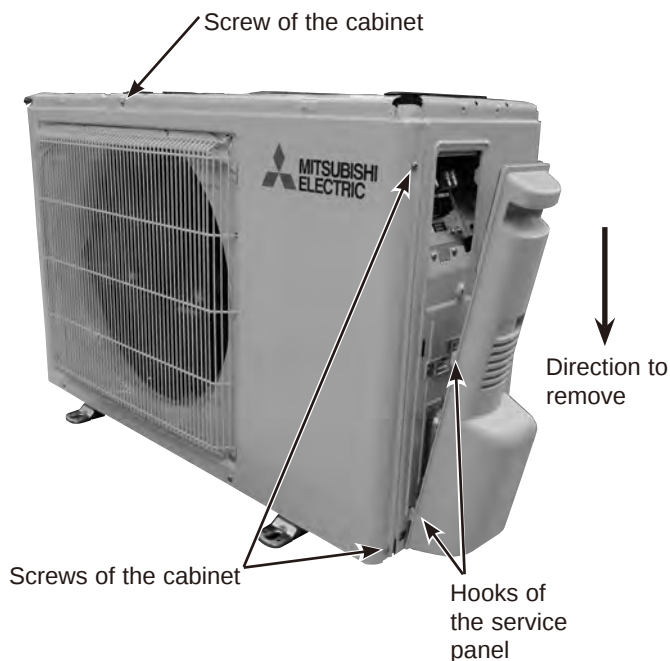

PHOTOS/FIGURES

Photo 1


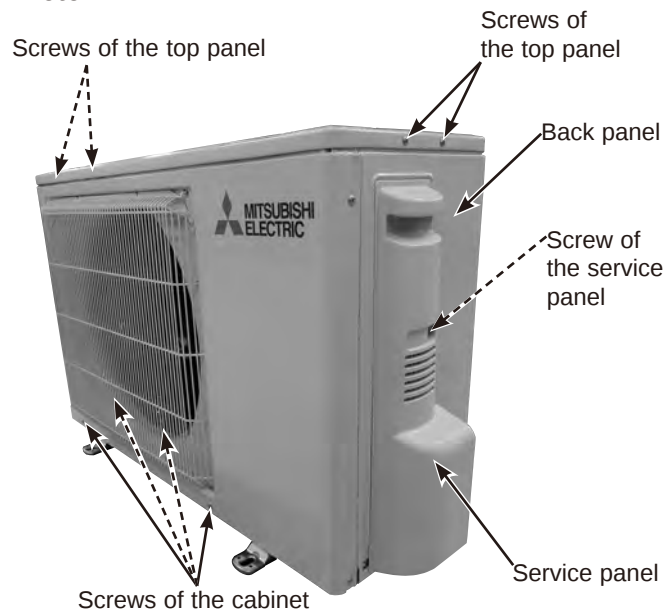


Photo 2

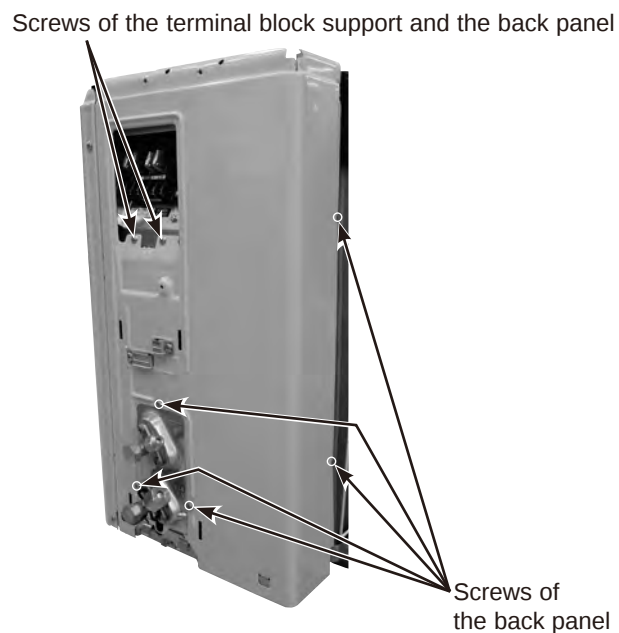

OPERATING PROCEDURE

2. Removing the inverter assembly, inverter P.C. board

- (1) Remove the cabinet and panels. (Refer to section 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
 <Inverter P.C. board>
 CN721 (R.V. coil)
 CN931, CN932 (Fan motor)
 CN641 (Defrost thermistor and discharge temperature thermistor)
 CN643 (Ambient temperature thermistor)
 CN644 (Outdoor heat exchanger temperature thermistor)
 CN724 (LEV)
- (3) Remove the compressor connector (CN61).
- (4) Remove the screws fixing the heat sink support and the separator.
- (5) Remove the fixing screws of the terminal block support and the back panel.
- (6) Remove the inverter assembly.
- (7) Remove the screw of the earth wire and screw of the terminal block support.
- (8) Remove the heat sink support from the P.C. board support.
- (9) Remove the screw of the inverter P.C. board and remove the inverter P.C. board from the P.C. board support.

3. Removing R.V. coil

- (1) Remove the cabinet and panels. (Refer to section 1.)
- (2) Disconnect the following connectors:
 <Inverter P.C. board>
 CN721 (R.V. coil)
- (3) Remove the R.V. coil.

4. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor

- (1) Remove the cabinet and panels. (Refer to section 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
 <Inverter P.C. board>
 CN641 (Defrost thermistor and discharge temperature thermistor)
 CN643 (Ambient temperature thermistor)
 CN644 (Outdoor heat exchanger temperature thermistor)
- (3) Pull out the discharge temperature thermistor from its holder.
- (4) Pull out the defrost thermistor from its holder. (Photo 7)
- (5) Pull out the outdoor heat exchanger temperature thermistor from its holder. (Photo 7)
- (6) Pull out the ambient temperature thermistor from its holder.

PHOTOS/FIGURES

Photo 4

Screws of the heat sink support and the separator Screws of the terminal block support and the back panel



Photo 5 (Inverter assembly)




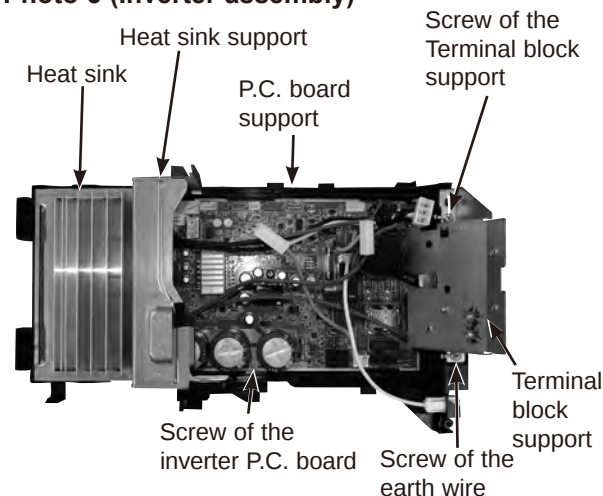


Photo 6

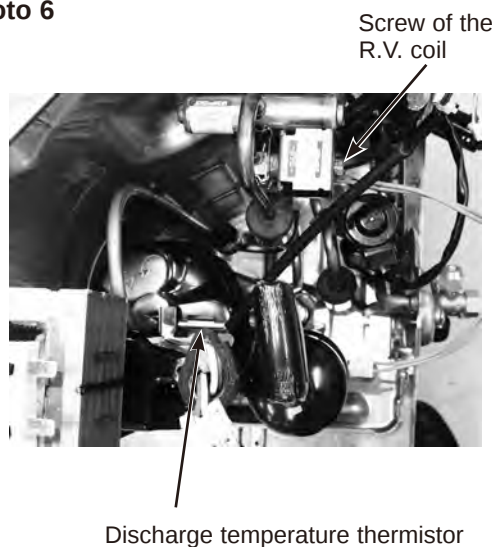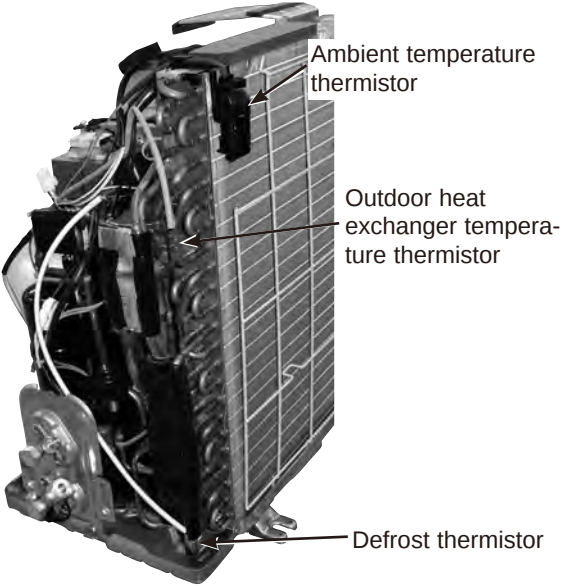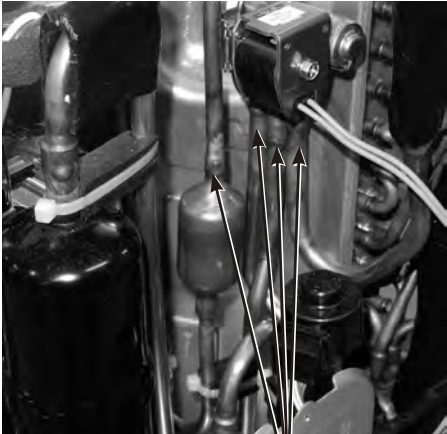

OPERATING PROCEDURE	PHOTOS/FIGURES
5. Removing outdoor fan motor (1) Remove the cabinet and panels. (Refer to section 1.) (2) Disconnect the following connectors: <Inverter P.C. board> CN931, CN932 (Fan motor) (3) Remove the propeller fan nut. (4) Remove the propeller fan. (5) Remove the screws fixing the fan motor. (6) Remove the fan motor.	Photo 7  Ambient temperature thermistor Outdoor heat exchanger temperature thermistor Defrost thermistor
6. Removing the compressor and 4-way valve (1) Remove the cabinet and panels. (Refer to section 1.) (2) Remove the inverter assembly. (Refer to section 2.) (3) Recover gas from the refrigerant circuit. NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa). (4) Detach the brazed part of the suction and the discharge pipe connected with compressor. (5) Remove the nuts of compressor legs. (6) Remove the compressor. (7) Detach the brazed part of pipes connected with 4-way valve.	Photo 8  Screws of the outdoor fan motor Propeller fan nut Propeller fan
7. Removing the LEV assembly (1) Detaching the brazed part of pipes connected with LEV valve.	Photo 9  Brazed parts of 4-way valve
Photo 10  Brazed parts of LEV valve	

mitsubishi electric corporation

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

© Copyright 2019 MITSUBISHI ELECTRIC CORPORATION

Issued: Dec. 2019. No. OBH850 REVISED EDITION-A

Published: Oct. 2019. No. OBH850

Made in Japan

Specifications are subject to change without notice.